
INSTRUCTION MANUAL

PHOENIX DX

3 TO 3500 HP
SENSORLESS VECTOR AC DRIVE



Thank You

We at US Drives would like to say thank you for purchasing our product. We believe the Phoenix AC Drive Series is the most problem free product in the market today. If you have any questions or comments please feel free to call us. On behalf of all of us here once again thank you.

Recording Drive Information

It is a good idea to record all product nameplate information for future reference. The nameplate is usually mounted on the side of the drive. The following tables should be filled in during starting or prior to starting the drive.

Drive Part Number P/N	
Drive Serial Number S/N	
Software Revision Level SRL	

Free Software

Free software for setting and storing of parameters is available to all owners of the Phoenix AC Inverter Series.

Mounting Location of the Drive

The drive should be installed in a well ventilated, moisture free area. If there are: fumes; vapors; dirt; lint; liquids or gases that can interact with the drive, then a clean air supply must be provided. The ambient temperature should not exceed the range of 14 F to 122 F (-10 C to 50 C). If the drive will be subject to vibration then the enclosure should be shock mounted.

Safety Warnings

AC drives, like all electrical equipment in industry, if not properly installed and operated can cause personal injury. Always use common sense when working around electrical equipment. Make sure you read this manual **before** any work on the drive begins. Never work on this drive if you are tired or under the influence of any drug. The drive must be grounded and installed in accordance with National Electrical Codes (NEC) and any local codes. Make sure that all power is disconnected, before working on the drive. **Always** measure the incoming voltage at the drive to make sure it is zero after disconnecting the power. Make sure all air passages are clear for proper cooling of the drive. After the drive is energized lethal voltages are present. **Wait at least 5 minutes after disconnecting power before working on the drive**, since high voltages will still be present. Call us if you have any questions.

Branch Circuit Protection

Branch circuit protection must be provided by the end user. In this manual you will find recommended fuse sizes and types for each module size.

Maintenance

If the enclosure is subject to foreign material, clean the enclosure and check any filters for build up of debris. If the inside of the enclosure needs cleaning, a low pressure vacuum cleaner is recommended. Do not use an air hose because of the possible oil vapor in the compressed air and its high pressure.

SECTION	TITLE	PAGE	SECTION	TITLE	PAGE
1.0	INTRODUCTION	1-1			
1.1	Manual Objectives	1-1	3.6.2	Drive Programming	3-5
1.1.1	Who Should Use this Manual	1-1	3.6.3	Remove Power	3-5
1.2	Safety	1-1	3.6.4	Reconnect Motor	3-5
1.2.1	General Safety Precautions	1-1	3.6.5	Check for Correct Motor Rotation	3-5
1.3	Model Ratings	1-1	3.6.6	Check for Proper Operation	3-5
1.4	Specifications And Features	1-2	3.7	Typical Control Setups	3-6
			3.7.1	Keypad Mode	3-6
			3.7.2	Keypad Start/Stop with Analog Speed Reference	3-6
			3.7.2.a	"3-Wire" or "Momentary Contact" Control with Keypad Speed Reference	3-7
2.0	INSTALLATION AND WIRING	2-1	3.7.2.b	"2-Wire" or "Maintained Contact" Control with Keypad Speed Reference	3-7
2.1	Safety Warning	2-1	3.7.3	"3-Wire" or Momentary Contact Control	3-8
2.2	Initial Checks	2-1	3.7.4	"2-Wire" or Maintained Contact	3-8
2.3	Determining Control Location	2-1	3.7.5	Hand-Auto with 2-Wire Control in Auto-Mode	3-9
2.4	Mounting	2-1	3.7.6	Hand-Auto with 3-Wire Control in Auto-Mode	3-9
2.5	AC Supply Source	2-13	3.7.7	Hand-Off-Auto #1A Control	3-10
2.5.1	Unbalanced Distribution Systems	2-13	3.7.8	Hand-Off-Auto #2A Control	3-10
2.5.2	Ungrounded Distribution Systems	2-13	3.7.9	Hand-Off-Auto #3A Control	3-11
2.5.3	Input Power Conditioning	2-13	3.7.10	Hand-Off-Auto #1B Control	3-11
2.5.4	Input Fusing	2-13	3.7.11	Hand-Off-Auto #2B Control	3-12
2.6	Input Devices	2-14	3.7.11.a	Hand-Off-Auto & Local Remote	3-12
2.7	Electrical Interference (EMI/RFI)	2-14	3.7.12	Hand-Off-Auto #3B Control	3-13
2.7.1	Drive Immunity	2-14	3.7.13	Run Forward / Run Reverse "2-Wire Control"	3-13
2.7.2	Drive Emissions	2-14	3.7.14	Run Forward / Run Reverse "3-Wire Control"	3-14
2.8	Grounding	2-14	3.7.15	Hand-Off-Auto #4A Control	3-14
2.8.1	Grounding Sensitive Circuits	2-15	3.7.16	Motorized Potentiometer with "2-Wire" Control	3-15
2.8.2	Motor Cable Grounding	2-15	3.7.17	Motorized Potentiometer with "3-Wire" Control	3-15
2.8.3	Control Logic and Signal Grounding	2-15	3.7.18	Motorized Potentiometer with Keypad Start/Stop	3-16
2.9	Power Cabling	2-17	3.7.19	Preset Speeds with "2-Wire" Control	3-16
2.9.1	Motor Cables	2-17	3.7.19.a	Preset Speeds with "2-Wire" Control and Speed Pot	3-17
2.9.1.1	Shielded Motor Cable	2-17	3.7.20	Preset Speeds with "3-Wire" Control	3-17
2.9.1.2	Conduit for Routing Motor Cables	2-17	3.7.21	Preset Speeds with Keypad Start/Stop	3-18
2.9.1.3	Motor Lead Lengths	2-17	3.7.21.a	Auto Preset Scan Timer with "3-Wire" Control	3-18
2.10	Control and Signal Wiring	2-17	3.7.21.b	Auto Preset Scan Timer with Keypad Start/Stop	3-19
2.10.1	Signal Conduit Requirements	2-18	3.7.22	Auto-Restart Typical Setup	3-20
2.10.2	Signal Wire Requirements	2-18	3.7.23	PID with "2-Wire" Control	3-20
			3.7.24	PID with "3-Wire" Control	3-21
			3.7.25	PID with Keypad Start/Stop	3-21
			3.7.26	PID Additional Notes	3-22
3.0	REAL-TIME OPERATOR MODULE	3-1	4.0	Menu and Parameter Description 4-1	
3.1	ROM Description	3-1	4.1	Menu Descriptions	4-1
3.2	Display Panel Key Descriptions	3-1	4.2	Parameter Definitions	4-16
3.3	Control Panel Key and LED Descriptions	3-1		Fault Description	4-64
3.4	List of Parameters	3-2			
3.4.1	Values and Character Strings	3-2			
3.4.2	List of Menus	3-2			
3.4.3	Quick Setup Menu List	3-2			
3.4.4	Parameter Attribute	3-3			
3.4.5	Menu Structure	3-3			
3.4.6	Types of Parameters	3-3			
3.4.7	Restore All Parameters to Default Values	3-3			
3.4.8	Security Code	3-3			
3.5	Start Up and Quick Setup	3-4			
3.6	Start up Procedure for Running Drive with ROM "Keypad"	3-4			
3.6.1	Wiring Checks – Motor Disconnected	3-4			

APPENDIX	PAGE	FIGURE	PAGE
Common Options and Interconnects	A-1	3-1	ROM Front Panel
		3-2	Control Wiring for Keypad Operation
Standard Drive with Manual Bypass Setup and Diagram (1 of 2)	A-2		
Standard Drive with Manual Bypass Setup and Diagram (2 of 2)	A-3	FIGURE	PAGE
Process Signal Board		4-1	Basic Structure of the Control System
P/N: 3000-4040 & 3000-4040-120	A-4	4-2	Menu 1– Frequency Reference, Limits, Filters
Interconnect for Option Boards 3000-4040-120 & 3000-4050-120	A-5	4-3	Menu 2 – Ramps
Isolated Communications Card 3000-4135 (1 of 3)	A-6	4-4	Menu 4 – Current Control
Isolated Communications Card 3000-4135 (2 of 3)	A-7	4-5	Menu 5 – Motor Control
Isolated Communications Card 3000-4135 (3 of 3)	A-8	4-6	Menu 6 – Operational Modes
Removable RS-232 Isolated Communications Interface with Cable P/N: 3000-4225-D9	A-9	4-7	Menu 7 – Analog Inputs and Outputs
I/O Expansion Board 3000-4150 (1 of 2)	A-10	4-8	Menu 8 – Programmable Digital Inputs and Mode Selector
I/O Expansion Board 3000-4150 (2 of 2)	A-11	4-9	Menu 9 – Programmable Digital Outputs and Bit Selectors
Power Circuit Test	B-1	4-10	Menu 10 – Status Logic and Diagnostic Information
Phoenix Power Circuit Test Table	B-2	4-11	Menu 11 – Miscellaneous
		4-12	Menu 12 - Programmable Thresholds and Variable Selectors (1 of 1)
		4-13	Menu 12 - Open Loop Brake Function (2 of 2)
		4-14	Menu 13 - Timers Function
		4-15	Menu 14 - PID Control Loop
FIGURE	PAGE		
2-1	Required Surrounding space	2-1	
2-2	Phoenix Mounting Information: Size 0	2-2	
2-2a	Phoenix Mounting Information: Size 1 (Nema Type 1)	2-3	
2-2b	Phoenix Mounting Information: Size 2 (Nema Type 1)	2-4	
2-2c	Phoenix Mounting Information: Size 3 (Nema Type 1)	2-5	
2-2d	Phoenix Mounting Information: Size 0 with Disconnect Switch and Fuses (Nema Type 1)	2-6	
2-2e	Phoenix Mounting Information: Size 1 with Disconnect Switch And Fuses (Nema Type 1)	2-7	
2-2f	Phoenix Mounting Information: Size 2 with Disconnect Switch And Fuses (Nema Type 1)	2-8	
2-2g	Phoenix Mounting Information: Size 3 with Disconnect Switch and Fuses (Nema Type 1)	2-9	
2-2h	Phoenix Mounting Information: Size 0 with Bypass (Nema Type 1)	2-10	
2-2i	Phoenix Mounting Information: Size 1 with Bypass (Nema Type 1)	2-11	
2-2j	Phoenix Mounting Information: Size 2 with Bypass (Nema Type 1)	2-12	
2-3	Recommended Power Wiring	2-16	
2-4	Terminal Block Location for Drive Control Board	2-19	
2-5	Control Logic and Signal Wiring	2-20	

1.0 INTRODUCTION

1.1 MANUAL OBJECTIVES

The purpose of this manual is to provide the user with the necessary information to install, program, start-up and maintain the PHOENIX Digital AC Drive. This manual should be read thoroughly before operating, servicing or setting up the PHOENIX Drive.

1.1.1 Who Should Use this Manual

This manual is intended for qualified service personnel responsible for setting up and servicing the PHOENIX AC Drive. You must have previous experience with and a basic understanding of electrical terminology, programming procedures, required equipment and safety precautions before attempting and service on the PHOENIX Drive.

1.2 SAFETY

1.2.1 General Safety Precautions

WARNING

Only personnel familiar with the PHOENIX Drive and the associated machinery should plan or implement the installation, start-up, and subsequent maintenance of the Drive. Failure to comply may result in personnel injury and/or equipment damage.

WARNING

An incorrectly applied or installed Drive can result in component damage or a reduction in product life. Wiring or application errors such as undersizing the motor, incorrect or inadequate AC supply or excessive ambient temperatures may result in damage to the Drive or motor.

WARNING

This Drive contains ESD (Electrostatic Discharge) sensitive parts and assemblies. Static control precautions are required when servicing or repairing this assembly. Component damage may result if ESD control procedures are not followed. If you are not familiar with static control procedures, please consult with the factory.

1.3 MODEL RATINGS

The following tables 1-1 through 1-3 show the PHOENIX model ratings for size 0 through size 4 for class 200, class 400 and class 500 units.

1.4 SPECIFICATIONS AND FEATURES

Electrical Specifications:

Rated Input Voltage:	200-250Vac, 380-500Vac, 500-600Vac -15% of minimum, +10% of maximum.
Frequency Tolerance:	45-65 Hz
Number of Phases:	3
Displacement Power Factor:	.95 or greater
Efficiency:	97% or greater at rated current
Max. Short Circuit Current Rating:	200,000A rms symmetrical, 600 volts (when used with AC input line fuses specified in tables 1-1 to 1-3).

Control Specifications:

Control Method:	Sine coded PWM with programmable carrier. Space Vector control.
Output Voltage:	0 to rated voltage.
Output Frequency Range:	0 to 600 Hz.
Frequency accuracy:	Analog reference: 0.1% of max frequency. Digital reference: 0.01% of max frequency.
Frequency resolution:	Analog reference: 0.06Hz at 60Hz. Digital reference: 0.001Hz at 60Hz.
Accel/Decel:	0.1 to 3276 sec.
Drive overload:	At Constant Torque: 150% of drive rated output for 1 minute. At Variable Torque: 120% of drive rated output for 1 minute.
Inverse Time Overload:	Programmable motor overload protection to comply with N.E.C. Article 430.
Current limit:	Proactive current limit programmable in % of motor rated current.
Braking torque:	Approximately 20%.
Maximum connected motor:	2 times rated drive horsepower.
Control power ride-thru:	2 seconds or greater, depending on load.

Environmental Specifications:

Ambient Temperature:	-10°C to 50°C (14°F to 122°F) Nema type 1 enclosed.
Storage Temperature:	-40°C to 70°C (-40°F to 158°F) Nema type 1 enclosed.
Altitude:	Sea level to 3300 Feet [1000m] without derating.
Humidity:	95% relative humidity non-condensing.
Vibration:	9.8m/sec ² (1.0G) peak.
Immunity:	IEEE C62.41-1991 Category B (Formerly known as IEEE 587) EN50082-2 (Generic Immunity Standard).
Input R.F.I. Filter:	Standard on all models.

Physical attributes:

Mounting:	Though hole or panel mount for size 0 to size 3 drives. Size 4 drives are free standing enclosure.
Nema Rating:	Type 1 (IP20) as standard, Type 12 (IP54) optional.
Construction:	Steel construction (reduces E.M.I.)

Protective Features:

- Programmable speed sensitive motor overload protection to comply with UL 508C section 43.3, 43.4 and 43.5.
- Drive overload protection to protect inverter.
- Motor stall protection at acceleration /deceleration and constant speed operation.
- Peak output current monitoring to protect against line-to-line shorts and line-to-ground shorts.
- Heatsink over-temperature monitoring.
- AC line overvoltage protection.
- DC bus over-voltage protection.
- DC bus under-voltage protection.
- Programmable stall protection.
- Control power ride-thru 2 seconds or greater, depending on load.
- Internal power supply monitoring.

- AC power loss detection.
- Critical speed rejection with programmable 3 points with bandwidth to avoid mechanical resonance.
- Flycatcher “catch a spinning motor”.
- Password protection to prevent parameter changes by unauthorized personnel.
- 4 to 20ma reference loss detection.
- Programmable thresholds and more.

Control I/O:

- 8 Digital Inputs: 7 user programmable inputs and 1 dedicated input for “Stop”, rated for 24Vdc logic control.
- 2 Digital Outputs: 2 programmable dry contacts rated 115Vac @ 5A; 30Vdc @ 3.5A.
- 2 analog inputs: -10 to +10V (10 bits) with input impedance: 75K Ω , or 4-20 mA @ 500 Ω - Programmable.
- 2 analog outputs: -10 to +10V (10 bits) @ 2 mA max; output impedance = 100 Ω . - Programmable.
- 1 voltage reference: +15Vdc reference @ 10 mA max.
- 24Vdc source: Use to power operator pushbuttons and US Drives option boards: 24Vdc @ 80 mA max.

Standard Drives Features:

- New generation IGBT.
- Nema type 1 (IP20) as standard for all models.
- 50°C ambient with standard Nema type 1 (IP20) enclosure.
- High voltage ratings: 250Vac+10% , 500Vac+10% models, and 600Vac+10% models
- Modbus RTU & Metasys N2 serial communications ready.
- Input line suppression: Metal oxide varistors for line-to-line and line-to-ground voltage surge protection.
- Built-in radio frequency filter.
- Nonvolatile parameter storage.
- All parameters are saved in EEPROM (nonvolatile).
- Autologging fault history: ten last faults recorded in order of occurrence.
- Internal control diagnostics.
- Simple programming through the Real-time Operator module (R.O.M.) with all data entries and monitoring in engineering units with English descriptions.
- Setpoint Control P.I.D.
- Injection DC Braking with braking time calculated automatically by the drive.
- Critical speed rejection.
- Programmable autorestart.
- Fixed or variable carrier (programmable).
- Programmable “Total Drive Run Time” accumulator.
- Parameter security code.
- User definable displays with programmable format and parameter scaling.
- 7 programmable digital inputs for custom setups.
- Metering: AC line voltage, motor current, motor voltage, DC Bus voltage, Kw, Kwh, running Kwh cost, and more...
- 8 programmable digital preset speeds with user selectable acceleration and deceleration rates.
- M.O.P. function.
- Programmable PWM carrier frequency, fixed or variable.
- Programmable thresholds.
- Programmable maintenance timers.
- Bi-directional auto-speed search (flycatcher) for starting into rotating loads.
- S-curve accel/decel control.
- Programmable time delay and logic functions (AND, OR, NOR) of bit parameters, digital inputs and outputs.
- Adding, subtracting, multiplying, dividing, ramping, limiting, and/or filtering functions of parameters and analog inputs and outputs.
- Parameters can be displayed, routed to an analog/digital output, or re-routed and used as an input parameter to control another function within the drive.
- User programmable functions and modes.

Option Kits:**Catalog Number:**

Isolated 4 to 20 ma Process Signal Output Card Availability: Factory Installed or Kit Form	3000-4040-120
115 Vac Operator (Digital Input) Interface Card Availability: Factory Installed or Kit Form	3000-4050
Removable USB/RS-485 Isolated Communications Interface with Cable Availability: Kit form	3000-4226-USB
Isolated Communications Card (RS-232/422/485, Modbus RTU, Metasys N2) Availability: Factory Installed or Kit Form	3000-4135
I/O Expansion Board Availability: Factory Installed or Kit Form	3000-4150
HOA Switch Availability: Factory Installed Only	P-HOA-SW
Local / Remote Switch Availability: Factory Installed Only	P-LR-SW
Auto / Manual Switch Availability: Factory Installed Only	P-AM-SW
Speed Potentiometer Availability: Factory Installed Only	P-POT
Automatic Bypass Adder For Size 0 Drive with Manual Bypass Availability: Factory Installed Only	P-ABP0
Automatic Bypass Adder For Size 1 Drive with Manual Bypass Availability: Factory Installed Only	P-ABP1
Automatic Bypass Adder For Size 2 Drive with Manual Bypass Availability: Factory Installed Only	P-ABP2
Automatic Bypass Adder For Size 3 Drive with Manual Bypass Availability: Factory Installed Only	P-ABP3
Bezel Assembly For Keypad Availability: Kit Form	P-BZL
Ribbon Cable Extender For Keypad – 6 Feet Availability: Kit Form	P-CBL-6
Remote Keypad Kit (Bezel with 10' Ribbon Cable Extender) Availability: Kit Form	P-BZL-CBL-10
Remote Keypad Kit (Bezel with 20' Ribbon Cable Extender) Availability: Kit Form	P-BZL-CBL-20
Floor Stand Kit for Nema 1 Enclosed Size 3 Drives	P-FS1
Extra Phoenix DX Instruction Manual (One Manual is provided per drive at no charge)	P-IM

Table 1-1
Class 200 Drive Models (Typical Voltage 208/230/240 VAC)

200-250VAC (-10% to +10%)												
Frame Designation	NEMA 1 (IP20) Catalog Number	Motor HP ¹		Continuous ² Output Current (Amps)		Output KVA ³		Input Current (Amps)		Input KVA ³		Maximum Recommended AC Line Fuses ⁴ (Amps)
		CT	VT	CT	VT	CT	VT	CT	VT	CT	VT	
SIZE 0	D2-0005-N1	3	5	10	16	4	7	12	19	5	8	35
	D2-0007.5-N1	5	7.5	16	22	7	9	19	25	8	10	40
	D2-0010-N1	7.5	10	22	28	9	12	25	33	10	14	50
	D2-0015-N1	10	15	28	42	12	17	25	36	10	15	60
	D2-0020-N1	15	20	42	54	17	22	36	50	15	21	70
	D2-0020CT-N1	20	-	54	-	22	-	50	-	21	-	70
SIZE 1	D2-0025-N1	20	25	54	68	22	28	50	61	21	25	90
	D2-0030-N1	25	30	68	85	28	35	61	79	25	33	100
	D2-0030CT-N1	30	-	80	-	33	-	74	-	31	-	100
SIZE 2	D2-0040-N1	30	40	80	104	33	43	74	96	31	40	150
	D2-0050-N1	40	50	104	130	43	54	96	120	40	50	200
	D2-0060-N1	50	60	130	163	54	68	120	155	50	64	250
	D2-0075-N1	60	75	154	192	60	80	140	186	58	77	300
	D2-0100-N1	75	100	192	248	80	103	186	230	77	96	300
	D2-0100CT-N1	100	-	248	-	103	-	230	-	96	-	300
SIZE 3	D2-0125VT-N1	-	125	-	312	-	130	-	290	-	121	400
	D2-0125CT-N1	125	-	312	-	130	-	290	-	121	-	400
	D2-0150VT-N1	-	150	-	360	-	150	-	335	-	139	500
	D2-0150CT-N1	150	-	360	-	150	-	335	-	139	-	500
	D2-0200VT-N1	-	200	-	480	-	200	-	446	-	186	600
	D2-0200CT-N1	200	-	480	-	200	-	446	-	186	-	600
	D2-0250VT-N1	-	250	-	602	-	250	-	560	-	233	800
	D2-0250CT-N1	250	-	602	-	250	-	560	-	233	-	800

¹ Horsepower based on 220-240 Vac Motors.

² Constant Torque (CT) overload rating is 150%; Variable Torque (VT) overload rating is 120%.

³ Output and Input KVA at nominal 240Vac

⁴ UL Class T, J, and Semiconductor Fuses (preferred): Gould Shawmut A50Q, Bussmann FWH.

⁵ Built-in as standard

Table 1-2
Class 400 Drive Models (Typical Voltage 380/415/480 VAC)

380-500VAC (-10% to +10%)												
Frame Designation	NEMA 1 (IP20) Catalog Number	Motor HP ¹		Continuous ² Output Current (Amps)		Output KVA ³		Input Current (Amps)		Input KVA ³		Maximum Recommended AC Line Fuses ⁴ (Amps)
		CT	VT	CT	VT	CT	VT	CT	VT	CT	VT	
SIZE 0	D4-0007.5-N1	5	7.5	8	11	7	9	10	13	8	11	25
	D4-0010-N1	7.5	10	11	14	9	12	13	17	11	14	30
	D4-0015-N1	10	15	14	21	12	17	17	25	14	21	40
	D4-0020-N1	15	20	21	27	17	22	25	33	21	27	50
	D4-0025-N1	20	25	27	34	22	28	26	31	22	26	50
	D4-0030-N1	25	30	34	43	28	36	31	38	26	32	60
	D4-0040-N1	30	40	40	52	33	43	36	48	30	40	70
	D4-0040CT-N1	40	-	52	-	43	-	48	-	40	-	70
SIZE 1	D4-0050-N1	40	50	52	66	43	55	48	56	40	47	90
	D4-0060-N1	50	60	65	82	54	68	56	72	47	60	100
	D4-0060CT-N1	60	-	77	-	64	-	67	-	56	-	100
SIZE 2	D4-0075-N1	60	75	77	97	64	81	67	83	56	69	125
	D4-0100-N1	75	100	96	124	80	103	86	110	71	91	175
	D4-0125-N1	100	125	124	156	103	130	110	139	91	116	200
	D4-0150-N1	125	150	156	180	130	150	139	163	116	136	250
	D4-0200-N1	150	200	180	240	150	200	167	223	139	186	350
	D4-0200CT-N1	200	-	240	-	200	-	223	-	186	-	350
SIZE 3	D4-0250VT-N1	-	250	-	302	-	251	-	281	-	234	400
	D4-0250CT-N1	250	-	302	-	251	-	281	-	234	-	400
	D4-0300VT-N1	-	300	-	361	-	300	-	336	-	279	500
	D4-0300CT-N1	300	-	361	-	300	-	336	-	279	-	500
	D4-0350VT-N1	-	350	-	414	-	344	-	385	-	320	600
	D4-0350CT-N1	350	-	414	-	344	-	385	-	320	-	600
	D4-0400VT-N1	-	400	-	477	-	397	-	444	-	369	700
	D4-0400CT-N1	400	-	477	-	397	-	444	-	369	-	700
	D4-0450VT-N1	-	450	-	540	-	449	-	503	-	418	800
	D4-0450CT-N1	450	-	540	-	449	-	503	-	418	-	800
	D4-0500VT-N1	-	500	-	600	-	499	-	558	-	464	800
D4-0500CT-N1	500	-	600	-	499	-	558	-	464	-	800	
SIZE 4	D4-0600VT-N1	-	600	-	720	-	599	-	670	-	557	5
	D4-0600CT-N1	600	-	720	-	599	-	670	-	557	-	5
	D4-0700VT-N1	-	700	-	840	-	698	-	781	-	649	5
	D4-0700CT-N1	700	-	840	-	698	-	781	-	649	-	5
	D4-0800VT-N1	-	800	-	960	-	798	-	893	-	742	5
	D4-0800CT-N1	800	-	960	-	798	-	893	-	742	-	5
	D4-0900VT-N1	-	900	-	1080	-	898	-	1004	-	835	5
	D4-0900CT-N1	900	-	1080	-	898	-	1004	-	835	-	5
	D4-1000VT-N1	-	1000	-	1200	-	998	-	1116	-	928	5
	D4-1000CT-N1	1000	-	1200	-	998	-	1116	-	928	-	5
	D4-1250VT-N1	-	1250	-	1500	-	1247	-	1395	-	1160	5
	D4-1250CT-N1	1250	-	1500	-	1247	-	1395	-	1160	-	5
	D4-1500VT-N1	-	1500	-	1800	-	1496	-	1674	-	1392	5
	D4-1500CT-N1	1500	-	1800	-	1496	-	1674	-	1392	-	5
	D4-1750VT-N1	-	1750	-	2100	-	1746	-	1953	-	1624	5
	D4-1750CT-N1	1750	-	2100	-	1746	-	1953	-	1624	-	5
	D4-2000VT-N1	-	2000	-	2400	-	1995	-	2232	-	1856	5
D4-2000CT-N1	2000	-	2400	-	1995	-	2232	-	1856	-	5	
D4-2500VT-N1	-	2500	-	3000	-	2494	-	2790	-	2320	5	
D4-2500CT-N1	2500	-	3000	-	2494	-	2790	-	2320	-	5	

THIS VOLTAGE SERIES HAS A MAXIMUM HP RATING OF 3,000HP.

¹ Horsepower based on 440-480 Vac Motors.

² Constant Torque (CT) overload rating is 150%; Variable Torque (VT) overload rating is 120%.

³ Output and Input KVA at nominal voltage 480Vac

⁴ UL Class T, J, and Semiconductor Fuses (preferred): Gould Shawmut A50Q, Bussmann FWH.

⁵ Built-in as standard

Table 1-3

Class 500 Drive Models (Typical Voltage 525/575/600 VAC)

500-600VAC (-10% to +10%)													
Frame Designation	NEMA 1 (IP20) Catalog Number	Motor HP ¹		Continuous ² Output Current (Amps)		Output KVA ³		Input Current (Amps)		Input KVA ³		Maximum Recommended AC Line Fuses ⁴ (Amps)	
		CT	VT	CT	VT	CT	VT	CT	VT	CT	VT		
SIZE 0	D5-0007.5-N1	5	7.5	7	9	7	9	9	11	9	11	20	
	D5-0010-N1	7.5	10	9	12	9	12	11	13	11	13	25	
	D5-0015-N1	10	15	11	17	11	17	13	20	13	20	35	
	D5-0020-N1	15	20	17	22	17	22	20	25	20	25	40	
	D5-0025-N1	20	25	22	28	22	28	22	28	22	28	40	
	D5-0030-N1	25	30	27	34	27	34	27	34	27	34	50	
	D5-0040-N1	30	40	32	41	32	41	32	40	32	40	60	
D5-0040CT-N1	40	-	41	-	41	-	40	-	40	-	60		
SIZE 1	D5-0050-N1	40	50	41	52	41	52	40	48	40	48	80	
	D5-0060-N1	50	60	52	65	52	65	54	61	54	61	90	
	D5-0075-N1	60	75	62	78	62	78	58	72	58	72	100	
D5-0075CT-N1	75	-	77	-	77	-	75	-	75	-	150		
SIZE 2	D5-0100-N1	75	100	77	99	77	99	75	96	75	96	150	
	D5-0125-N1	100	125	99	125	99	124	96	124	96	123	175	
	D5-0150-N1	125	150	125	157	124	156	124	154	123	153	200	
	D5-0200-N1	150	200	144	192	143	191	142	191	141	190	300	
	D5-0200CT-N1	200	-	192	-	191	-	191	-	190	-	300	
SIZE 3	D5-0250VT-N1	-	250	-	242	-	241	-	240	-	239	350	
	D5-0250CT-N1	250	-	242	-	241	-	240	-	239	-	350	
	D5-0300VT-N1	-	300	-	289	-	288	-	286	-	285	400	
	D5-0300CT-N1	300	-	289	-	288	-	286	-	285	-	400	
	D5-0350VT-N1	-	350	-	336	-	335	-	333	-	331	500	
	D5-0350CT-N1	350	-	336	-	335	-	333	-	331	-	500	
	D5-0400VT-N1	-	400	-	382	-	380	-	378	-	377	600	
	D5-0400CT-N1	400	-	382	-	380	-	378	-	377	-	600	
	D5-0450VT-N1	-	450	-	432	-	430	-	428	-	426	700	
	D5-0450CT-N1	450	-	432	-	430	-	428	-	426	-	700	
	D5-0500VT-N1	-	500	-	472	-	470	-	467	-	465	700	
	D5-0500CT-N1	500	-	472	-	470	-	467	-	465	-	700	
	D5-0600VT-N1	-	600	-	576	-	574	-	570	-	568	800	
	D5-0600CT-N1	600	-	576	-	574	-	570	-	568	-	800	
	SIZE 4	D5-0700VT-N1	-	700	-	672	-	669	-	665	-	663	5
		D5-0700CT-N1	700	-	672	-	669	-	665	-	663	-	5
D5-0800VT-N1		-	800	-	768	-	765	-	760	-	757	5	
D5-0800CT-N1		800	-	768	-	765	-	760	-	757	-	5	
D5-0900VT-N1		-	900	-	864	-	860	-	855	-	852	5	
D5-0900CT-N1		900	-	864	-	860	-	855	-	852	-	5	
D5-1000VT-N1		-	1000	-	960	-	956	-	950	-	947	5	
D5-1000CT-N1		1000	-	960	-	956	-	950	-	947	-	5	
D5-1250VT-N1		-	1250	-	1200	-	1195	-	1188	-	1183	5	
D5-1250CT-N1		1250	-	1200	-	1195	-	1188	-	1183	-	5	
D5-1500VT-N1		-	1500	-	1440	-	1434	-	1426	-	1420	5	
D5-1500CT-N1		1500	-	1440	-	1434	-	1426	-	1420	-	5	
D5-1750VT-N1		-	1750	-	1680	-	1673	-	1663	-	1656	5	
D5-1750CT-N1		1750	-	1680	-	1673	-	1663	-	1656	-	5	
D5-2000VT-N1		-	2000	-	1920	-	1912	-	1901	-	1893	5	
D5-2000CT-N1		2000	-	1920	-	1912	-	1901	-	1893	-	5	
D5-2500VT-N1		-	2500	-	2400	-	2390	-	2376	-	2366	5	
D5-2500CT-N1	2500	-	2400	-	2390	-	2376	-	2366	-	5		

THIS VOLTAGE SERIES HAS A MAXIMUM HP RATING OF 3,500HP.¹ Horsepower based on 550-600 Vac Motors.² Constant Torque (CT) overload rating is 150%; Variable Torque (VT) overload rating is 120%.³ Output and Input KVA at nominal voltage 575Vac.⁴ UL Class T, CC, J, and Semiconductor Fuses (preferred): Gould Shawmut A70Q, Bussmann FWP.⁵ Built-in as standard

END INTRODUCTION SECTION

2.0 INSTALLATION AND WIRING

Section 2.0 provides the information needed to properly mount and wire the PHOENIX Drive. Since most start-up difficulties are the result of incorrect wiring, it is essential that the wiring is done as instructed. Read and understand this section in its entirety before actual installation begins.

2.1 SAFETY WARNINGS

WARNING
 Only qualified electrical personnel familiar with the construction and operation of this equipment and the hazards involved should install, adjust, operate or service this equipment.

WARNING
 The control and its associated motors and operator control devices must be installed and grounded in accordance with all national and local codes (NEC, VDE 0160, BSI, etc.). To reduce the potential for electric shock, disconnect all power sources before initiating any maintenance or repairs. Keep fingers and foreign objects away from ventilation and other openings. Keep air passages clear. Potentially lethal voltages exist within the drive enclosure and connections. Use extreme caution during installation and start-up.

WARNING
 The following information is only a guide for proper installation. US Drives cannot assume responsibility for the compliance or noncompliance to any code, national, local or otherwise for the proper installation of this drive or associated equipment. A hazard of personal injury and/or equipment damage exists if codes are ignored during the installation.

2.2 INITIAL CHECKS

Before installing the PHOENIX Drive, check the unit for physical damage sustained during shipment. If damaged, file a claim with the shipper and return for repair following the procedures outlined on the back cover. If no damage is observed, remove all shipping restraints and padding. Check drive nameplate data for conformance with the AC power source and motor.

2.3 DETERMINING CONTROL LOCATION

The PHOENIX Drive is suitable for most well-ventilated factory areas where industrial equipment is installed. Locations subject to steam vapors or excessive moisture, oil vapors, flammable or combustible vapors, chemical fumes, corrosive gases or liquids, or excessive dirt, dust or lint should be avoided unless an appropriate enclosure has been supplied or a source of clean air is supplied to the enclosure. The location should be dry and the ambient temperature should not exceed 122°F (50°C). If the mounting location is subject to vibration, the unit should be shock mounted.

2.4 MOUNTING

Figure 2-1 shows the minimum required surrounding air space for panel mounted PHOENIX Drives (size 0 through size 3 units). Note that the panel mounted units must be mounted in an upright position. Figure 2-2a shows dimensional information for size 1 through size 2 units. Figure 2-2 shows dimensional information for size 0. Figure 2-2b shows dimensional information for size 3. If through panel mounting is chosen (available on size 0 through size 3 Drives), a suitable sealant should be applied to the mounting faces of the drive and the panel to prevent leakage.


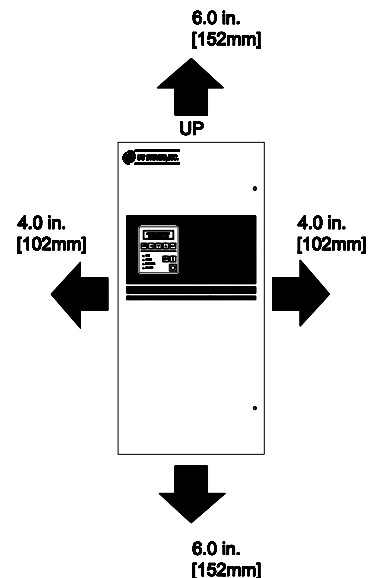


Figure 2-1


Minimum Required Surrounding Air Space for size 0 through size 3 PHOENIX Drives

2-2 INSTALLATION AND WIRING

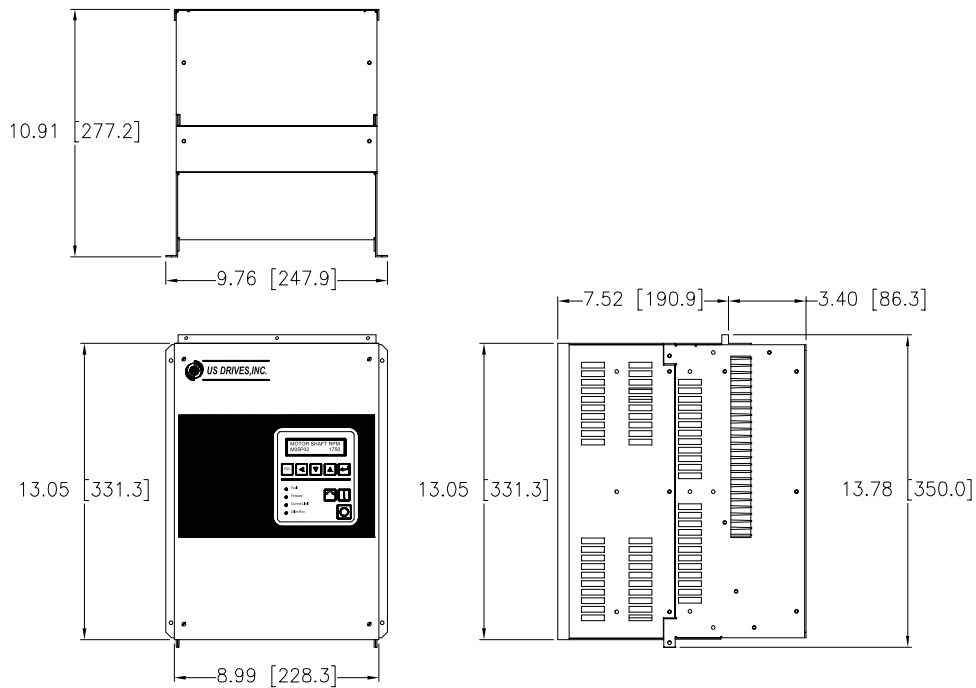

PANEL MOUNTING

THROUGH-PANEL MOUNTING

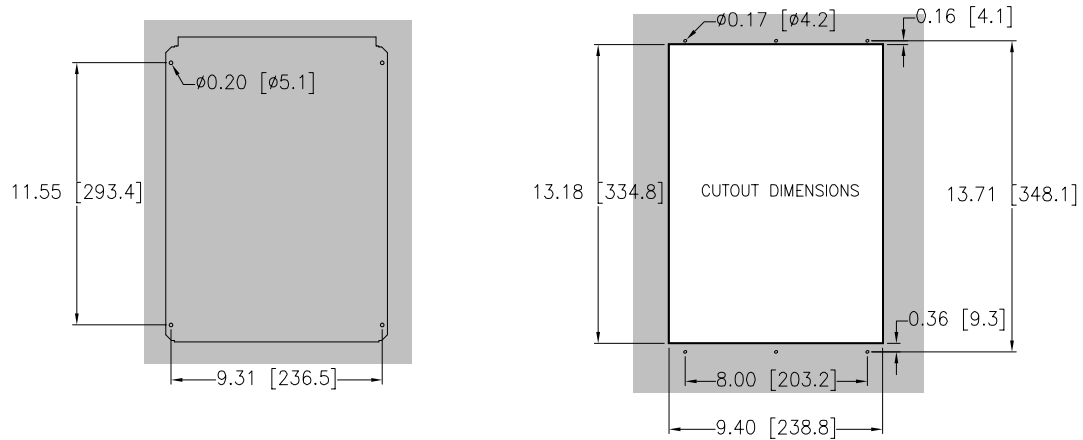


Approximate Weight: 30 Lbs. [14 Kgs]

Notes:

- Top and bottom endplates are removable to gain access inside the drive and to punch holes for conduits.
- End plates must be removed from the drive before drilling and punching holes to avoid metal dust inside the drive enclosure. Failure to do so will cause damage to the drive.
- For through-panel mounting, customer is to seal gap on both sides of cutout. Provided by customer, aluminum angle 1" x 1" x 0.050" can be used to attach to left and right sides of the drive to help seal and secure the drive.

**Figure 2-2
PHOENIX Mounting Information
Size 0 (Nema Type 1)**

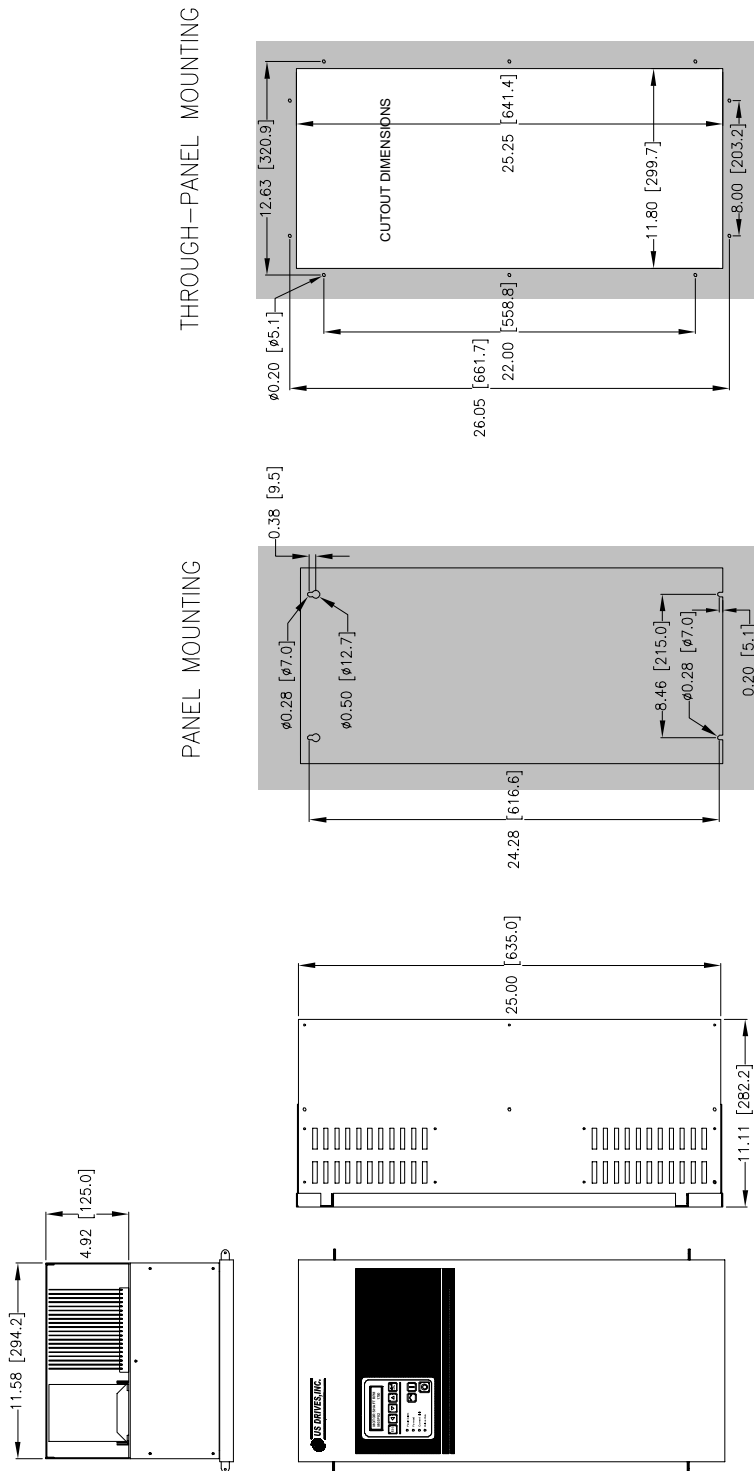


Approximate Weight: 75 Lbs. [34 Kgs]

Notes:

- Top and bottom endplates are removable to gain access inside the drive and to punch holes for conduits.
- End plates must be removed from the drive before drilling and punching holes to avoid metal dust inside the drive enclosure. Failure to do so will cause damage to the drive.
- For through-panel mounting, customer is to seal gap on both sides of cutout. Provided by customer, aluminum angle 1" x 1" x 0.050" can be used to attach to left and right sides of the drive to help seal and secure the drive.

Figure 2-2a
PHOENIX Mounting Information
Size 1 (Nema Type 1)

2-4 INSTALLATION AND WIRING

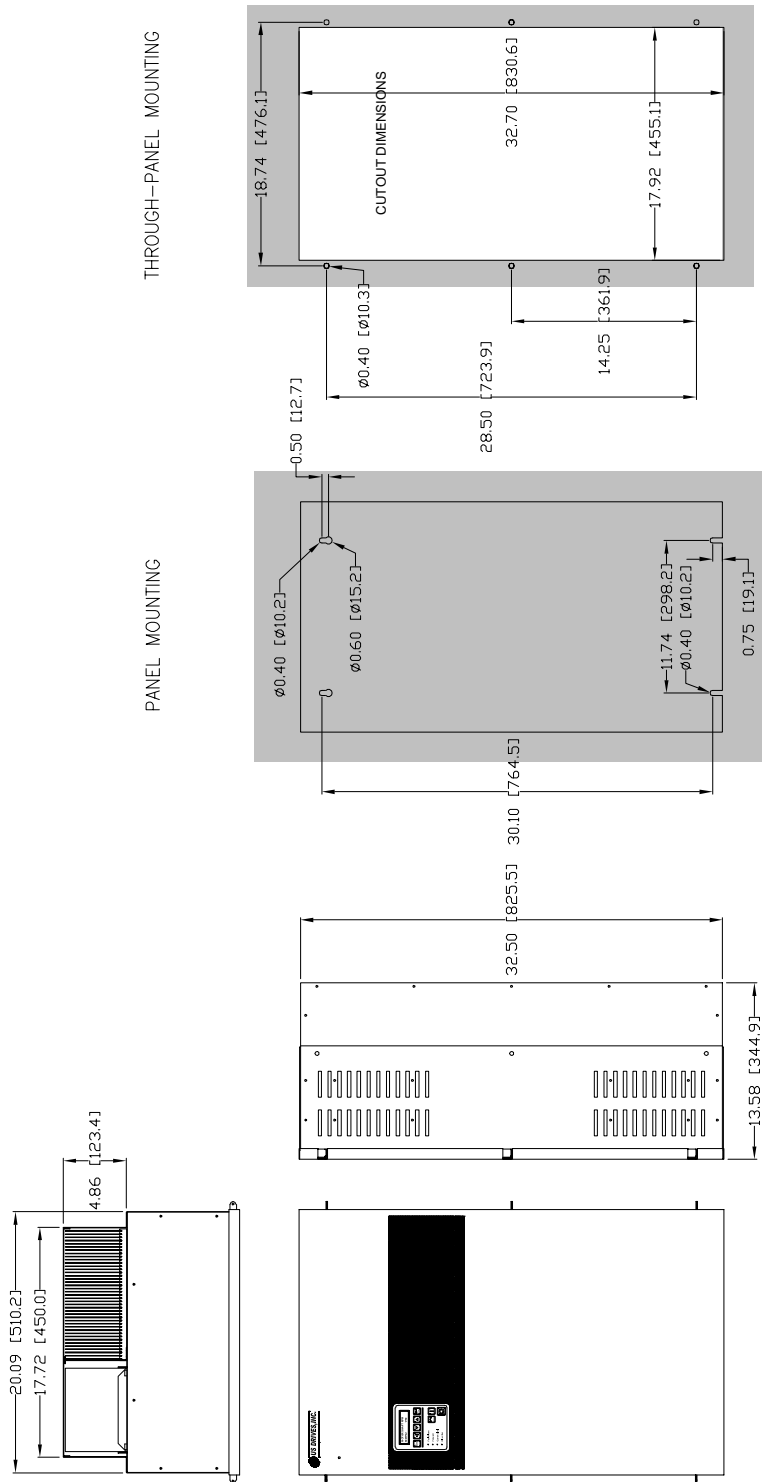


Approximate Weight: 180 Lbs. [82 Kgs]

Notes:

- Top and bottom endplates are removable to gain access inside the drive and to punch holes for conduits.
- End plates must be removed from the drive before drilling and punching holes to avoid metal dust inside the drive enclosure. Failure to do so will cause damage to the drive.
- For through-panel mounting, customer is to seal gap on both sides of cutout. Provided by customer, aluminum angle 1" x 1" x 0.050" can be used to attach to left and right sides of the drive to help seal and secure the drive.

Figure 2-2b
PHOENIX Mounting Information
Size 2 (Nema Type 1)

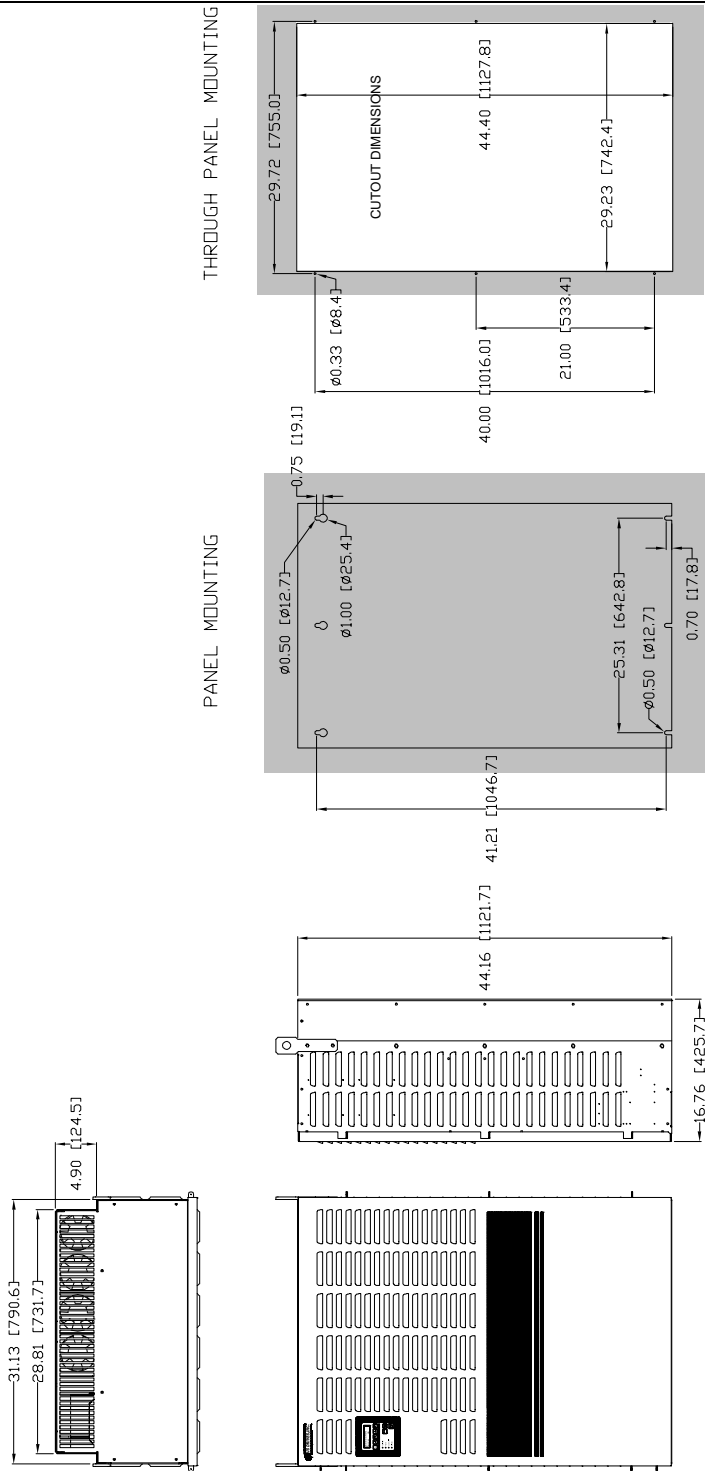


Approximate Weight: 500 Lbs. [227 Kgs]

Notes:

- Top and bottom endplates are removable to gain access inside the drive and to punch holes for conduits.
- End plates must be removed from the drive before drilling and punching holes to avoid metal dust inside the drive enclosure. Failure to do so will cause damage to the drive.
- For through-panel mounting, customer is to seal gap on both sides of cutout. Provided by customer, aluminum angle 1" x 1" x 0.050" can be used to attach to left and right sides of the drive to help seal and secure the drive.
- Size 3 enclosures can also be free-standing with optional floor stand kit from US Drives, Inc.
- All Size 4 drives are free-standing enclosures. Consult factory for dimensions.

Figure 2-2c
PHOENIX Mounting Information
Size 3 (Nema Type 1)

2-6 INSTALLATION AND WIRING

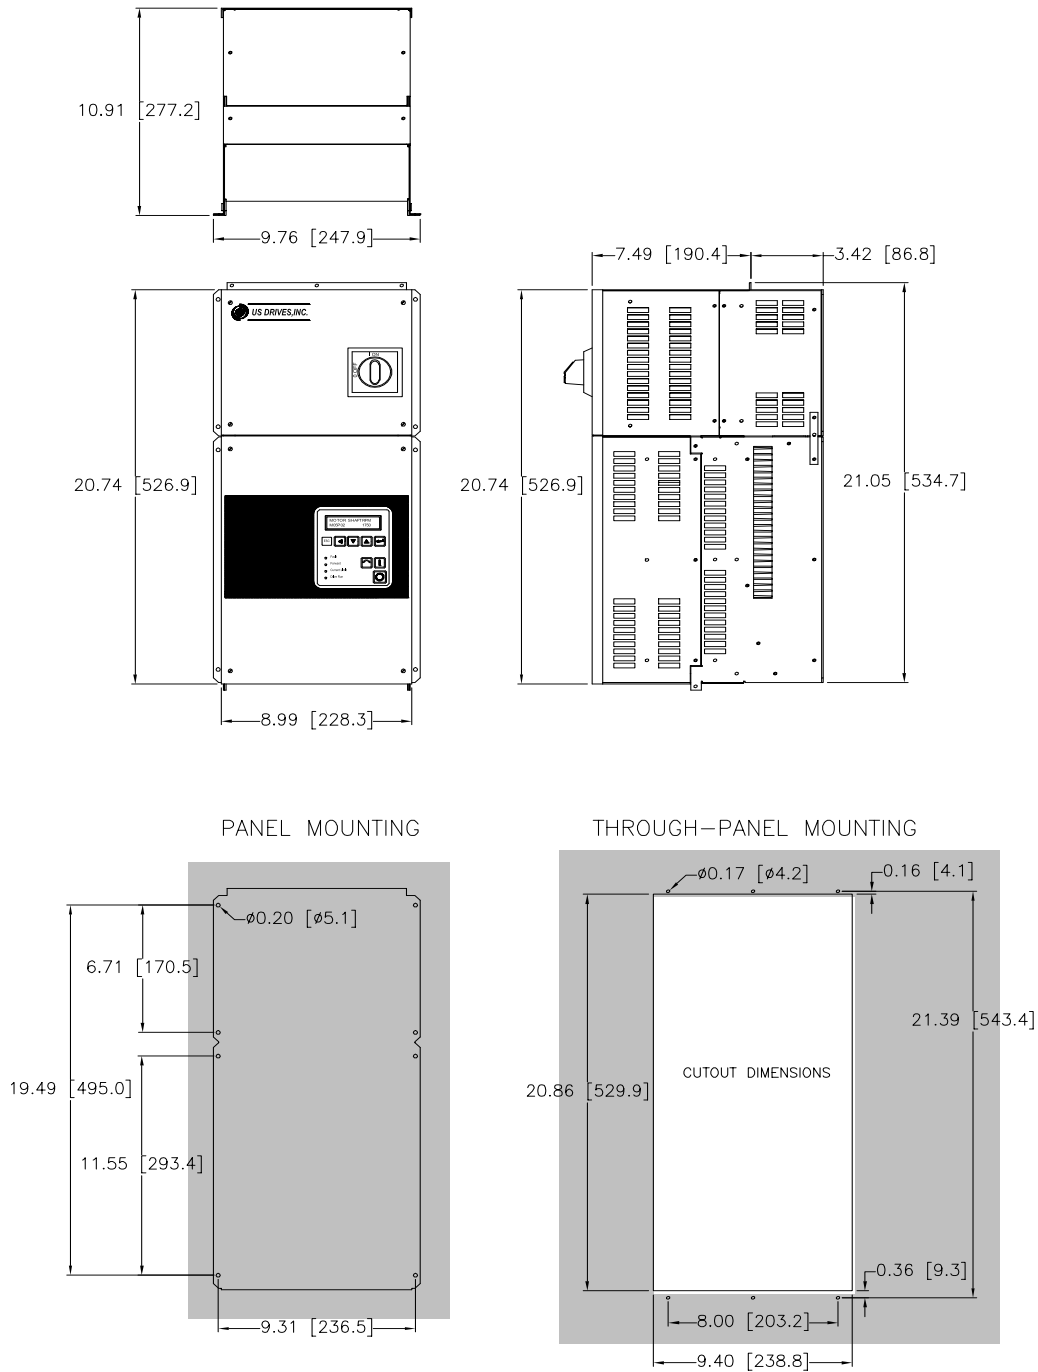


Approximate Weight: 46 Lbs. [21 Kgs]

Notes:

- Top and bottom endplates are removable to gain access inside the drive and to punch holes for conduits.
- End plates must be removed from the drive before drilling and punching holes to avoid metal dust inside the drive enclosure. Failure to do so will cause damage to the drive.
- For through-panel mounting, customer is to seal gap on both sides of cutout. Provided by customer, aluminum angle 1" x 1" x 0.050" can be used to attach to left and right sides of the drive to help seal and secure the drive.

Figure 2-2d
PHOENIX Mounting Information
Size 0 with Disconnect Switch and Fuses (Nema Type 1)

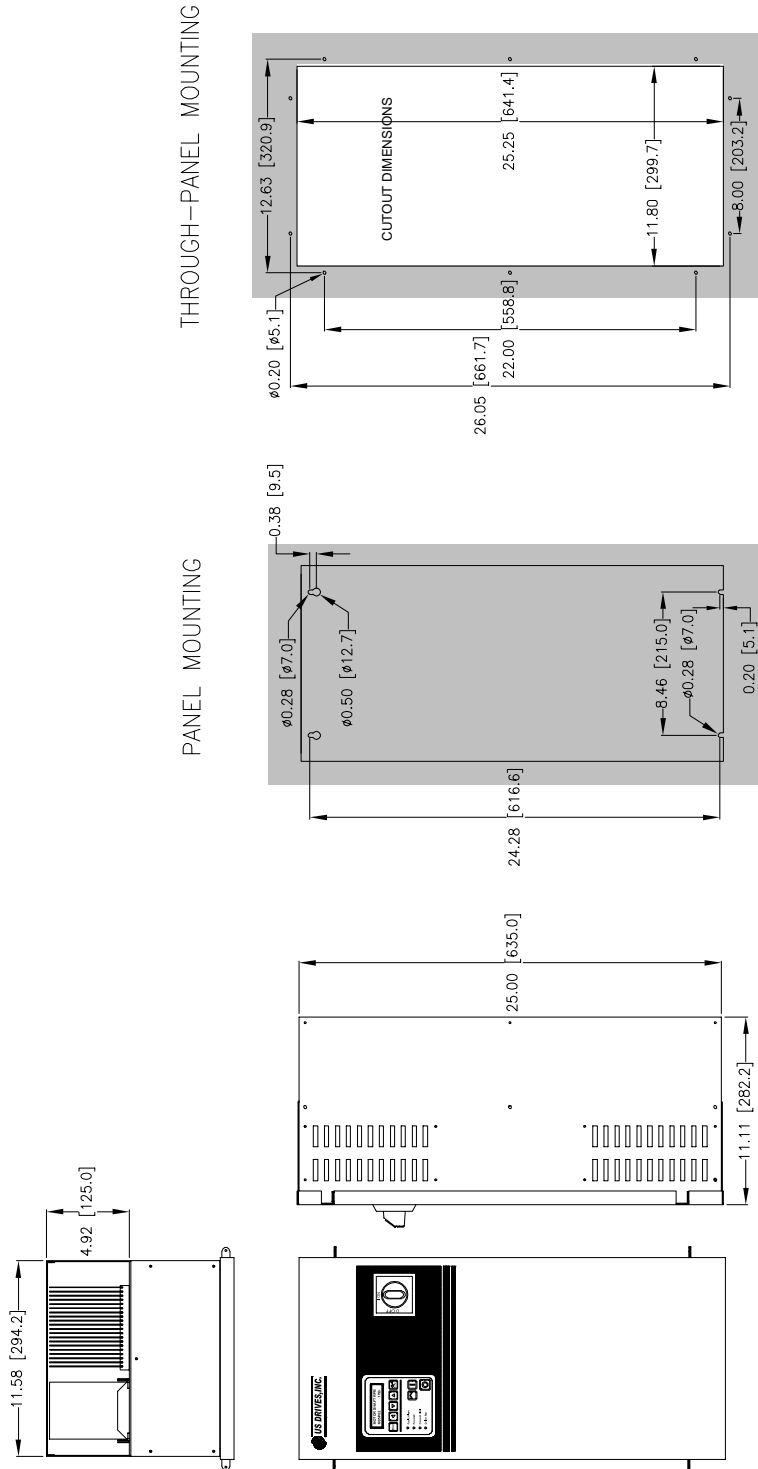


Approximate Weight: 85 Lbs. [39 Kgs]

Notes:

- Top and bottom endplates are removable to gain access inside the drive and to punch holes for conduits.
- End plates must be removed from the drive before drilling and punching holes to avoid metal dust inside the drive enclosure. Failure to do so will cause damage to the drive.
- For through-panel mounting, customer is to seal gap on both sides of cutout. Provided by customer, aluminum angle 1" x 1" x 0.050" can be used to attach to left and right sides of the drive to help seal and secure the drive.

Figure 2-2e
PHOENIX Mounting Information
Size 1 with Disconnect Switch and Fuses (Nema Type 1)

2-8 INSTALLATION AND WIRING

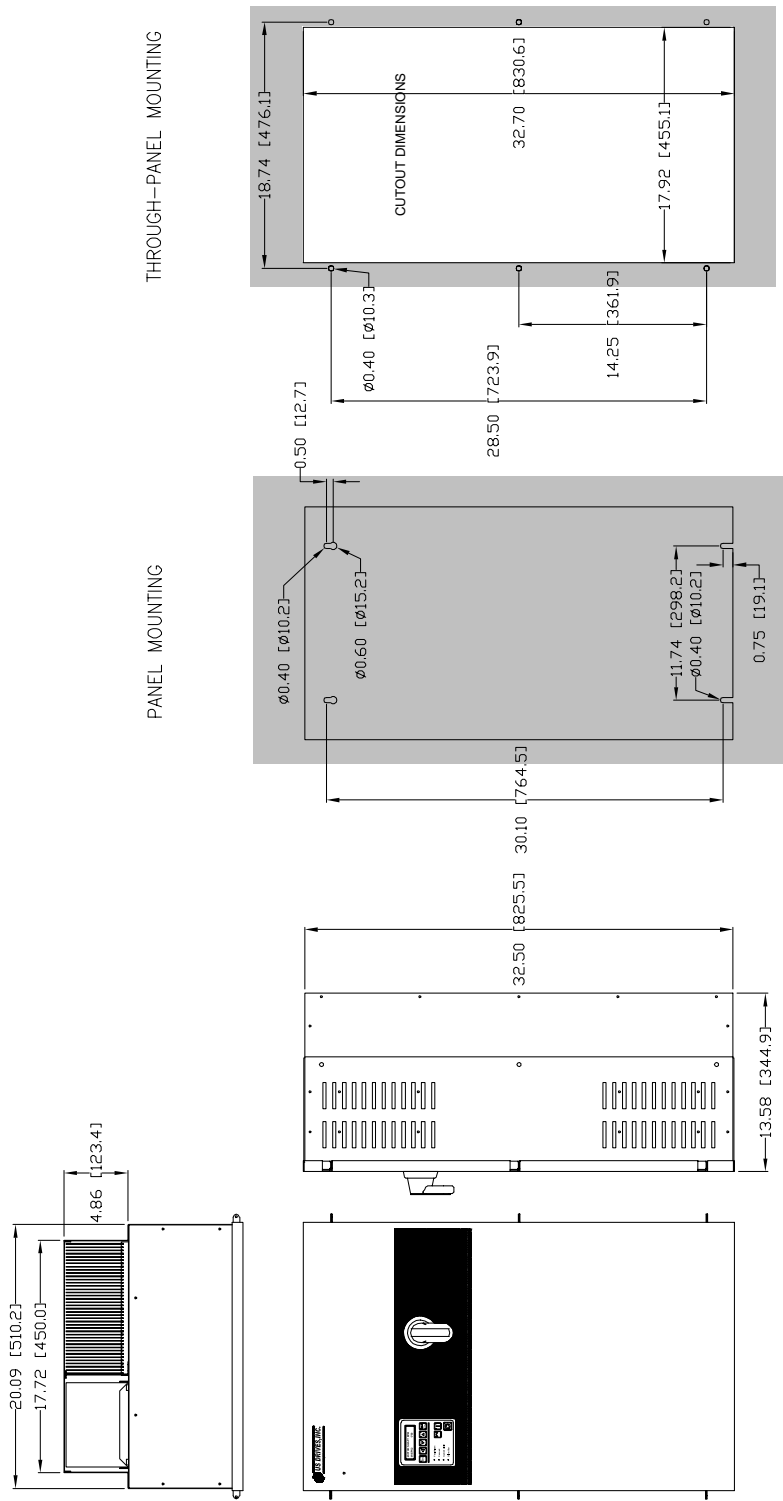


Approximate Weight: 190 Lbs. [86 Kgs]

Notes:

- Top and bottom endplates are removable to gain access inside the drive and to punch holes for conduits.
- End plates must be removed from the drive before drilling and punching holes to avoid metal dust inside the drive enclosure. Failure to do so will cause damage to the drive.
- For through-panel mounting, customer is to seal gap on both sides of cutout. Provided by customer, aluminum angle 1" x 1" x 0.050" can be used to attach to left and right sides of the drive to help seal and secure the drive.

Figure 2-2f
PHOENIX Mounting Information
Size 2 with Disconnect Switch and Fuses (Nema Type 1)

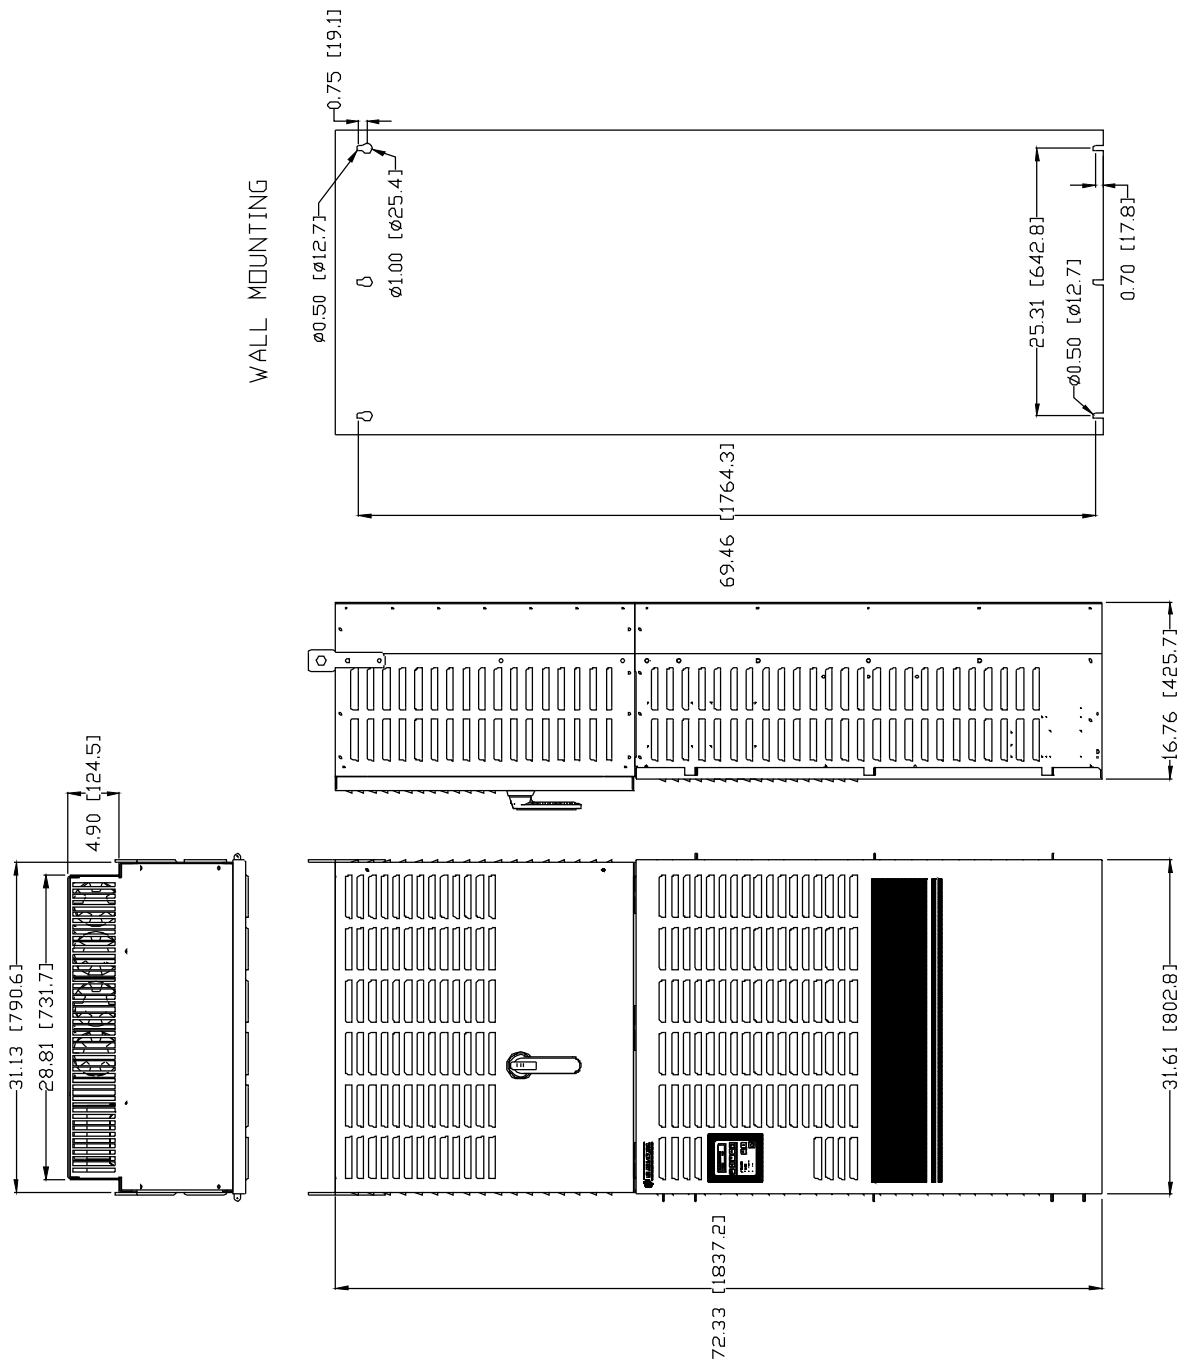


Approximate Weight: 700 Lbs. [318 Kgs]

Notes:

- Top and bottom endplates are removable to gain access inside the drive and to punch holes for conduits.
- End plates must be removed from the drive before drilling and punching holes to avoid metal dust inside the drive enclosure. Failure to do so will cause damage to the drive.

Figure 2-2g
PHOENIX Mounting Information
Size 3 with Disconnect Switch and Fuses (Nema Type 1)

2-10 INSTALLATION AND WIRING

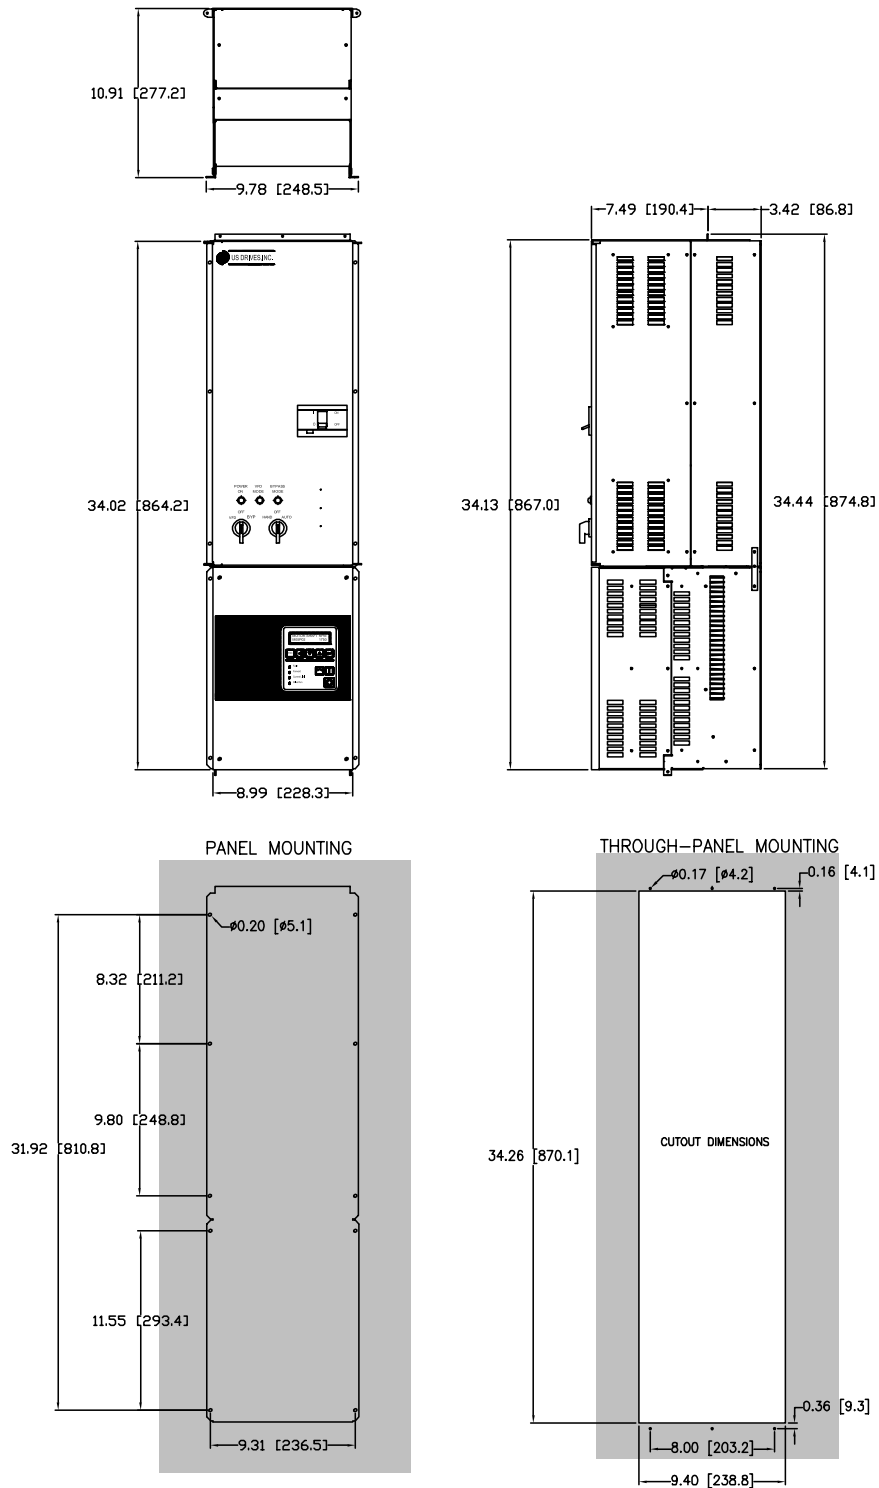


Approximate Weight: 79 Lbs. [34 Kgs]

Notes:

- Top and bottom endplates are removable to gain access inside the drive and to punch holes for conduits.
- End plates must be removed from the drive before drilling and punching holes to avoid metal dust inside the drive enclosure. Failure to do so will cause damage to the drive.
- For through-panel mounting, customer is to seal gap on both sides of cutout. Provided by customer, aluminum angle 1" x 1" x 0.050" can be used to attach to left and right sides of the drive to help seal and secure the drive.

Figure 2-2h
PHOENIX Mounting Information
Size 0 with Bypass (Nema Type 1)

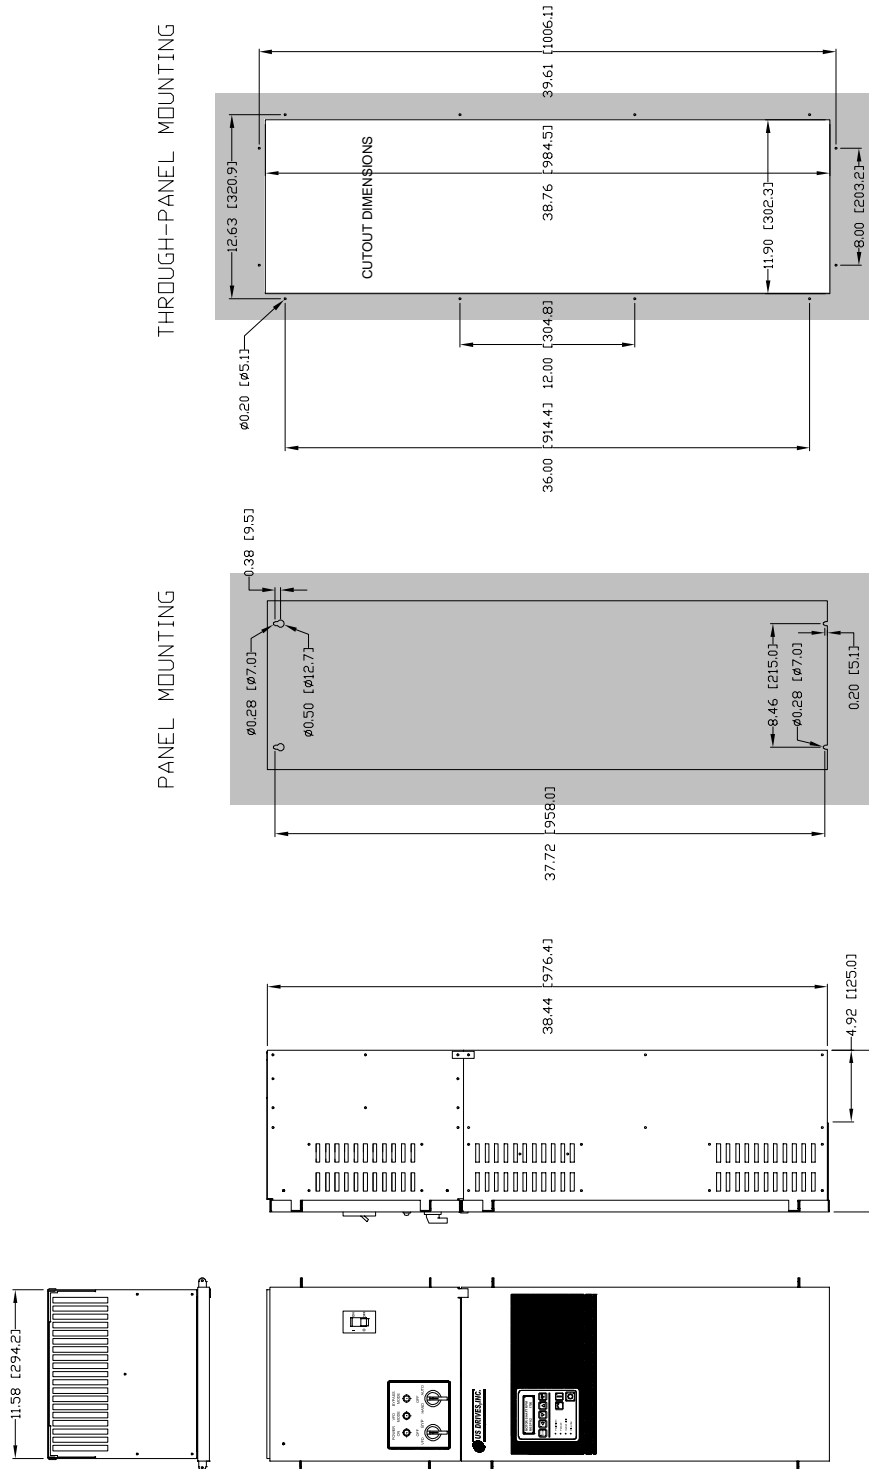


Approximate Weight: 120 Lbs. [55 Kgs]

Notes:

- Top and bottom endplates are removable to gain access inside the drive and to punch holes for conduits.
- End plates must be removed from the drive before drilling and punching holes to avoid metal dust inside the drive enclosure. Failure to do so will cause damage to the drive.
- For through-panel mounting, customer is to seal gap on both sides of cutout. Provided by customer, aluminum angle 1" x 1" x 0.050" can be used to attach to left and right sides of the drive to help seal and secure the drive.

Figure 2-2i
PHOENIX Mounting Information
Size 1 with Bypass (Nema Type 1)

2-12 INSTALLATION AND WIRING

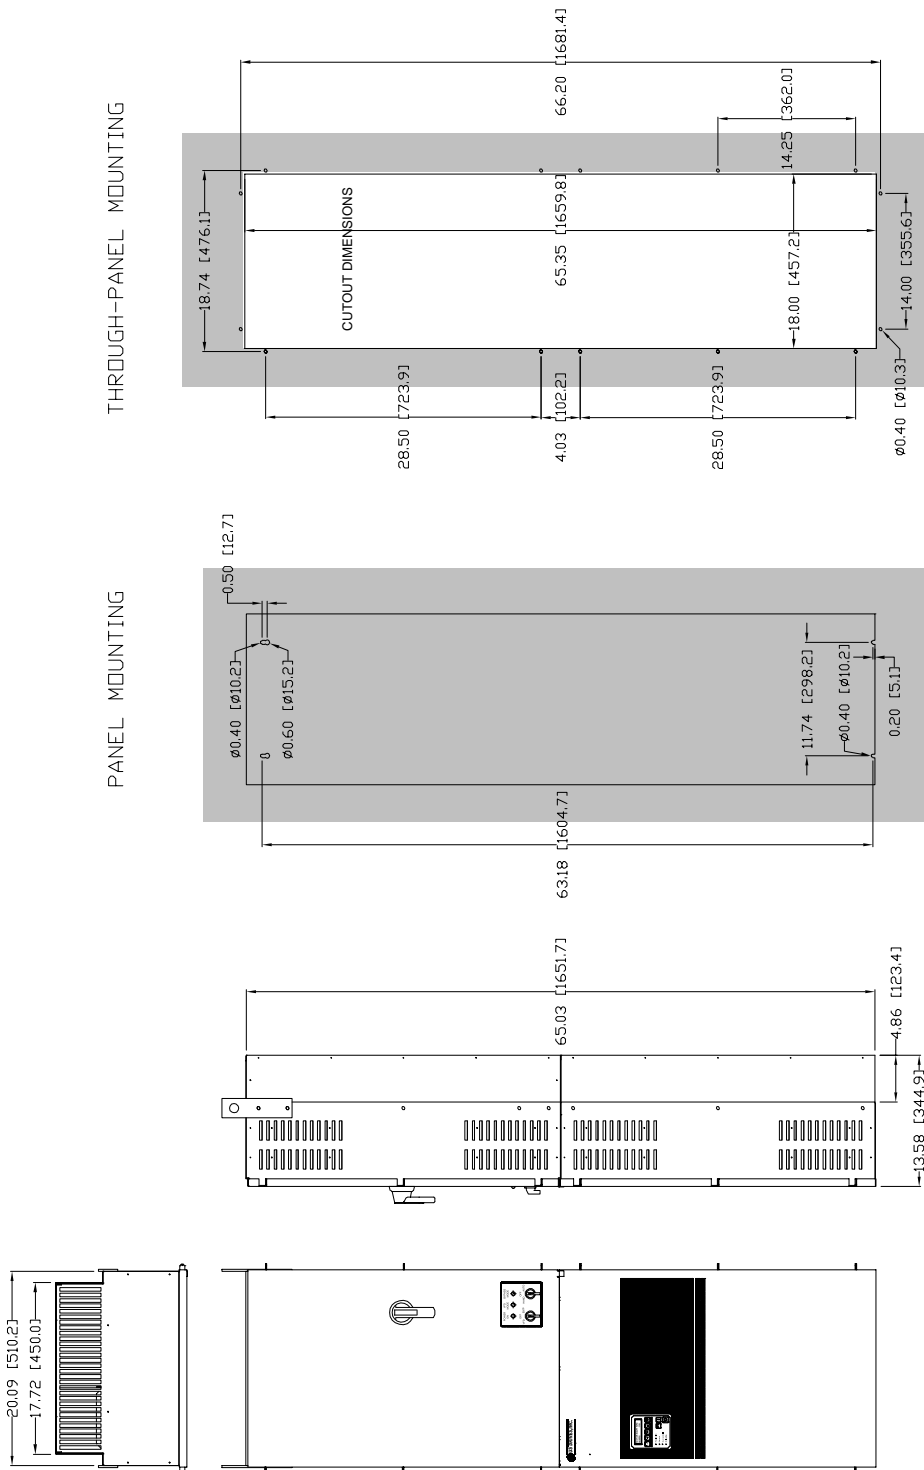

Approximate Weight: 250 Lbs. [114 Kgs]

Notes:

- Top and bottom endplates are removable to gain access inside the drive and to punch holes for conduits.
- End plates must be removed from the drive before drilling and punching holes to avoid metal dust inside the drive enclosure. Failure to do so will cause damage to the drive.
- For through-panel mounting, customer is to seal gap on both sides of cutout. Provided by customer, aluminum angle 1" x 1" x 0.050" can be used to attach to left and right sides of the drive to help seal and secure the drive.

Figure 2-2j
PHOENIX Mounting Information
Size 2 with Bypass (Nema Type 1)

2.5 AC SUPPLY SOURCE

PHOENIX Drives are suitable for use on a power system capable of delivering up to a maximum of 200,000 rms symmetrical amperes, 250/500/600 +10% volts maximum when used with AC input line fuses specified in tables 1-1, 1-2 and 1-3 respectively.

WARNING

To guard against personal injury and/or equipment damage caused by improper fusing, use only the recommended line fuses specified in tables 1-1, 1-2 and 1-3.

2.5.1 Unbalanced Distribution Systems

The PHOENIX Drive is designed to operate on three-phase supply systems whose line voltages are symmetrical. Surge suppression devices are included to protect the drive from lightning induced overvoltages between line and ground. Where the potential exists for abnormally high phase-to-ground voltages (in excess of one hundred twenty-five percent (125%) of the nominal line-to-line voltage), or where the supply ground is tied to another system or equipment that could cause the ground potential to vary with operation, suitable isolation is required for the drive. Where this condition exists, an isolation transformer is **strongly recommended**.

2.5.2 Ungrounded Distribution Systems

All Phoenix drives are equipped with MOVs that provides voltage surge protection and phase-to-phase plus phase-to-ground protection which is designed to meet IEEE 587. Where the potential exists for abnormally high phase-to-ground voltages (in excess of one hundred twenty-five percent (125%) of the nominal line-to-line voltage), an isolation transformer is strongly recommended. The MOV circuit is designed for surge suppression only (transient line protection), not continuous operation. With ungrounded distribution systems, the phase-to-ground MOV connection could become a continuous current path to ground.

If the AC source for the drive does not have a ground reference (neutral or phase ground), an isolation transformer with the neutral of the secondary grounded is highly recommended. These drives contain PE referenced MOV devices for input transient voltage limiting. Transients occurring on a non-ground referenced voltage source may generate excessive line to ground voltages which could exceed the limits of the insulation system of the drive. Under these conditions, it is highly recommended that a system level transient voltage suppression device be employed in order to limit the potential line to ground voltage. Contact factory If the drive must be operated on an ungrounded voltage source.

2.5.3 Input Power Conditioning

Since all PHOENIX Drives (D2-0125 and higher, D4-0250 and higher, D5-0250 and higher) have a built in three percent (3%) bus reactor, an external line reactor or isolation transformer is generally not required. Under extreme conditions, however, an external line reactor or isolation transformer may be required.

The basic guidelines for determining if a line reactor or isolation transformer is required are as follows:

If the AC input power system does not have a neutral or one phase referenced to ground (see section 2.5.2), an isolation transformer with the neutral of the secondary grounded is **highly recommended**. If the line-to-ground voltages on any phase can exceed one hundred twenty-five percent (125%) of the nominal line-to-line voltage, an isolation transformer with the neutral of the secondary grounded, is **always required**.

If the AC line supplying the drive has power factor correction capacitors that are switched in and out, an isolation transformer or three percent (3%) line reactors are recommended between the drive and the capacitors.

If the AC line frequently experiences transient power interruptions or significant voltage spikes, an isolation transformer or three percent (3%) reactor is recommended.

2.5.4 Input Fusing

WARNING

PHOENIX Drives sizes 0 through 3 do not provide input power short circuit fusing. Maximum Recommended AC Line Fuses are shown in tables 1-1, 1-2 and 1-3. Note that branch circuit breakers or disconnect switches can not respond fast enough to provide the level of protection that the drive components require.

2.6 Input Devices

WARNING

Hardwired Stop Circuit

The drive start/stop control circuitry includes solid-state components. If hazards due to accidental contact with moving machinery or unintentional flow of liquid, gas or solids exist, an additional hardwired stop circuit is required to remove AC line power to the drive. When AC power is removed, the motor will coast to a stop. Consequently, an auxiliary braking method may be required.

WARNING

Motor Starters

The PHOENIX Drive is intended to be controlled by control input signals that will start and stop the motor. A device that routinely disconnects then reapplies line power to the drive for the purpose of starting and stopping the motor is not recommended.

WARNING

Bypass Contactors

An incorrectly applied or installed bypass system can result in Drive damage or reduction in product life. The most common mistakes are:

- Wiring the AC line to the Drive output or control terminals.
- Incorrect bypass or output circuits.
- Output circuits that do not directly connect to the motor.

2.7 ELECTRICAL INTERFERENCE (EMI/RFI)

2.7.1 Drive Immunity

The immunity of the PHOENIX Drives to externally generated interference is outstanding. No special precautions other than following the procedures outlined in this manual are required.

It is recommended that the coils of AC and DC energized contactors interfaced with the drives be suppressed with RC networks and diodes respectively or with similar devices. This is because non-suppressed coils (inductors) can generate high electrical transients.

In areas prone to frequent lightning strikes, the standard MOV's (Metal Oxide Varistors) supplied with the drive may need to be supplemented with additional surge suppression MOV's on the AC line feeding the drive.

2.7.2 Drive Emissions

Care must be used in the routing of power and ground connections to the drive to avoid interference with sensitive equipment that may be nearby. The cable from the drive to the motor carries switched voltages and should be routed well clear of sensitive equipment. The ground conductor of the motor cable should be connected to the drive ground stud directly. Connecting this ground conductor to a cabinet ground point or ground bus bar may cause high frequency current to circulate in the ground system of the drive enclosure. The motor end of this ground conductor must be solidly connected to the motor case ground. See Figure 2-3.

Shielded or armored cable may be used to minimize radiated emissions from the motor cable. The shield or armor should be connected to the drive ground stud and to the motor ground as shown in Figure 2-3.

2.8 GROUNDING

Refer to the "Recommended Power Wiring" diagram in figure 2-3 for grounding instructions. The drive must be connected to AC system ground using the **power ground stud(s)** provided near the input and output power terminal blocks. All drives provide a separate power ground stud or terminal point for both the input AC power terminal blocks (L1, L2 and L3) and the output to motor terminal blocks (U, V, and W). Ground impedance must conform to requirements of national and local industrial codes (NEC, VDE 0160, BSI, etc.) and should be inspected and tested at regular intervals.

The outgoing motor cable ground wire connects directly to the power ground stud as well as incoming AC line system ground wire. **These ground wires must have a current rating in compliance with the above mentioned national and local codes.** This results in the motor frame ground to be solidly connected through the drive chassis to the AC system ground.

Note that the drive signal common (**COM**) should **not** be connected to the **power ground stud** directly. If desired, **one** of these commons may be connected to **earth ground** at a single point outside the drive enclosure - see section 2.8.3 for more details.

For multiple drive systems, if the signal common on each drive is to be grounded, they can be "daisy-chained" connected, using a single **COM** point on each drive. Note that this drive **COM** "bus" should only tie to **earth ground** at only one point.

2.8.1 Grounding Sensitive Circuits

It is critical to control the paths through which high frequency ground currents flow. Sensitive circuits should not share a path with such currents. Control and signal conductors should not be run near or parallel to power conductors.


2.8.2 Motor Cable Grounding

The ground conductor of the motor cable (drive end) must be connected to the **power ground stud** provided near the U, V and W output to motor terminals. Grounding directly to drive provides a direct path for high frequency current returning from the motor frame and ground conductor. At the motor end, the ground conductor should also be connected to the motor case ground. See Figure 2-3.

If armored or shielded cables are used, the armor/shield should be grounded at both ends per figure 2-3.

2.8.3 Control Logic and Signal Grounding

The control logic and signal wiring for the PHOENIX Drive is shown in Figure 2-5. If the control wires are short, and contained within a cabinet that has no sensitive circuits, the use of shielded control wiring is not necessary. For all configurations, it is strongly suggested that shielded wire be used for the signal wiring.

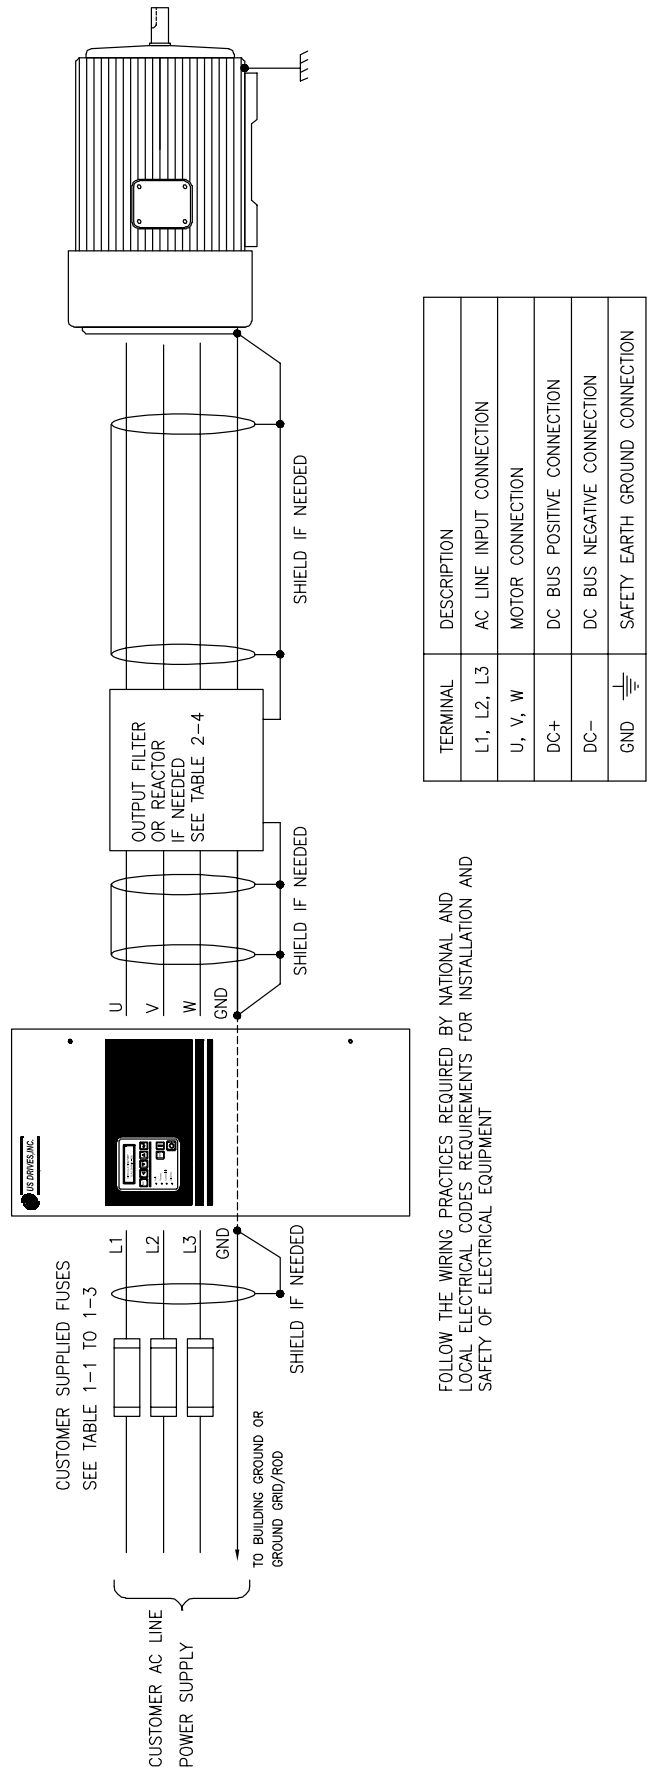

FOLLOW THE WIRING PRACTICES REQUIRED BY NATIONAL AND LOCAL ELECTRICAL CODES REQUIREMENTS FOR INSTALLATION AND SAFETY OF ELECTRICAL EQUIPMENT

TERMINAL	DESCRIPTION
L1, L2, L3	AC LINE INPUT CONNECTION
U, V, W	MOTOR CONNECTION
DC+	DC BUS POSITIVE CONNECTION
DC-	DC BUS NEGATIVE CONNECTION
GND	SAFETY EARTH GROUND CONNECTION

Figure 2-3
Recommended Power Wiring

2.9 Power Cabling

Input and Output power connections are made through the power terminal block and power ground stud. The actual drive label markings are shown in Table 2-1. Maximum torque values for terminal connections are also indicated on labels next to the connection points.

**Table 2-1
Power Signal Description**

Terminal	Description
GND	Power Earth Ground Stud
L1 L2 L3 AC LINE INPUT	AC Line Input Terminals
DC- DC+	DC Bus Terminals
U V W OUTPUT TO MOTOR	Motor Connection

2.9.1 Motor Cables

There are a wide variety of cable types that are acceptable for drive installations. For many installations, unshielded motor cable is acceptable, providing that it can be separated from sensitive circuits. A good rule of thumb to use is to allow a spacing of one foot (0.3 meters) for every 33 feet (10 meters) of length. For all situations, long parallel runs must be avoided. Conform to requirements of national and local industrial codes (NEC, VDE 0160, BSI, etc.) when selecting the type and size of the motor cable.

The cable should be 4-conductor with the ground being connected directly to the drive power ground and the motor frame ground terminal.

2.9.1.1 Shielded Motor Cable

If the separation suggested in section 2.9.1 above cannot be maintained or if sensitive circuits or devices are mounted or connected to machinery driven by the motor, shielded motor cable is recommended. The shield must be connected to ground at both ends to minimize interference. At the motor end, the motor cable shield should be tied to the motor frame ground and the drive end, to the power ground stud or ground terminal.

Shielded cable is also recommended for multiple drive installations where cable trays or large conduits are to be used to route motor leads from more than one drive. The shielded cable reduces the emission and capture (cross coupling) of noise between the motor leads of different drives. The cable shield connected to ground at both the drive end and the motor end.

Armored cable can also be used effectively to shield the motor leads. If possible, it should only be grounded at the drive end and to the motor frame at the motor end. With PVC coated armored cable, if the armored cable is grounded at a user supplied cabinet entrance, shielded cable should be used within the cabinet if the power leads will run to close to control or signal wiring.

2.9.1.2 Conduit for Routing Motor Cables

If metal conduit is to be used for motor cable distribution, the following procedures must be adhered to.

- When drives are mounted in user supplied cabinets, ground connections should be made to a common point in the cabinet. When conduit is used, it is normally grounded at the motor frame ground (junction box) and the cabinet ground.

This helps reduce noise emissions from the drive. Please note that this recommendation is strictly for noise reduction and does not concern safety grounding requirements which are dictated by national and local codes. See section 2.1 (SAFETY WARNINGS) for details.

- If possible, each conduit should contain only one set of motor leads to minimize “cross talk” between drives which degrades the noise suppression techniques described above. If this is not practical, under no conditions should more than three sets of motor leads be installed in a common conduit. If more than three sets of motor leads are to be run in a common conduit, shielded cable must be used as described above.

2.9.1.3 Motor Lead Lengths

Installations with long motor cables may require the addition of an output reactor, a dv/dt filter or a carrier suppression filter to limit voltage reflections that become additive at the motor. Refer to Table 2-4 for guidance in using various techniques to limit the voltage reflections.

2.10 Control and Signal Wiring

Terminal blocks TB1 through TB4 on the drive main control board are used for connecting control and signal wiring to the PHOENIX drive. See Figure 2-4 for terminal block physical location and Figure 2-5 for terminal point connections. A brief summary of the terminal block assignments are shown in Table 2-3.

Table 2-3
Drive Main Control Board
Terminal Block Layout

TERMINAL BLOCK	DESCRIPTION
TB1	Programmable Output Contacts
TB2	Control Logic Inputs (start, stop, jog, etc.)
TB3	Programmable Analog Outputs
TB4	Analog Reference Inputs (speed refs., PID setpoints, etc.)

CAUTION
User installed control and signal wiring must be routed inside the drive enclosure such that it is separated from any other wiring and uninsulated live parts. Failure to observe this precaution can result in equipment damage.

Before proceeding with any signal wiring, the following precautions for the signal conduit and wire must be followed:

2.10.1 Signal Conduit Requirements

- Use either rigid steel or flexible armored steel cable.
- The signal conduit must cross non-signal conduit at an angle of between 45° and 90°.
- Do not route the conduit through junction or terminal boxes that have non-signal wiring.

2.10.2 Signal Wire Requirements

- Size and install all wiring in conformance with the requirements of national and local industrial safety regulations (NEC, VDE 0160, BSI, etc.)
- Use shielded wire for reference and other signal wire connections.
- Route all signal wiring away from high current lines such as AC lines.
- Always run the signal wire in steel conduit. Never run the signal wire with non-signal wire.
- Route external wiring, rated at 600 volts or more, in separate steel conduit to eliminate electrical noise pickup.
- For distances less than 150 feet, use a minimum of #22AWG wire. For distances more than 150 feet and less than 1000 feet, use a minimum of #16AWG wire.

Table 2-4
Maximum Recommended Motor Cable Lengths

Type of Termination at Drive	Maximum Cable Length With General Purpose Motor Feet [Meters]	Maximum Cable Length With "Definite Purpose Inverter-Fed Motor" ¹ Feet [meters]
None	100 [30]	400 [120]
3 % Reactor at Drive ²	300 [90]	600[180]
<i>dv/dt</i> Filter at Drive ³	1000 [300]	3000 [915]
Carrier Suppression Filter ⁴	10 Miles [16 Kilometers]	10 Miles [16 Kilometers]


¹ "Definite Purpose Inverter-Fed Motor" as defined in NEMA MG1- Part 31 section 31.40.4.2 "Voltage Spikes".

² Reactor designed for Inverter output installation.

³ *dv/dt* Filters available from *US Drives*.

⁴ Carrier Suppression Filters available from *US Drives*. A Step-up-Transformer and/or oversized motor cables must be used when long wire run is required.


Figure 2-4
Terminal Block Locations for Drive Control Board

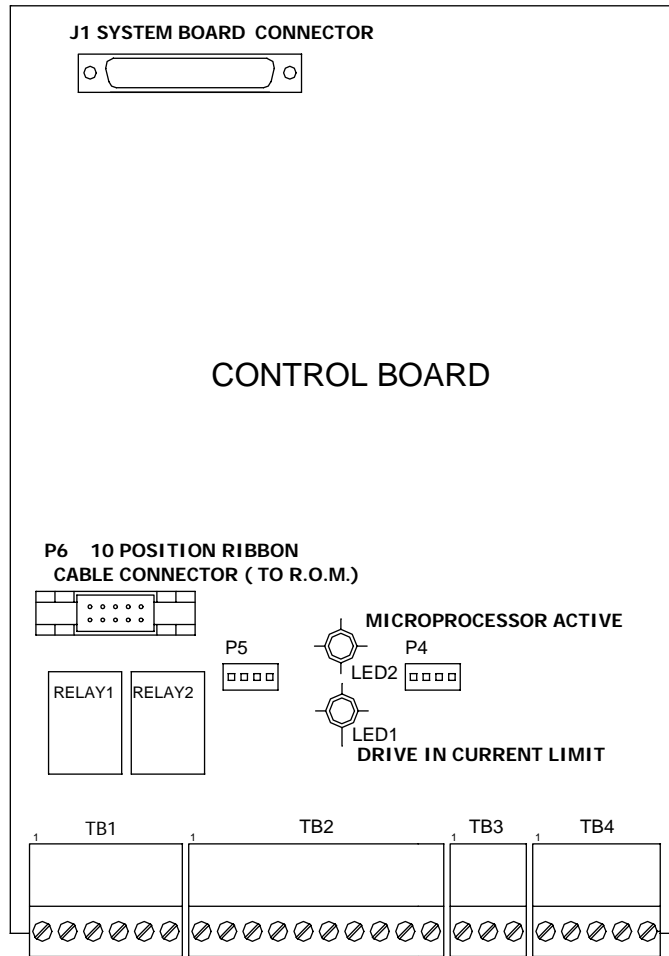

TB1-TB4 CONNECTION DATA:

MAXIMUM TORQUE: 5Lb-in [0.6 N-m]
WIRE SIZE: AWG 26-16 [0.14-1.5 mm]

2-20 INSTALLATION AND WIRING

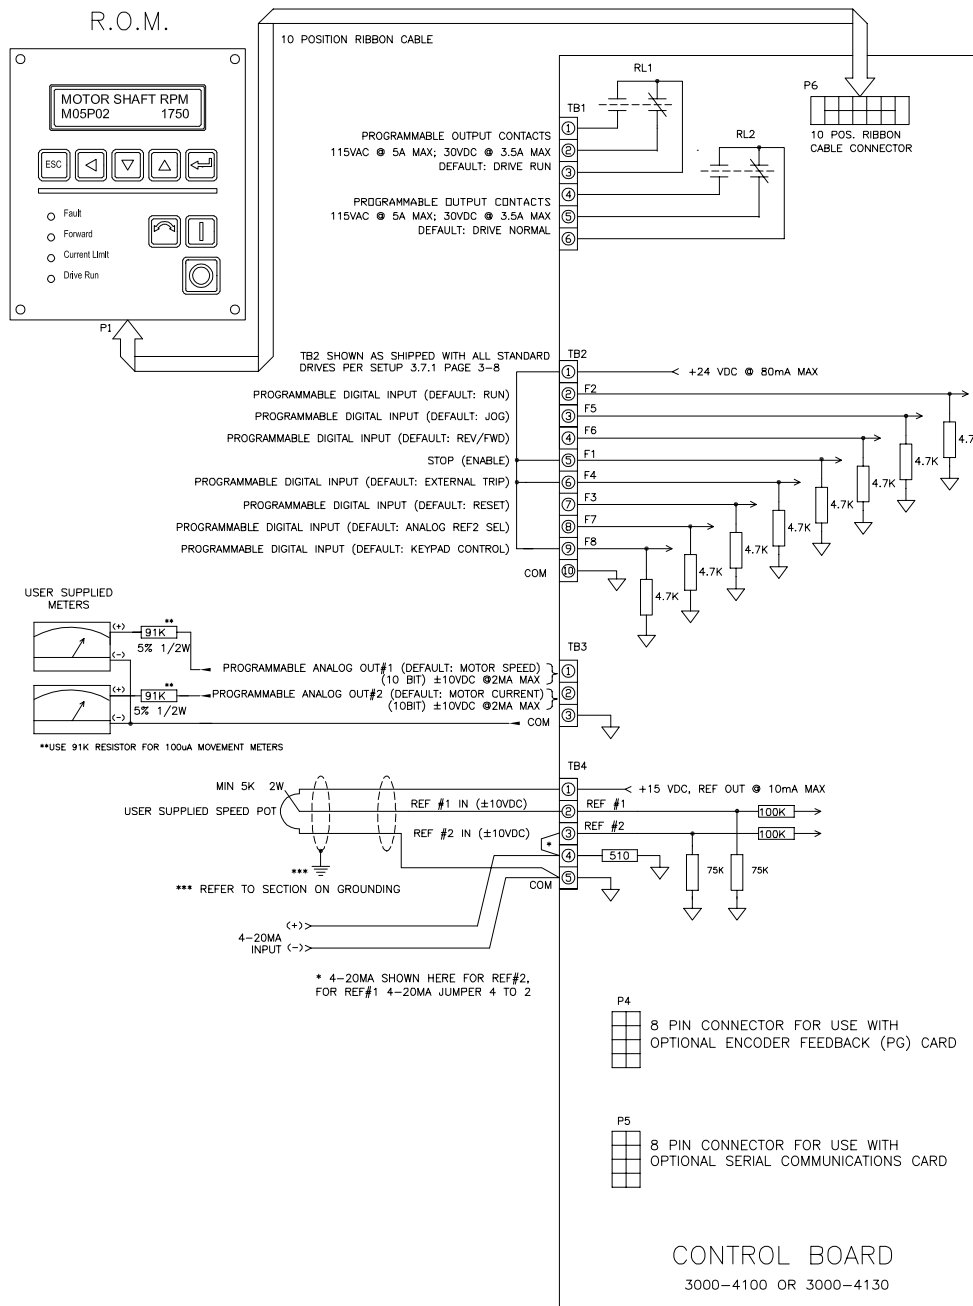

**Figure 2-5
Control Logic and Signal Wiring**


3.0 REAL-TIME OPERATOR MODULE

3.1 ROM DESCRIPTION

This section gives a brief description of the various controls and indicators on the Real-time Operator Module (ROM). The material presented here must be understood before the user proceeds to the "Quick Setup" section.

The ROM, in its standard configuration, is mounted to the enclosure door. For applications where the drive is mounted in another enclosure (e.g. – NEMA 12), the ROM can be remotely mounted as far as forty feet from the control board.

The ROM can be viewed as having two sections; a Display Panel and a Control Panel. The Display Panel provides access to program and to view the various Drive parameters. The Control Panel allows various drive functions to be controlled such as starting and stopping as well as displaying the drive status.

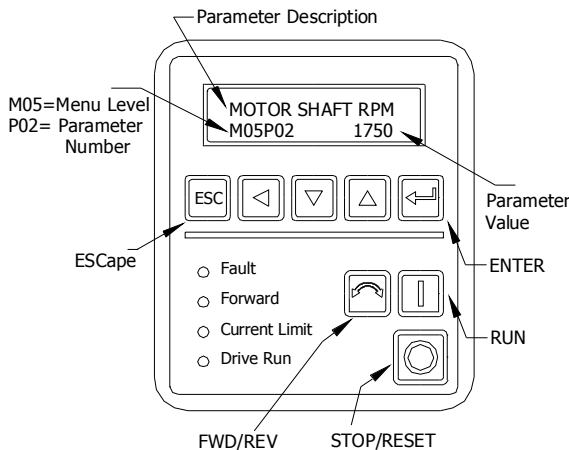

**Figure 3-1
ROM Front Panel**

3.2 DISPLAY PANEL KEY DESCRIPTIONS:

Escape

When pressed, the Escape key will abort the editing of a given parameter (restoring the original value if the parameter is R/W) if in the edit mode.

Enter

Pressing the enter key while on a menu item line, a flashing cursor will be displayed indicating a parameter value is ready for editing. After editing a parameter, pressing the enter key will cause the flashing cursor to

go away and the value displayed is entered into memory.

Up/Down Arrow Keys

These keys are used to move up and down the menu level or to increment or decrement the parameter value.

Also simultaneous activation of both the Up and Down arrow keys quickly displays keypad reference parameter M01P04 for "Motor Operated Potentiometer" (MOP) mode. The MOP mode allows Keypad Reference to be increased or decreased by use of the Up and Down arrow keys. Pressing the enter key, the display will revert to the power-up display.

Left Arrow Key

Pressing the left arrow key when in the menu/parameter scrolling mode moves the flashing cursor from menu level to parameter number and vice versa, the up or down arrow keys can be used to change the menu level or the parameter number. Pressing the left arrow key when in edit mode moves the flashing cursor left to the next decade of the parameter value to be increased or decreased by the up or down arrow keys respectively. When reaching the extreme left travel, further pressing of the left arrow key "wraps" to extreme right decade position.

3.3 CONTROL PANEL KEY AND LED DESCRIPTIONS:

Run

The Run key will start the drive if no other Stop commands are present and the keypad is enabled.

Stop/Reset

If the drive is running, pressing the Stop/Reset key will cause the drive to stop if the keypad is enabled.

If the drive has stopped due to a fault, pressing the Stop/Reset key will clear the fault and reset the drive.

Fwd/Rev

This key has the function of Forward and Reverse command.

Fault LED

The Fault LED becomes lit upon generation any fault and remains lit until the drive is reset either by way of the Stop/Reset key or a terminal block reset button. Simultaneous with the illumination of the Fault LED the appropriate Fault message is put out on the display. A blinking fault LED indicates that motor current is

3-2 DRIVE PROGRAMMING

greater than 105% of the programmed motor rated current. If the current is not reduced, the drive will trip on IxT overload after a period of time that depends on the extent of the overload. See Section 4-2 parameter M10B07 definition.

NOTE

Pressing any Display Panel key will clear the fault message allowing normal use of the display. However, until the drive is reset, the fault remains uncleared and the Fault LED will remain lit.

Forward LED

The Forward LED becomes lit upon command for the drive to run in the forward direction. This may be achieved by the FWD/REV key or from a terminal block input. When this LED is not lit, the drive is being commanded to run in the reverse direction.

Current Limit LED

This LED is lit whenever the drive is in current limit.

Drive Run LED

This LED indicates when the drive is running.

3.4 LIST OF PARAMETERS

3.4.1 Values and Character Strings

For parameters containing character strings, the following lists give the character strings as well as their numeric equivalents. When these parameters are accessed using serial communications, the numeric equivalents are used.

NOTE

Some parameters have alternative default values for certain versions of drive.

3.4.2 List of Menus

- M00 Quick Setup & Quick Metering Menu
- M01 Frequency reference selection, limits and filters
- M02 Ramps
- M03 Encoder
- M04 Current limits and torque control
- M05 Motor control
- M06 Operational modes

- M07 Analog inputs and outputs
- M08 Digital inputs and mode selectors
- M09 Digital outputs & bit selectors
- M10 Status logic and diagnostic information
- M11 Miscellaneous

- M12 Programmable thresholds and variable selectors

- M13 Timer functions
- M14 PID control loop

Menu display names:

- M00 QUICK SETUP MENU
- M01 FREQ REFS MENU
- M02 RAMPS MENU
- M03 ENCODER MENU
- M04 CURR-TORQUE CTRL
- M05 MOTOR CONTROL
- M06 OPERATION MODES
- M07 ANALOG I/O MENU
- M08 DIG INS-MODE SEL
- M09 DIG OUTS-BIT SEL
- M10 STATUS-DIAGNOSTIC
- M11 MISCELLANEOUS
- M12 THRESHOLDS-VARSEL
- M13 TIMERS FUNCTIONS
- M14 PID CONTROL LOOP

3.4.3 Quick Setup menu List

The Quick Setup menu contains only the most commonly used parameters

Quick Setup Menu:
(Program Type parameters):

- RATED MOTOR VOLT - M00P01
- BASE MOTOR FREQ - M00P02
- RATED MOTOR CURR - M00P03
- NUMBER OF POLES - M00P04
- SYM CURRENT LIM - M00P05
- ACCEL RAMP - M00P06
- DECEL RAMP - M00P07
- MAX FREQUENCY - M00P08
- MINIMUM FREQ - M00P09
- RATED LINE VOLTS - M00P10

Quick Setup Menu:
(Metering Type parameters)

- SOFTWARE VERSION - M00P11
- DRIVE MODEL NO - M00P12
- MOTOR VOLTAGE - M00P13
- MOTOR POWER - M00P14
- DC BUS VOLTAGE - M00P15
- AC LINE VOLTAGE - M00P16
- LAST FAULT - M00P17
- MOT CURR-TOTAL - M00P18
- FINAL FREQ REF - M00P19
- MOTOR SHAFT RPM - M00P20

3.4.4 Parameter Attribute

Parameter changing and saving

New values given to parameters become effective immediately and are saved into eeprom.

Read-write and read-only parameters

Read-write parameters are shown as R-W; read-only parameters are shown as RO.

Default values

Default values displayed on the drive are given in the Default column in Parameter Definitions 4.2.

3.4.5 Menu Structure

The drive is programmed by entering values into parameters. The parameters are held in menus that group the parameters according to their functions.

The first menu is Menu 0 which is the Quick Setup Menu. This contains the basic parameters that may be read or adjusted for simple applications

The remaining menus are the advanced Menus. These contain all the parameters that may be read or adjusted for advanced applications.

The parameters in Menu 0 (M00) are duplicates of certain parameters in the advanced menus; for example, parameter M00P10 is a duplicate of M05P33 (Rated Line Volts).

This menu is also user programmable. A user can define and create a menu using other parameters, for details refer to parameters M11P01 – M11P20.

3.4.6 Types of parameters

There are two types of parameter, as follows:

Bit parameters

Bit parameters can be set in either of two logic states and are used as on/off or change-over switches.

Bit parameters are prefixed with the letter B (e.g. – M01B11)

Variable Parameters

Variable parameters can be set at a value within a specified range. They are used to set numerical values, or to set the positions of switches having more than two options.

Variable parameters are prefixed with the letter P (e.g. –M01P25)

Certain parameters contain character strings instead of numerical values. The character strings are displayed on the Control Keypad in place of values. When these parameters are accessed and edited using serial communications, a numerical equivalent is displayed on the host computer. The numerical equivalent is used for programming these parameters.

3.4.7 Restore All Parameters to Factory Default Values

To restore all parameters to factory default value

1. Make sure the drive is disabled and that the motor is not being driven.
2. Select parameter M11P36 "FACTORY DEFAULTS".
3. Select "YES".
4. Press the enter key.
5. The default values are entered into all the parameters.

3.4.8 Security Code

A security code can be set to prevent unauthorized personnel from making changes to the drive parameters via the keypad. There are two states, "locked state" and "unlocked state". In the "locked state" only R/O (read only) parameters can be viewed except of course entering the access code (M11P37). In the "unlocked state", the user can view and edit any parameter.

The drive is shipped defaulted "unlocked" where all parameters are accessible and be can edited by the user. The user programmable security code (parameter M11P29 "SECURITY CODE") is shipped defaulted to 0, so that on every power-up, the drive is always "unlocked".

To change to "locked state" where no parameter editing is allowed, you must change security code parameter M11P29 "SECURITY CODE" from 0 to any number up to 4 digits (be sure to remember this number because your access code must match this number to "unlock" the drive). Right after you change the security code, you must go to parameter M11P37 "ACCESS CODE" and reenter 0 to "lock" the drive. To go back to the "unlocked state" you must enter your access code into parameter M11P37 "ACCESS CODE", the drive will stay in "unlocked state" until you power down the drive or change parameter M11P37 "ACCESS CODE".

3-4 DRIVE PROGRAMMING

Use Parameter M11P44 to disable or enable editing of parameters via serial communications.

Serial communications can be used to unlock the drive using your access code into parameter M11P37 to gain access to M11P44. Note that when the drive is unlocked full access via keypad is available. To prevent this you can lock the drive again after you made your changes to M11P44.

3.5 START UP AND QUICK SETUP

The "Factory Default" settings for the drive have been purposely setup to make the "Start-Up and Quick Setup" as simple as possible. Even for advanced users, going through this procedure is a quick and simple way to verify proper drive operation and it provides a good starting platform for more advanced setups.

This Start-Up and Quick Setup procedure covers only the most commonly adjusted parameters, all of which appear in the quick setup menu 0.

WARNING

THE FOLLOWING PROCEDURES SHOULD ONLY BE PERFORMED AFTER A COMPLETE REVIEW OF THE INSTALLATION SECTION OF THIS MANUAL. THIS SECTION CONTAINS WARNINGS, INITIAL CHECKS, WIRING INSTRUCTIONS AND OTHER INFORMATION CRITICAL TO THE SUCCESSFUL STARTUP OF THE DRIVE. PAY PARTICULAR ATTENTION TO THE "WARNING" AND "CAUTION" NOTES.

Power must be applied to the drive to perform the following procedure. Some of the voltages present are at the incoming line potential. To avoid electric shock hazard or damage to equipment, only qualified service personnel should perform the following procedure. Thoroughly read and understand the procedure before beginning. If an event does not occur while performing this procedure, **Do Not Proceed. Remove Power** by opening the branch circuit disconnect device and correct the malfunction before continuing.

NOTE

Power must be applied to the drive when viewing or changing Phoenix parameters. Previous programming may affect the drive status when power is applied. If the state of the parameters is in question, load factory defaults as detailed in section 3.4.7, "Drive Programming" before proceeding.

Remote start circuits may be connected to TB2 of the control board. Confirm that all circuits are in a de-energized state before applying power. User supplied voltages may exist at TB2, even when power is not applied to the drive.

Refer to section 4.0, for fault message information


The following procedure describes starting and stopping the drive using the ROM Run and Stop keys. The drive frequency reference is from the ROM Keypad reference parameter M01P04.

3.6 START-UP PROCEDURE FOR RUNNING DRIVE WITH ROM "KEYPAD":

3.6.1 Wiring Checks – Motor Disconnected:

1. Verify that AC line power at the disconnect device is within the rated value of the drive. If a control interface option is installed, verify that the control power to this board matches the board rating.
2. Remove and lock-out all incoming power to the drive including incoming AC power to terminals L1, L2 and L3 plus any separate control power for remote interface devices. Open the drive door and disconnect the motor leads from terminals U, V and W.
3. Verify that the "Stop", "External Fault" and "keypad enable" interlocks are installed. If not, connect jumpers between TB2-1, TB2-5, TB2-6 and TB2-9 as shown in Figure 3-1 below

**Figure 3-2
Control Wiring for Keypad Operation**

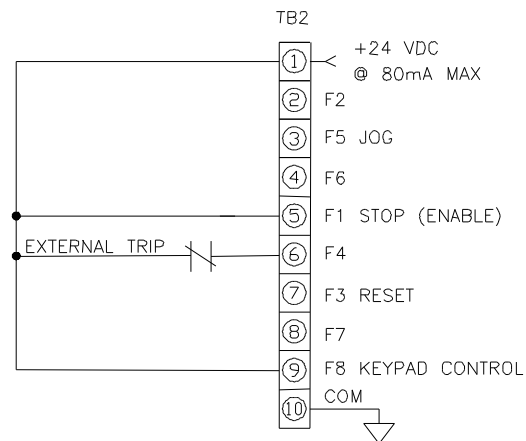

4. Check for earth ground faults with an ohmmeter. A very high resistance of over 1 mega-ohm should be measured from earth ground to all terminals. If there is a low reading, investigate before proceeding. If all readings are high, then power can be applied.
5. Apply AC power and control voltages to the drive.

3.6.2 Drive Programming:

1. On power-up, the LCD Display should light and show the default Powerup Display. Press the Escape key and then the Left arrow key and you see a flashing cursor on the menu level. Press the Up/Down Arrow keys until you see the M00PXX menu 0. Press Left arrow key until you see a flashing cursor on the parameter number. You are now ready to edit the following parameters if necessary.
2. Use the UP/Down Arrow key to view each parameter listed below and observe its value. If you like what you see, go on to the next parameter. If you want to change the value of a parameter, press the Enter key and using the Left and Up/Down Arrow keys to get the value you want. Accept the parameter value by hitting the Enter key, then proceed to the next parameter. The following parameters are found under the Quick Setup menu:

Quick Setup Menu (Program Type):

RATED MOTOR VOLT	- M00P01
BASE MOTOR FREQ	- M00P02
RATED MOTOR CURR	- M00P03
NUMBER OF POLES	- M00P04
SYM CURRENT LIM	- M00P05
ACCEL RAMP	- M00P06
DECEL RAMP	- M00P07
MAX FREQUENCY	- M00P08
MINIMUM FREQ	- M00P09
RATED LINE VOLTS	- M00P10

3.6.3 Remove Power

Remove and lock-out the input and control power to the drive. When the ROM Display is no longer illuminated, open the drive door.

WARNING

TO AVOID A HAZARD OF ELECTRIC SHOCK, AFTER THE INPUT AND CONTROL POWER IS REMOVED FROM THE DRIVE AND THE ROM DISPLAY IS NO LONGER LIT, WAIT FIVE (5) MINUTES FOR BUS CAPACITORS TO FULLY DISCHARGE.

3.6.4 Reconnect Motor:

WARNING

In the following steps, rotation of the motor in an undesired direction can occur. To guard against possible equipment damage, it is recommended that the motor be disconnected from the load before proceeding.

1. Reconnect motor leads and close drive door.

3.6.5 Check for Correct Motor Rotation:

1. Reapply power to the drive
2. Verify that the drive reference frequency is at zero Hz.

For Keypad frequency reference control, press the Up arrow and Down arrow keypad keys simultaneously to quickly access the keypad reference parameter M01P04. Simply then use the Display Panel Left Arrow key to select the desired decade and the Down Arrow key to decrease the parameter value to zero. When finished adjusting speed, pressing the Enter.

3. Using the Forward LED on the ROM Display Panel verify that the forward direction is selected. (LED should be illuminated).
4. Start the drive using the ROM Run key. Slowly increase the drive speed until the motor begins to turn. Note the direction of motor rotation, then stop the drive using the ROM Stop key. If the direction of rotation is correct, proceed on to section 3.6.6, "Check for Proper Operation".

If the direction of motor rotation is incorrect, remove and lock-out input and control power to the drive. When the ROM is no longer illuminated, wait for five (5) minutes for the bus capacitors to fully discharge. Open drive door and interchange any two of the three motor leads, U, V, or W. Close drive door and repeat steps 2 through 5 to verify correct rotation.

3.6.6 Check for Proper Operation:

1. Start the drive and slowly increase the frequency reference. Check for proper motor operation throughout the speed range.
2. With the drive running at 10 Hz or greater, press the ROM Stop key and verify that the correct stopping mode has been programmed.

3-6 DRIVE PROGRAMMING

3. This completes the "Startup and Quick Setup" procedure. Depending on your application, further parameter programming may be required. Refer to the Programming section of this manual for more information.

That's all there is to it! Remember; use the Run and Stop Display Panel keys to control the drive.


Remember, you can use the following Quick Metering Menu to verify and view motor current, speed, and other display parameters.

SOFTWARE VERSION	- M00P11
DRIVE MODEL NO	- M00P12
MOTOR VOLTAGE	- M00P13
MOTOR POWER	- M00P14
DC BUS VOLTAGE	- M00P15
AC LINE VOLTAGE	- M00P16
LAST FAULT	- M00P17
MOT CURR-TOTAL	- M00P18
FINAL FREQ REF	- M00P19
MOTOR SHAFT RPM	- M00P20

3.7 TYPICAL CONTROL SETUPS



Starting point for all setups described below are from factory default setup shipped with all standard drives.

3.7.1 Keypad Mode (Keypad Start/Stop & Keypad Reference)

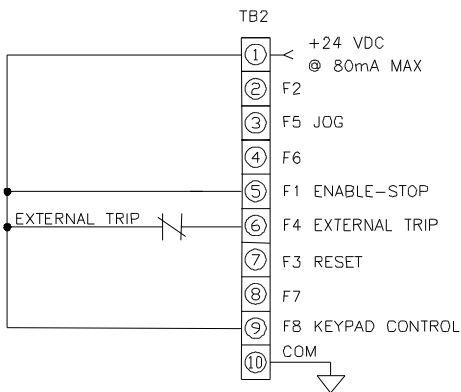

- Start command: Keypad RUN key.
Stop command: Keypad STOP key.
 * FWD/REV command: Keypad FWD/REV key.
Jog command: JOG contact at TB2-3-TB2-1.
Reset command: keypad STOP/RESET key or pushbutton at TB2-7-TB2-1.
Speed reference source: Keypad reference M01P04.

3.7.2 Keypad Start/Stop with Analog Speed Reference

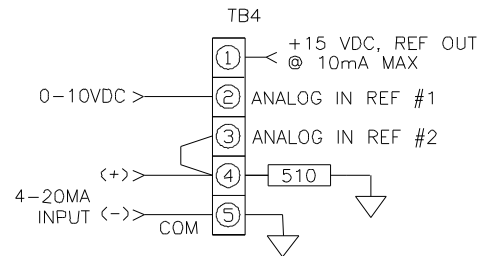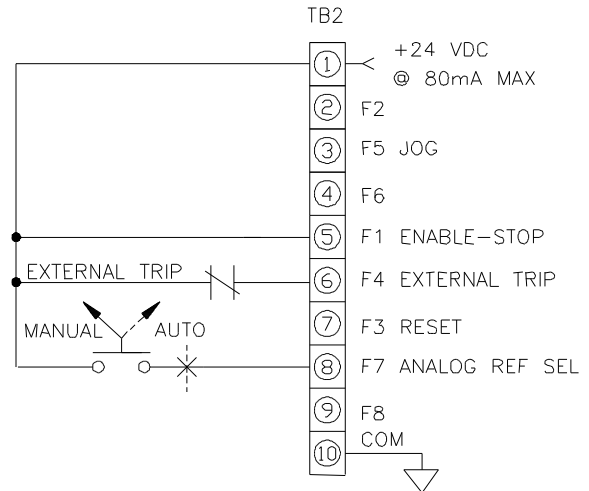

Change the following parameters in the order shown:

- M06P18 (KEYPAD CONT MODE) ← NO KEYS
 M06B15 (EN KEYPAD RUN) ← 1
 M06B16 (KEYPAD STOP) ← 1
 M06B17 (EN KEYPAD FWD/RV) ← 0

Manual Mode:

- Start command: Keypad RUN key.
Stop command: Keypad STOP key.
 * FWD/REV command: Keypad FWD/REV key.
Jog command: JOG contact at TB2-3-TB2-1.
Reset command: keypad STOP/RESET key or pushbutton at TB2-7-TB2-1.
Speed reference source: Analog reference 1, 0-10Vdc operation.

***NOTE:** Reverse function is disabled. If FWD/REV is needed set M06B23 (DISABLE REV ROT) to 0 and M06P18 (KEYPAD CONT MODE) to "ALL KEYS".

***NOTE:** Reverse function is disabled. If FWD/REV is needed set M06B23 (DISABLE REV ROT) to 0 and M06B17 (EN KEYPAD FWD/RV) ← 1

Auto Mode:

Start command: Keypad RUN key.

Stop command: Keypad STOP key.


* FWD/REV command: Keypad FWD/REV key.

Jog command: JOG contact at TB2-3-TB2-1.

Reset command: keypad STOP/RESET key or pushbutton at TB2-7-TB2-1.

Speed reference source: Analog reference 2, 4-20MA operation with min speed when loss of 4-20MA signal (refer to M07P13 for other choices).

3.7.2.a "3-Wire or "Momentary Contact" Control with Keypad Speed Reference

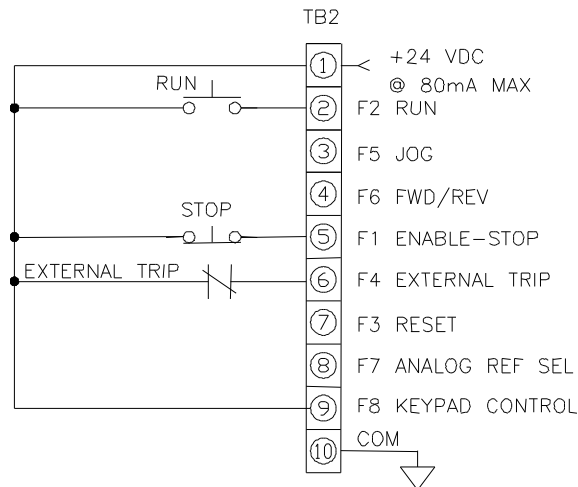

Change the following parameters in the order as shown:

- M06P18 (KEYPAD CONT MODE) ← NO KEYS
- M06B15 (EN KEYPAD RUN) ← 0
- M06B16 (EN KEYPAD STOP) ← 0
- M06B17 (EN KEYPAD FWD/RV) ← 0

Start command: RUN pushbutton at TB2-2-TB2-1.

Stop command: STOP pushbutton at TB2-5-TB2-1.

* FWD/REV command: Contact at TB2-4-TB2-1.


Jog command: JOG contact at TB2-3-TB2-1.

Reset command: keypad STOP/RESET key or pushbutton at TB2-7-TB2-1.

Speed reference source: Keypad reference M01P04.

***Note:** Reverse function is disabled. If FWD/REV function is needed set M06P23 (DISABLE REV ROT) to 0 to enable.

3.7.2.b "2-Wire or "Maintained Contact" Control with Keypad Speed Reference

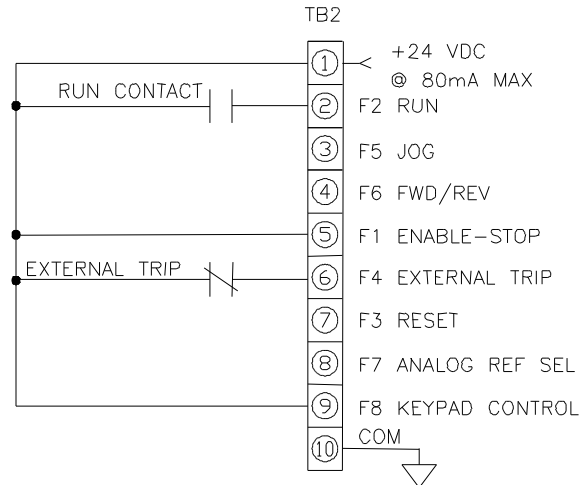

Change the following parameters in the order as shown:
M06P07 (SEQUENCING MODE) ← 2-WIRE

Note: If analog reference is desired for speed reference, disconnect TB2-9.

Keypad RUN, STOP and FWD/REV are not operational in this mode.

Start/Stop command: RUN contact at TB2-2-TB2-1.

* FWD/REV command: Contact at TB2-4-TB2-1.

Jog command: JOG contact at TB2-3-TB2-1.



Reset command: keypad STOP/RESET key or pushbutton at TB2-7-TB2-1.

Speed reference source: Keypad reference M01P04.

***Note:** Reverse function is disabled. If FWD/REV function is needed set M06P23 (DISABLE REV ROT) to 0 to enable.

3-8 DRIVE PROGRAMMING

3.7.3 "3-Wire or "Momentary Contact" Control

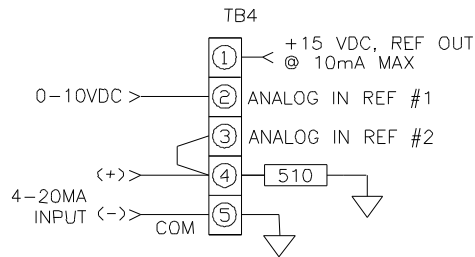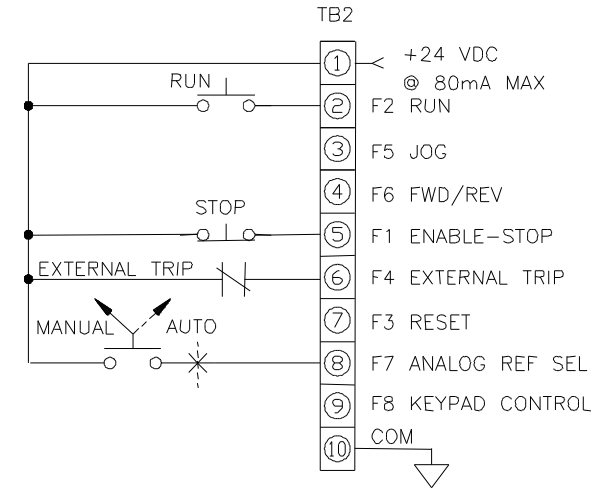

Manual Mode:

Start command: RUN pushbutton at TB2-2-TB2-1.

Stop command: STOP pushbutton at TB2-5-TB2-1.

* FWD/REV command: Contact at TB2-4-TB2-1.

Jog command: JOG contact at TB2-3-TB2-1.

Reset command: keypad STOP/RESET key or pushbutton at TB2-7-TB2-1.

Speed reference source: Analog reference 1, 0-10Vdc operation.

Auto Mode:

Start command: RUN pushbutton at TB2-2-TB2-1.

Stop command: STOP pushbutton at TB2-5-TB2-1.

* FWD/REV command: Contact at TB2-4-TB2-1.

Jog command: JOG contact at TB2-3-TB2-1.

Reset command: keypad STOP/RESET key or pushbutton at TB2-7-TB2-1.

Speed reference source: Analog reference 2, 4-20MA operation with min speed when loss of 4-20MA signal (refer to M07P13 description for other choices).

Note: If TB2-9 is wired to TB2-1, keypad control mode is enabled and the following has priority:

Start command: Keypad RUN key.

Stop command: Keypad STOP key.

FWD/REV command: Keypad USER key.



Jog command: JOG contact at TB2-3-TB2-1.

Reset command: keypad STOP/RESET key or pushbutton at TB2-7-TB2-1.

Speed reference source: Keypad reference M01P04.

***NOTE:** Reverse function is disabled. If FWD/REV is needed set M06B23 (DISABLE REV ROT) to 0 to enable.

3.7.4 "2-Wire" or "Maintained Contact" with Analog Speed Reference

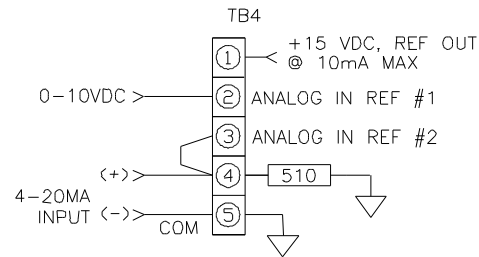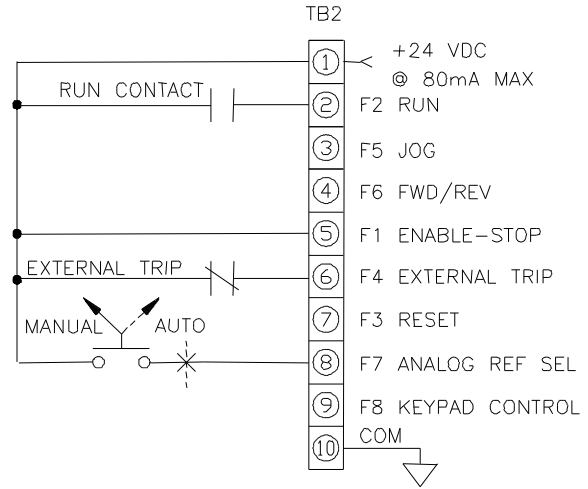

Change the following parameters in the order as shown:
M06P07 (SEQUENCING MODE) ← 2-WIRE

Manual Mode:

Start/Stop command: RUN contact at TB2-2-TB2-1.

* FWD/REV command: Contact at TB2-4-TB2-1.

Jog command: JOG contact at TB2-3-TB2-1.

Reset command: keypad STOP/RESET key or pushbutton at TB2-7-TB2-1.

Speed reference source: Analog reference 1, 0-10Vdc operation.

Auto Mode:

Start/Stop command: RUN contact at TB2-2-TB2-1.

* FWD/REV command: Contact at TB2-4-TB2-1.

Jog command: JOG contact at TB2-3-TB2-1.


Reset command: keypad STOP/RESET key or pushbutton at TB2-7-TB2-1.

Speed reference source: Analog reference 2, 4-20MA operation with min speed when loss of 4-20MA signal (refer to M07P13 description for other choices).

Note: If TB2-9 is wired to TB2-1, keypad speed reference is enabled M01P04.

***NOTE:** Reverse function is disabled. If FWD/REV is needed set M06B23 (DISABLE REV ROT) to 0 to enable.

3.7.5 HAND-AUTO with 2-Wire Control in Auto Mode

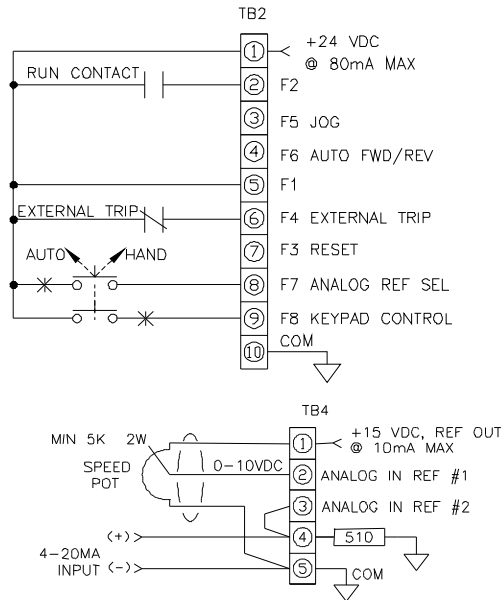

Change the following parameters in the order shown:

Part A Programming:

- M06P18 (KEYPAD CONT MODE) ← NO KEYS
- M06P15 (EN KEYPAD RUN) ← 1
- M06B16 (EN KEYPAD STOP) ← 1
- M08P21 (F8 INPUT DESTINA) ← 0.0
- M01B08 (KEYPAD CONTROL) ← 0

Part B Programming:

- M08B23 (MODE SELECT SRC) ← 8.08 (Used to sense mode)
- M08B24 (MODESEL OUT DEST) ← 6.07 (Used to switch 2 or 3 wire)
- M08P26 (MODE SEL LOGIC 0) ← 3 (Select 2-Wire in AUTO Mode)
- M08P27 (MODE SEL LOGIC 1) ← 0 (Select 3-Wire in Hand Mode)

Hand Mode:

Start command: Keypad RUN
Stop command: Keypad STOP



- * FWD/REV command: Keypad FWD/REV key.
- Jog command: JOG contact at TB2-3-TB2-1.
- Reset command: keypad STOP/RESET key or pushbutton at TB2-7-TB2-1.
- Speed reference source: Keypad reference M01P04 (With only Part B programming above)
- Speed reference source: analog reference 1, 0-10V operation (speed potentiometer as shown above). (With Part A and Part B programming above)

Auto Mode:

- Start/Stop command: RUN contact at TB2-2-TB2-1
- * FWD/REV command: Contact at TB2-4-TB2-1.
- Reset command: keypad STOP/RESET key or pushbutton at TB2-7-TB2-1.
- Speed reference source: Analog reference 2 is, 4-20MA operation with min speed when loss of 4-20MA signal (refer to M07P13 description for other choices).

***NOTE:** Reverse function is disabled. If FWD/REV is needed set M06B23 (DISABLE REV ROT) to 0 and set:
 - M06P18 (KEYPAD CONT MODE) to "ALL KEYS" when HAND mode is Keypad reference M01P04 or
 - M06B14 (KEYPAD FWD/REV) = 1 when HAND mode is analog reference 1 (speed potentiometer)

3.7.6 HAND-AUTO with 3-Wire Control in Auto Mode

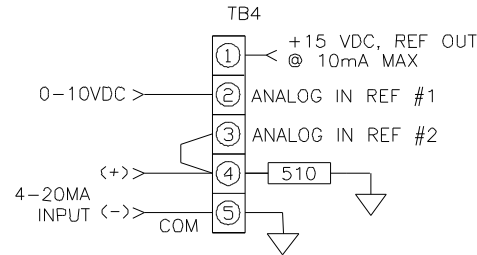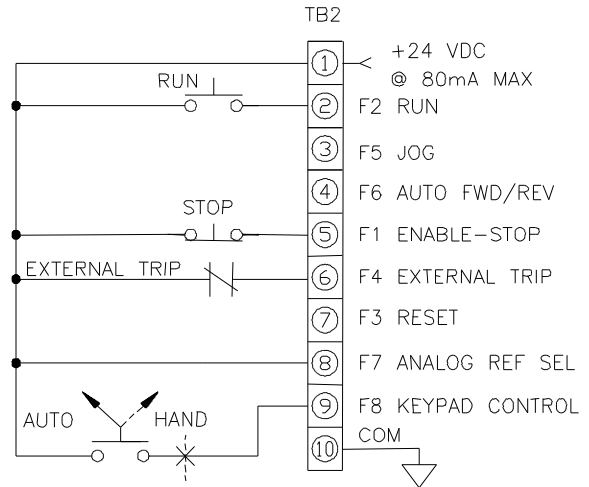

Hand Mode:

- Start command: Keypad RUN key.
- Stop command: Keypad STOP key.
- * FWD/REV command: Keypad FWD/REV key.
- Jog command: JOG contact at TB2-3-TB2-1.
- Reset command: keypad STOP/RESET key or pushbutton at TB2-7-TB2-1.
- Speed reference: Keypad reference M01P04.


Auto Mode:

- Start command: RUN pushbutton at TB2-2-TB2-1.
- Stop command: STOP pushbutton at TB2-5-TB2-1.
- * FWD/REV command: Contact at TB2-4-TB2-1.
- Jog command: JOG contact at TB2-3-TB2-1.
- Reset command: keypad STOP/RESET key or pushbutton at TB2-7-TB2-1.
- Speed reference source:
 - When TB2-8 is wired to TB2-1, analog reference 2 is selected for AUTO reference, 4-20MA operation with min speed when loss of 4-20MA signal (refer to M07P13 description for other choices)
 - When TB2-8 is not wired to TB2-1, analog reference 1 is selected for AUTO reference, 0-10Vdc.

***NOTE:** Reverse function is disabled. If FWD/REV is needed set M06B23 (DISABLE REV ROT) to 0 and M06P18 (KEYPAD CONT MODE) to "ALL KEYS".

3-10 DRIVE PROGRAMMING

3.7.7 HAND-OFF-AUTO #1A Control

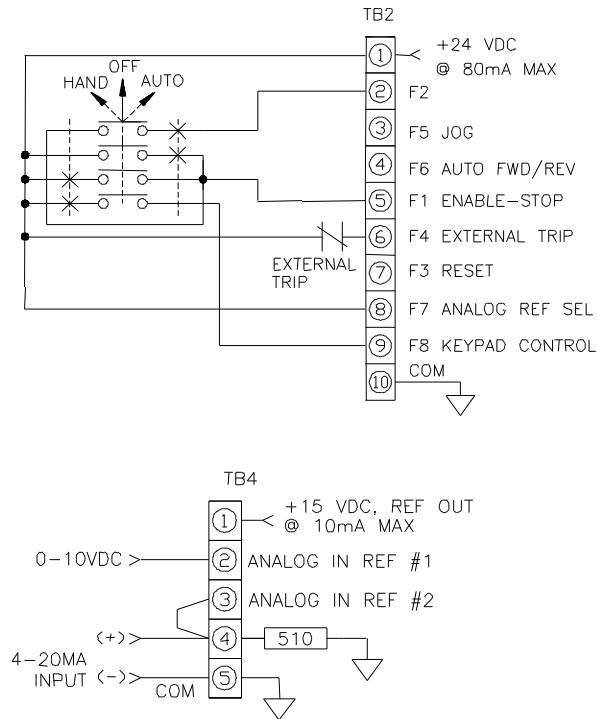

Hand Mode:

Start command: Keypad RUN

Stop command: Keypad STOP

- * FWD/REV command: Keypad FWD/REV key.
- Jog command: JOG contact at TB2-3-TB2-1.
- Reset command: keypad STOP/RESET key or pushbutton at TB2-7-TB2-1.
- Speed reference source: Keypad reference M01P04


Auto Mode:

Start/Stop command: Drive starts when HOA switch is thrown to AUTO.

- * FWD/REV command: Contact at TB2-4-TB2-1.
- Reset command: keypad STOP/RESET key or pushbutton at TB2-7-TB2-1.
- Speed reference source:
 - When TB2-8 is wired to TB2-1, analog reference 2 is selected for AUTO reference, 4-20MA operation with min speed when loss of 4-20MA signal (refer to M07P13 description for other choices).
 - When TB2-8 is not wired to TB2-1, analog reference 1 is selected for AUTO reference, 0-10V operation.

***NOTE:** Reverse function is disabled. If FWD/REV is needed set M06B23 (DISABLE REV ROT) to 0 and M06P18 (KEYPAD CONT MODE) to "ALL KEYS".

3.7.8 HAND-OFF-AUTO #2A Control

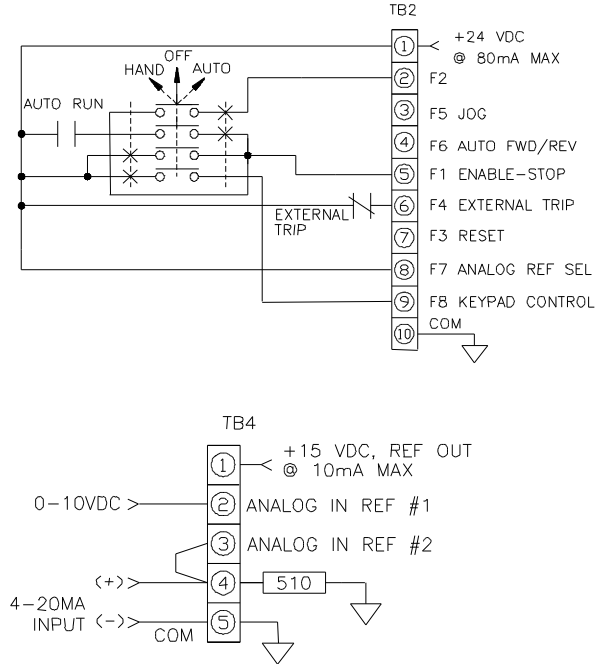

Hand Mode:

Start command: Keypad RUN key.

Stop command: Keypad STOP key.

- * FWD/REV command: Keypad FWD/REV key.
- Jog command: JOG contact at TB2-3-TB2-1.
- Reset command: keypad STOP/RESET key or pushbutton at TB2-7-TB2-1.
- Speed reference source: Keypad reference M01P04.



Auto Mode:

Start/Stop command: AUTO Run contact as wired above.

- * FWD/REV command: Contact at TB2-4-TB2-1.
- Reset command: keypad STOP/RESET key or pushbutton at TB2-7-TB2-1.
- Speed reference source:
 - When TB2-8 is wired to TB2-1, analog reference 2 is selected for AUTO reference, 4-20MA operation with min speed when loss of 4-20MA signal (refer to M07P13 description for other choices).
 - When TB2-8 is not wired to TB2-1, analog reference 1 is selected for AUTO reference, 0-10Vdc operation.

***NOTE:** Reverse function is disabled. If FWD/REV is needed set M06B23 (DISABLE REV ROT) to 0 and M06P18 (KEYPAD CONT MODE) to "ALL KEYS".

3.7.9 HAND-OFF-AUTO #3A Control

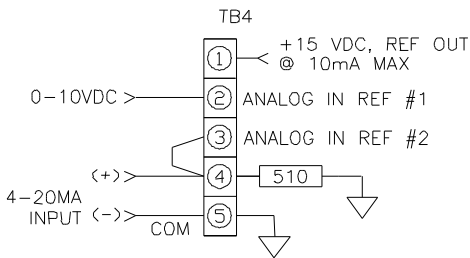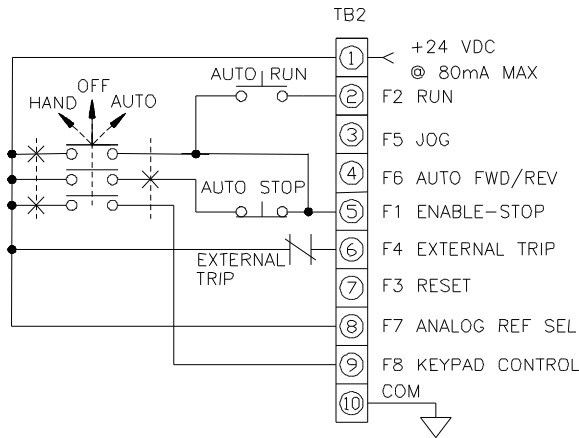

Hand Mode:

Start command: Keypad RUN key

Stop command: Keypad STOP key

* FWD/REV command: Keypad FWD/REV key.

Jog command: JOG contact at TB2-3-TB2-1.

Reset command: keypad STOP/RESET key or pushbutton at TB2-7-TB2-1.

Speed reference: Keypad reference M01P04

Auto Mode:

Start command: AUTO RUN pushbutton as wired above.

Stop command: AUTO STOP pushbutton as wired above.

* FWD/REV command: Contact at TB2-4-TB2-1.

Jog command: JOG contact at TB2-3-TB2-1.



Reset command: keypad STOP/RESET key or pushbutton at TB2-7-TB2-1.

Speed reference source:

- When TB2-8 is wired to TB2-1, analog reference 2 is selected for AUTO reference, 4-20MA operation with min speed when loss of 4-20MA signal (refer to M07P13 description for other choices)
- When TB2-8 is not wired to TB2-1, analog reference 1 is selected for AUTO reference, 0-10Vdc operation

***NOTE:** Reverse function is disabled. If FWD/REV is needed set M06B23 (DISABLE REV ROT) to 0 and M06P18(KEYPAD CONT MODE) to "ALL KEYS".

3.7.10 HAND-OFF-AUTO #1B Control

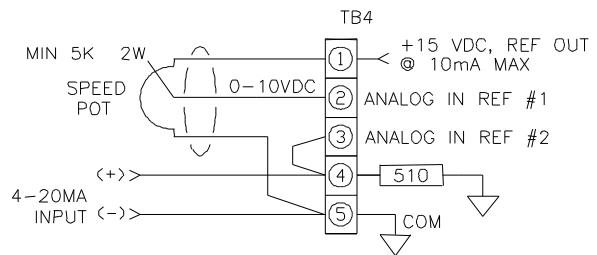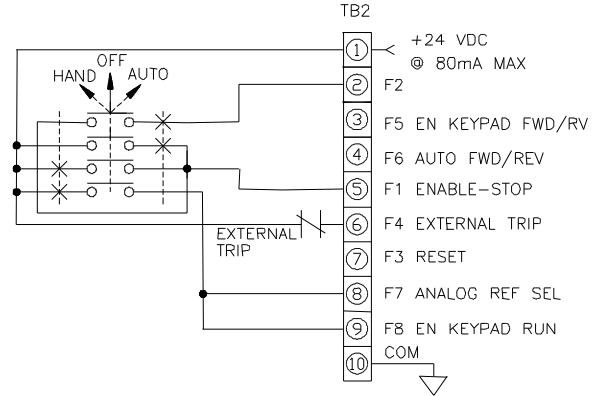

Change the following parameters in the order shown:

- M08P21 (F8 INPUT DESTINA) ← 6.15 (M06B15)
- M01B08 (KEYPAD CONTROL) ← 0
- M06P18 (KEYPAD CONT MODE) ← NO KEYS
- M06B16 (EN KEYPAD STOP) ← 1
- M08P15 (F5 INPUT DESTINA) ← 6.17 (M06B17)
- M08B20 (F7 INVERT) ← 1
- M06B09 (SEQUENCING BIT1) ← 0

Hand Mode:

Start command: Keypad RUN

Stop command: Keypad STOP

* FWD/REV command: Keypad FWD/REV key.

Reset command: keypad STOP/RESET key or pushbutton at TB2-7-TB2-1.

Speed reference source: analog reference 1, 0-10V operation (speed potentiometer as shown above).

Auto Mode:

Start/Stop command: Drive starts when HOA switch is thrown to AUTO.

* FWD/REV command: Contact at TB2-4-TB2-1.



Reset command: keypad STOP/RESET key or pushbutton at TB2-7-TB2-1.

Speed reference source: analog reference 2, 4-20MA operation with min speed when loss of 4-20MA signal (refer to M07P13 description for other choices).

***NOTE:** Reverse function is disabled. If FWD/REV is needed set M06B23 (DISABLE REV ROT) to 0 and wire TB2-3 to TB2-9.

3-12 DRIVE PROGRAMMING

3.7.11 HAND-OFF-AUTO #2B Control

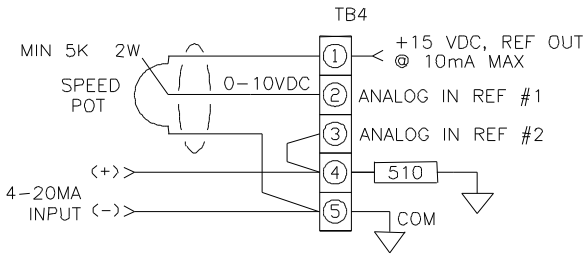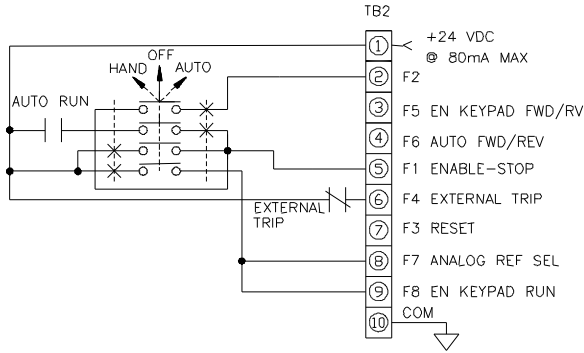

Change the following parameters in the order shown:

- M08P21 (F8 INPUT DESTINA) ← 6.15 (M06B15)
- M01B08 (KEYPAD CONTROL) ← 0
- M06P18 (KEYPAD CONT MODE) ← NO KEYS
- M06B16 (EN KEYPAD STOP) ← 1
- M08P15 (F5 INPUT DESTINA) ← 6.17 (M06B17)
- M08B20 (F7 INVERT) ← 1
- M06B09 (SEQUENCING BIT1) ← 0

Hand Mode:

Start command: Keypad RUN key.

Stop command: Keypad STOP key.

* FWD/REV command: Keypad FWD/REV key.

Reset command: keypad STOP/RESET key or pushbutton at TB2-7-TB2-1.

Speed reference source: analog reference 1, 0-10Vdc operation (speed potentiometer as shown above).

Auto Mode:

Start/Stop command: AUTO Run contact as wired above.



* FWD/REV command: Contact at TB2-4-TB2-1.

Reset command: keypad STOP/RESET key or pushbutton at TB2-7-TB2-1.

Speed reference source: analog reference 2, 4-20MA operation with min speed when loss of 4-20MA signal (refer to M07P13 description for other choices).

***NOTE:** Reverse function is disabled. If FWD/REV is needed set M06B23 (DISABLE REV ROT) to 0 and wire TB2-3 to TB2-9.

3.7.11.a HAND-OFF-AUTO & LOCAL-REMOTE #2B.a

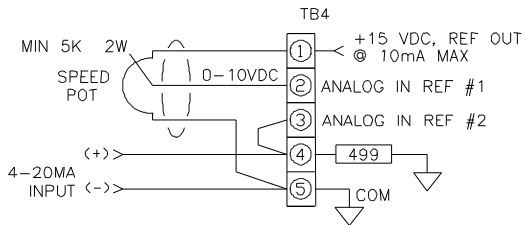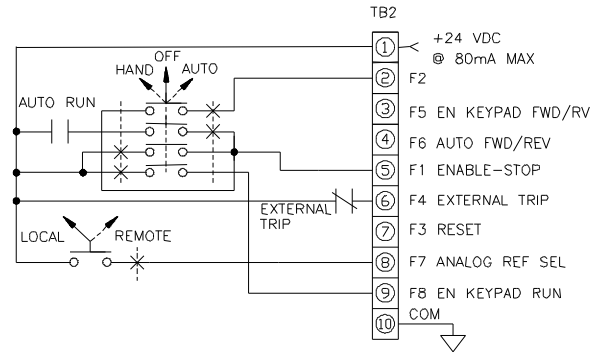

Change the following parameters in the order as shown:

- M08P21 (F8 INPUT DESTINA) ← 6.15 (M06B15)
- M01B08 (KEYPAD CONTROL) ← 0
- M06P18 (KEYPAD CONT MODE) ← NO KEYS
- M06B16 (EN KEYPAD STOP) ← 1
- M08P15 (F5 INPUT DESTINA) ← 6.17 (M06B17)
- M08B09 (SEQUENCING BIT1) ← 0

Hand Mode:

Start command: Keypad RUN key.

Stop command: Keypad STOP key.

*FWD/REV command: Keypad FWD/REV key.

Reset command: keypad STOP/RESET key or pushbutton at TB2-7-TB2-1.

Auto Mode:

Start/Stop command: AUTO Run contact as wired above.

*FWD/REV command: Contact at TB2-4-TB2-1.

Reset command: keypad STOP/RESET key or pushbutton at TB2-7-TB2-1.

Note: When the H-O-A switch is in the off position the drive stops regardless of the state of the Hand or Auto run commands.

Local Mode:



Speed reference source: analog reference 1, 0-10Vdc operation (speed potentiometer as shown above).

Remote Mode:

Speed reference source: analog reference 2, 4-20MA operation with min speed when loss of 4-20MA signal (refer to M07P13 description for other choices).

***NOTE:** Reverse function is disabled. If FWD/REV function is needed set M06P23 (DISABLE REV ROT) to 0 and wire TB2-3 to TB2-9.

3.7.12 HAND-OFF-AUTO #3B Control

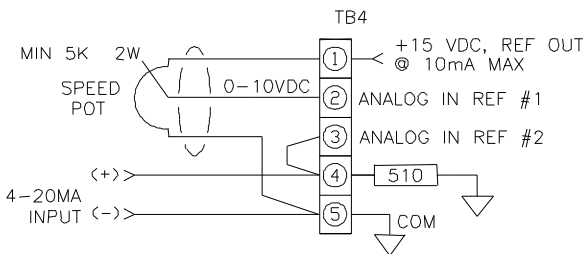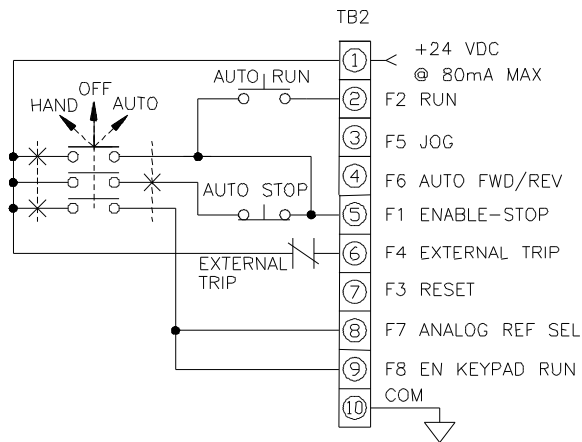

Change the following parameters in the order shown:
 M08P21 (F8 INPUT DESTINA) ← 6.15 (M06B15)
 M01B08 (KEYPAD CONTROL) ← 0
 M06P18 (KEYPAD CONT MODE) ← NO KEYS
 M06B16 (EN KEYPAD STOP) ← 1
 M08B20 (F7 INVERT) ← 1

Hand Mode:



Start command: Keypad RUN key
Stop command: Keypad STOP key
Jog command: JOG contact at TB2-3-TB2-1.
Reset command: keypad STOP/RESET key or pushbutton at TB2-7-TB2-1.
Speed reference source: analog reference 1, 0-10Vdc operation (speed potentiometer as shown above).

Auto Mode:

Start command: AUTO RUN pushbutton as wired above.
Stop command: AUTO STOP pushbutton as wired above.
 * FWD/REV command: Contact at TB2-4-TB2-1.
Jog command: JOG contact at TB2-3-TB2-1.
Reset command: keypad STOP/RESET key or pushbutton at TB2-7-TB2-1.
Speed reference source: analog reference 2, 4-20MA operation with min speed when loss of 4-20MA signal (refer to M07P13 description for other choices).

***NOTE:** Reverse function is disabled. If FWD/REV is needed (Auto Mode Only) set M06B23 (DISABLE REV ROT) to 0 to enable.

3.7.13 RUN Forward/ RUN Reverse "2-Wire" Control

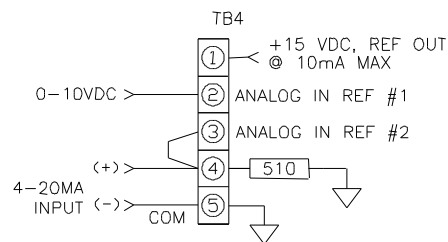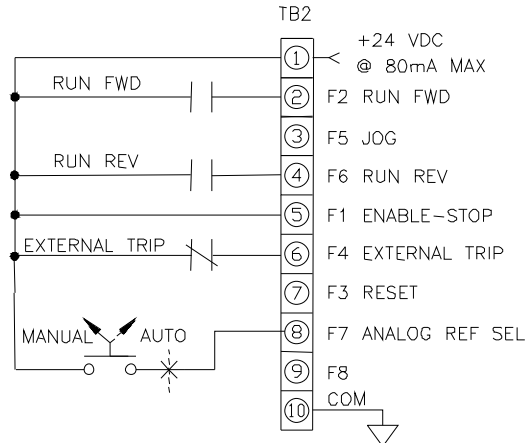

Change the following parameters in the order shown:
 M06P07 (SEQUENCING MODE) ← RFWD RREV
 M06B23 (DISABLE REV ROT) ← 0

- If RUN FWD and RUN REV are asserted at the same time, the drive will stop.
 - Keypad RUN, STOP and FWD/REV (user key) are not operational in this sequencing mode.
- The following applies for all modes below
- Jog command: JOG contact at TB2-3-TB2-1.
 - Reset command: keypad STOP/RESET key or pushbutton at TB2-7-TB2-1.

Manual Mode:

Start/Stop command forward direction: RUN FWD contact at TB2-2-TB2-1.
Start/Stop command forward direction: RUN REV contact at TB2-4-TB2-1.
Speed reference source: Analog reference 1, 0-10Vdc operation.



Auto Mode:

Start/Stop command forward direction: RUN FWD contact at TB2-2-TB2-1.
Start/Stop command forward direction: RUN REV contact at TB2-4-TB2-1.
Speed reference source: Analog reference 2, 4-20MA operation with min speed when loss of 4-20MA signal (refer to M07P13 description for other choices).

Note: If TB2-9 is wired to TB2-1, keypad reference is enabled (speed reference).

3-14 DRIVE PROGRAMMING

3.7.14 RUN Forward/ RUN Reverse "3-Wire" Control

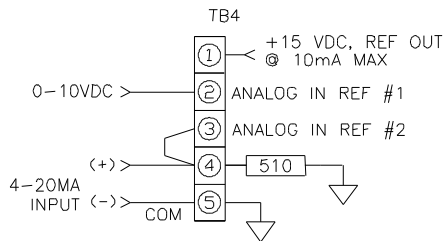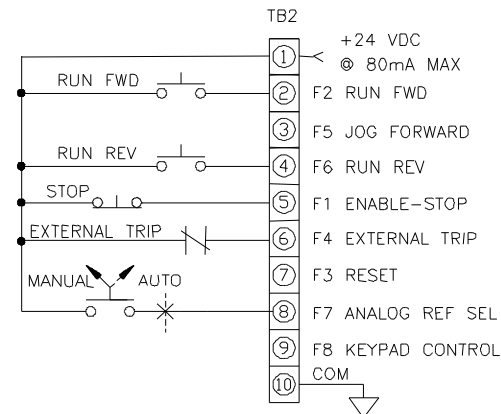

Change the following parameters in the order shown:

M06P07 (SEQUENCING MODE) ← 3-WIRE SP
M06B23 (DISABLE REV ROT) ← 0

The following applies for all modes below:

- JOG forward command: JOG FWD contact at TB2-3-TB2-1
- Reset command: pushbutton at TB2-7-TB2-1

Manual Mode:

Start command forward direction: RUN FWD pushbutton at TB2-2-TB2-1.

Start command forward direction: RUN REV pushbutton at TB2-4-TB2-1.

Stop command: STOP pushbutton at TB2-5-TB2-1.

Speed reference source: Analog reference 1, 0-10Vdc operation.

Auto Mode:

Start command forward direction: RUN FWD pushbutton at TB2-2-TB2-1.

Start command forward direction: RUN REV pushbutton at TB2-4-TB2-1.

Stop command: STOP pushbutton at TB2-5-TB2-1.

Speed reference source: Analog reference 2, 4-20MA operation with min speed when loss of 4-20MA signal (refer to M07P13 description for other choices).

Note: If TB2-9 is wired to TB2-1, keypad control mode is enabled and the following has priority:



Start command: Keypad RUN key.

Stop command: Keypad STOP key.

FWD/REV command: Keypad USER key.

Speed reference source: Keypad reference M01P04.

3.7.15 Hand-Off-Auto #4A Control

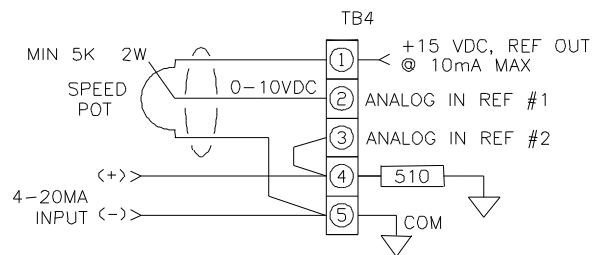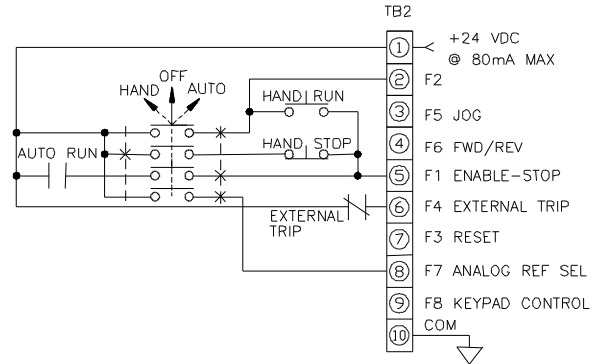

Hand Mode:

Start command: HAND RUN pushbutton as wired above.

Stop command: HAND STOP pushbutton as wired above.

* FWD/REV command: Contact at TB2-4-TB2-1.

Jog command: JOG contact at TB2-3-TB2-1.

Reset command: keypad STOP/RESET key or pushbutton at TB2-7-TB2-1.

Speed reference source: Analog reference 1, 0-10V operation (speed potentiometer as shown above).

Auto Mode:

Start/Stop command: AUTO Run contact as wired above.


* FWD/REV command: Contact at TB2-4-TB2-1.

Reset command: keypad STOP/RESET key or pushbutton at TB2-7-TB2-1.

Speed reference source: Analog reference 2, 4-20MA operation with min speed when loss of 4-20MA signal (refer to M07P13 description for other choices).

***NOTE:** Reverse function is disabled. If FWD/REV is needed set M06B23 (DISABLE REV ROT) to 0 to enable.

3.7.16 Motorized Potentiometer with "2-Wire" Control

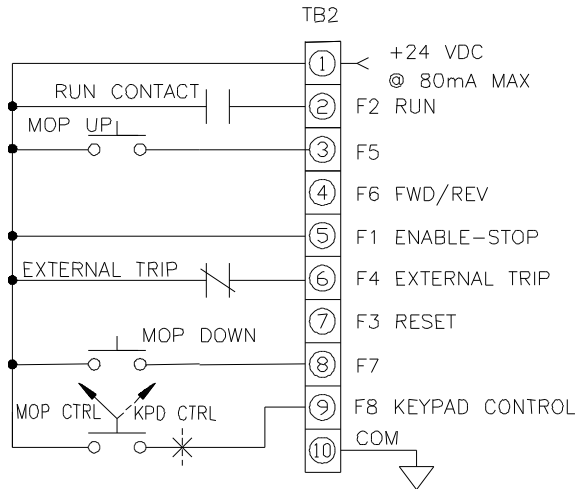

Change the following parameters in the order shown:
 M06P07 (SEQUENCING MODE) ← 2-WIRE
 M08P15 (F5 INPUT DESTINA) ← 6.27 (M06B27)
 M08P19 (F7 INPUT DESTINA) ← 6.28 (M06B28)
 M01B07 (SEL PRESET SPEED) ← 1
 M06P31 (MOP DESTINATION) ← 1.25** (M01P25)
 M06P30 (MOP SCALE FACTOR) ← .060***

Keypad Control (KPD CTRL):

Start/Stop command: RUN contact at TB2-2-TB2-1.
 * FWD/REV command: Contact at TB2-4-TB2-1.
Reset command: keypad STOP/RESET key or pushbutton at TB2-7-TB2-1.
Speed reference: Keypad reference M01P04

MOP Control (MOP CTRL):


Start/Stop command: RUN contact at TB2-2-TB2-1.
Speed increase: MOP UP contact at TB2-3-TB2-1.
Speed decrease: MOP DOWN contact TB2-8-TB2-1.
 * FWD/REV command: Contact at TB2-4-TB2-1.
Reset command: keypad STOP/RESET key or pushbutton at TB2-7-TB2-1.

**Since the motorized potentiometer in this example controls the speed, one of the preset speed parameters (M01P25 "PRESET FREQ 1") is used as MOP destination.
 ***For 60Hz speed range, scale factor = 60/1000 (60 is 60Hz and 1000 is maximum value of parameter M01P25 "PRESET FREQ 1").

Use M06P26 to program ramp rate.
 Refer to M06B25 & M06B29 for other MOP features.

***NOTE:** Reverse function is disabled. If FWD/REV is needed set M06B23 (DISABLE REV ROT) to 0.

3.7.17 Motorized Potentiometer with "3-Wire" Control

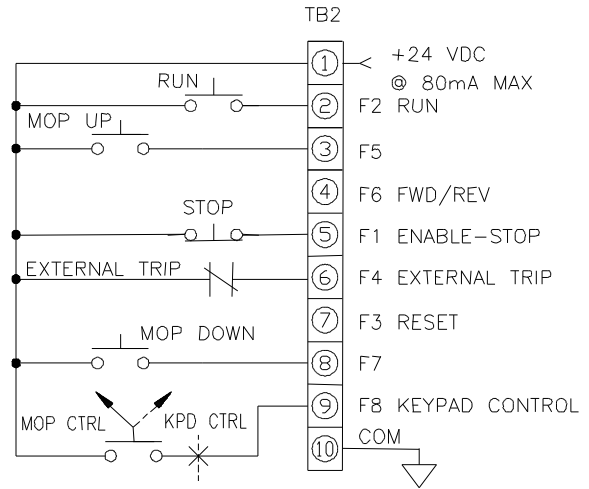

Change the following parameters in the order shown:
 M08P15 (F5 INPUT DESTINA) ← 6.27 (M06B27)
 M08P19 (F7 INPUT DESTINA) ← 6.28 (M06B28)
 M01B07 (SEL PRESET SPEED) ← 1
 M06P31 (MOP DESTINATION) ← 1.25** (M01P25)
 M06P30 (MOP SCALE FACTOR) ← .060***

Keypad Control (KPD CTRL):

Start command: Keypad RUN key.
Stop command: Keypad STOP key.
 * FWD/REV command: Keypad FWD/REV key.
Reset command: keypad STOP/RESET key or pushbutton at TB2-7-TB2-1.
Speed reference source: Keypad reference M01P04

MOP Control (MOP CTRL):

Start command: RUN pushbutton at TB2-2-TB2-1.
Stop command: STOP pushbutton at TB2-5-TB2-1.
Speed increase: MOP UP contact at TB2-3-TB2-1.
Speed decrease: MOP DOWN contact TB2-8-TB2-1.
 * FWD/REV command: Contact at TB2-4-TB2-1.
Reset command: keypad STOP/RESET key or pushbutton at TB2-7-TB2-1.


**Since the motorized potentiometer in this example controls the speed, one of the preset speed parameters (M01P25 "PRESET FREQ 1") is used as MOP destination.
 ***For 60Hz speed range, scale factor = 60/1000 (60 is 60Hz and 1000 is maximum value of parameter M01P25 "PRESET FREQ 1").

Use M06P26 to program ramp rate.
 Refer to M06B25 & M06B29 for other MOP features.

***NOTE:** Reverse function is disabled. If FWD/REV is needed set M06B23 (DISABLE REV ROT) to 0 and M06P18 (KEYPAD CONT MODE) to "ALL KEYS".

3-16 DRIVE PROGRAMMING

3.7.18 Motorized Potentiometer with Keypad Start/Stop

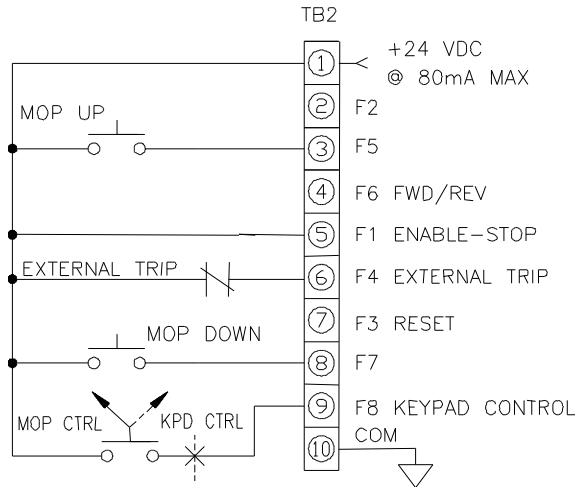

Change the following parameters in the order shown:

M06P18 (KEYPAD CONT MODE)	← NO KEYS
M06B15 (EN KEYPAD RUN)	← 1
M06B16 (EN KEYPAD STOP)	← 1
M06B17 (EN KEYPAD FWD/RV)	← 0
M08P15 (F5 INPUT DESTINA)	← 6.27 (M06B27)
M08P19 (F7 INPUT DESTINA)	← 6.28 (M06B28)
M01B07 (SEL PRESET SPEED)	← 1
M06P31 (MOP DESTINATION)	← 1.25** (M01P25)
M06P30 (MOP SCALE FACTOR)	← .060***

Keypad Control (KPD CTRL):

Start command: Keypad RUN key.

Stop command: Keypad STOP key.

Reset command: keypad STOP/RESET key or pushbutton at TB2-7-TB2-1.

* FWD/REV command: Keypad FWD/REV key

Speed reference source: Keypad reference M01P04

MOP Control (MOP CTRL):

Start command: Keypad RUN key.

Stop command: Keypad STOP key.

Speed increase: MOP UP contact at TB2-3-TB2-1.

Speed decrease: MOP DOWN contact TB2-8-TB2-1.

* FWD/REV command: Contact at TB2-4-TB2-1.

Reset command: keypad STOP/RESET key or pushbutton at TB2-7-TB2-1.

**Since the motorized potentiometer in this example controls the speed, one of the preset speed parameters (M01P25 "PRESET FREQ 1") is used as MOP destination.


***For 60Hz speed range, scale factor = 60/1000 (60 is 60Hz and 1000 is maximum value of parameter M01P25 "PRESET FREQ 1").

Use M06P26 to program ramp rate.

Refer to M06B25 & M06B29 for other MOP features.

*NOTE: Reverse function is disabled. If FWD/REV is needed set M06B23 (DISABLE REV ROT) to 0 and M06B17 (EN KEYPAD FWD/RV) to 1.

3.7.19 Preset Speeds with "2-Wire" Control

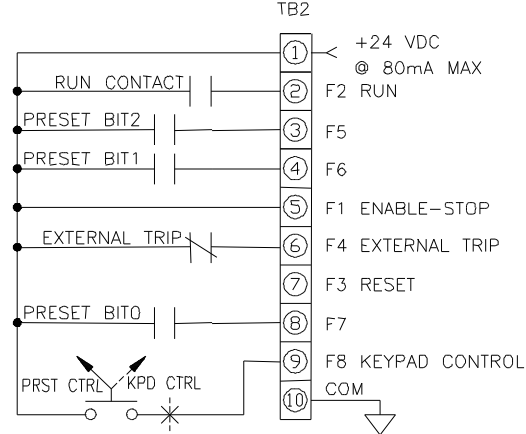

Change the following parameters in the order shown:

M06P07 (SEQUENCING MODE)	← 2-WIRE
M01B07 (SEL PRESET SPEED)	← 1
M02B07 (RAMPS SELECTION)	← 1
M08P15 (F5 INPUT DESTINA)	← 1.24 (M01B24)
M08P17 (F6 INPUT DESTINA)	← 1.23 (M01B23)
M08P19 (F7 INPUT DESTINA)	← 1.22 (M01B22)

Keypad Control (KPD CTRL):

Start/Stop command: RUN contact at TB2-2-TB2-1.

Reset command: keypad STOP/RESET key or pushbutton at TB2-7-TB2-1.

Speed reference source: Keypad reference M01P04

Preset Speed Control (PRST CTRL):

Start/Stop command: RUN contact at TB2-2-TB2-1.

Reset command: keypad STOP/RESET key or pushbutton at TB2-7-TB2-1.

Speed reference source:

BIT2	BIT1	BIT0	DRIVE SPEED	DRIVE ACCEL/DECEL
0	0	0	PRESET FREQ1	ACCEL1/DECEL1
0	0	1	PRESET FREQ2	ACCEL2/DECEL2
0	1	0	PRESET FREQ3	ACCEL3/DECEL3
0	1	1	PRESET FREQ4	ACCEL4/DECEL4
1	0	0	PRESET FREQ5	ACCEL5/DECEL5
1	0	1	PRESET FREQ6	ACCEL6/DECEL6
1	1	0	PRESET FREQ7	ACCEL7/DECEL7
1	1	1	PRESET FREQ8	ACCEL8/DECEL8

Program the following preset speeds and corresponding acceleration/deceleration for the desired speed profile:

**M01P25 to M01P32: PRESET FREQ 1 to PRESET FREQ 8

M02P03: ACCEL 1

M02P11 to M02P17: ACCEL 2 to ACCEL8


M02P04: DECEL 1

M02P21 to M02P27: DECEL 2 to DECEL 8

*NOTE: Reverse function is disabled. If FWD/REV is needed set M06B23 (DISABLE REV ROT) to 0.

**NOTE: If some of the preset speeds are negative, reverse rotation is allowed by setting M06B23 (DISABLE REV ROT) to 0 and M01B10 (BIPOLAR SELECT) to 1.

3.7.19.a Preset Speeds with "2-Wire" Control & Speed Pot

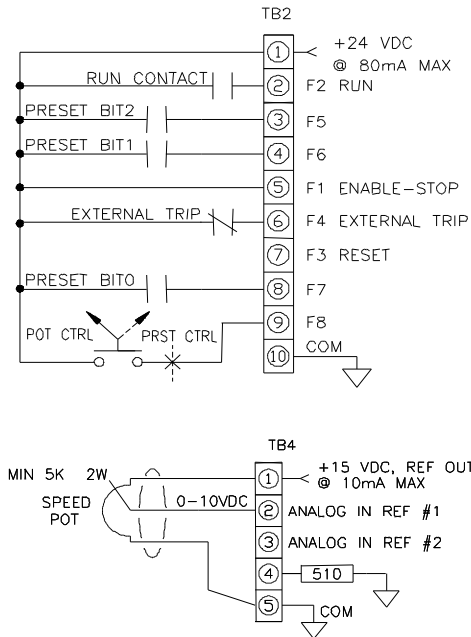

Change the following parameters in the order shown:

M06P07 (SEQUENCING MODE)	← 2-WIRE
M02B07 (RAMPS SELECTION)	← 1
M08P15 (F5 INPUT DESTINA)	← 1.24 (M01B24)
M08P17 (F6 INPUT DESTINA)	← 1.23 (M01B23)
M08P19 (F7 INPUT DESTINA)	← 1.22 (M01B22)
M08P21 (F8 INPUT DESTINA)	← 1.07 (M01B07)
M01B08 (KEYPAD CONTROL)	← 0

Speed Pot Control (POT CTRL):

Start/Stop command: RUN contact at TB2-2-TB2-1.
Reset command: keypad STOP/RESET key or pushbutton at TB2-7-TB2-1.
Speed reference source: Analog reference 1, 0-10Vdc operation (Speed Potentiometer as shown)

Preset Speed Control (PRST CTRL):

Start/Stop command: RUN contact at TB2-2-TB2-1.
Reset command: keypad STOP/RESET key or pushbutton at TB2-7-TB2-1.
Speed reference source:


BIT2	BIT1	BIT0	DRIVE SPEED	DRIVE ACCEL/DECEL
0	0	0	PRESET FREQ1	ACCEL1/DECEL1
0	0	1	PRESET FREQ2	ACCEL2/DECEL2
0	1	0	PRESET FREQ3	ACCEL3/DECEL3
0	1	1	PRESET FREQ4	ACCEL4/DECEL4
1	0	0	PRESET FREQ5	ACCEL5/DECEL5
1	0	1	PRESET FREQ6	ACCEL6/DECEL6
1	1	0	PRESET FREQ7	ACCEL7/DECEL7
1	1	1	PRESET FREQ8	ACCEL8/DECEL8

Program the following preset speeds and corresponding acceleration/deceleration for the desired speed profile:
 **M01P25 to M01P32: PRESET FREQ 1 to PRESET FREQ 8
 M02P03: ACCEL 1

M02P11 to M02P17: ACCEL 2 to ACCEL8
 M02P04: DECEL 1
 M02P21 to M02P27: DECEL 2 to DECEL 8

****NOTE:** If some of the preset speeds are negative, reverse rotation is allowed by setting M06B23 (DISABLE REV ROT) to 0 and M01B10 (BIPOLAR SELECT) to 1.

3.7.20 Preset Speeds with "3-Wire" Control

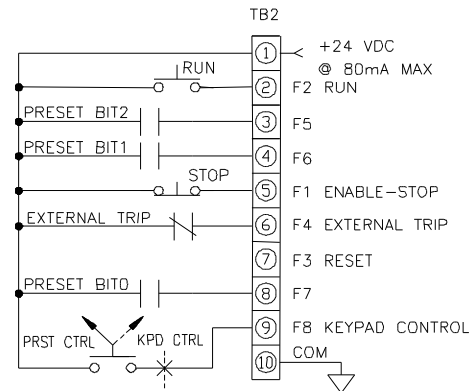

Change the following parameters in the order shown:

M01B07 (SEL PRESET SPEED)	← 1
M02B07 (RAMPS SELECTION)	← 1
M08P15 (F5 INPUT DESTINA)	← 1.24 (M01B24)
M08P17 (F6 INPUT DESTINA)	← 1.23 (M01B23)
M08P19 (F7 INPUT DESTINA)	← 1.22 (M01B22)

Keypad Control (KPD CTRL):

Start command: Keypad RUN key.
Stop command: Keypad STOP key.
 * FWD/REV command: Keypad FWD/REV key.
Reset command: keypad STOP/RESET key or pushbutton at TB2-7-TB2-1.
Speed reference source: Keypad reference M01P04

Preset Speed Control (PRST CTRL):

Start command: RUN pushbutton at TB2-2-TB2-1.
Stop command: STOP pushbutton at TB2-5-TB2-1.
Reset command: keypad STOP/RESET key or pushbutton at TB2-7-TB2-1.
Speed reference source:

BIT2	BIT1	BIT0	DRIVE SPEED	DRIVE ACCEL/DECEL
0	0	0	PRESET FREQ1	ACCEL1/DECEL1
0	0	1	PRESET FREQ2	ACCEL2/DECEL2
0	1	0	PRESET FREQ3	ACCEL3/DECEL3
0	1	1	PRESET FREQ4	ACCEL4/DECEL4
1	0	0	PRESET FREQ5	ACCEL5/DECEL5
1	0	1	PRESET FREQ6	ACCEL6/DECEL6
1	1	0	PRESET FREQ7	ACCEL7/DECEL7
1	1	1	PRESET FREQ8	ACCEL8/DECEL8


Program the following preset speeds and corresponding acceleration/deceleration for the desired speed profile:
 **M01P25 to M01P32: PRESET FREQ 1 to PRESET FREQ 8
 M02P03: ACCEL 1
 M02P11 to M02P17: ACCEL 2 to ACCEL8
 M02P04: DECEL 1
 M02P21 to M02P27: DECEL 2 to DECEL 8

***NOTE:** Reverse function is disabled. If FWD/REV is needed set M06B23 (DISABLE REV ROT) to 0 and M06P18 (KEYPAD CONT MODE) to "ALL KEYS".

****NOTE:** If some of the preset speeds are negative, reverse rotation is allowed by setting M06B23 (DISABLE REV ROT) to 0 and M01B10 (BIPOLAR SELECT) to 1.

3-18 DRIVE PROGRAMMING

3.7.21 Preset Speeds with Keypad Start/Stop

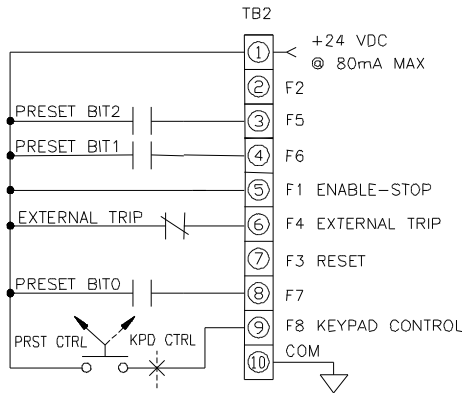

Change the following parameters in the order shown:

- M06P18 (KEYPAD CONT MODE) ← NO KEYS
- M06B15 (EN KEYPAD RUN) ← 1
- M06B16 (EN KEYPAD STOP) ← 1
- M06B17 (EN KEYPAD FWD/RV) ← 0
- M01B07 (SEL PRESET SPEED) ← 1
- M02B07 (RAMPS SELECTION) ← 1
- M08P15 (F5 INPUT DESTINA) ← 1.24 (M01B24)
- M08P17 (F6 INPUT DESTINA) ← 1.23 (M01B23)
- M08P19 (F7 INPUT DESTINA) ← 1.22 (M01B22)

The following applies for all modes below

- Reset command: keypad STOP/RESET key or pushbutton at TB2-7-TB2-1.

Keypad Control (KPD CTRL):

Start command: Keypad RUN key.

Stop command: Keypad STOP key.

- * FWD/REV command: Keypad FWD/REV key.

Speed reference source: Keypad reference M01P04

Preset Speed Control (PRST CTRL):

Start command: RUN pushbutton at TB2-2-TB2-1.

Stop command: STOP pushbutton at TB2-5-TB2-1.

Speed reference source:

			DRIVE	
BIT2	BIT1	BIT0	DRIVE SPEED	ACCEL/DECEL
0	0	0	PRESET FREQ1	ACCEL1/DECEL1
0	0	1	PRESET FREQ2	ACCEL2/DECEL2
0	1	0	PRESET FREQ3	ACCEL3/DECEL3
0	1	1	PRESET FREQ4	ACCEL4/DECEL4
1	0	0	PRESET FREQ5	ACCEL5/DECEL5
1	0	1	PRESET FREQ6	ACCEL6/DECEL6
1	1	0	PRESET FREQ7	ACCEL7/DECEL7
1	1	1	PRESET FREQ8	ACCEL8/DECEL8


Program the following preset speeds and corresponding acceleration/deceleration for the desired speed profile:

- **M01P25 to M01P32: PRESET FREQ 1 to PRESET FREQ 8
- M02P03: ACCEL 1
- M02P11 to M02P17: ACCEL 2 to ACCEL 8
- M02P04: DECEL 1
- M02P21 to M02P27: DECEL 2 to DECEL 8

***NOTE:** Reverse function is disabled. If FWD/REV is needed set M06B23 (DISABLE REV ROT) to 0 and M06B17 (EN KEYPAD FWD/RV) to 1.

****NOTE:** If some of the preset speeds are negative, reverse rotation is allowed by setting M06B23 (DISABLE REV ROT) to 0 and M01B10 (BIPOLAR SELECT) to 1.

3.7.21.a Auto Preset Scan Timer with "3-Wire" Control

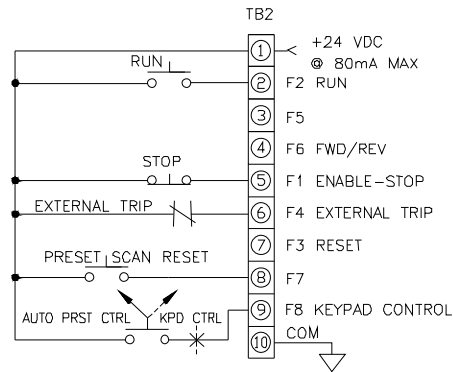

Change the following parameters in the order shown:

- M01B07 (SEL PRESET SPEED) ← 1 (ENABLE PRESET SCAN TIMER)
- M01B42 (PRESET SEL MODE) ← 1
- M01P43 (PRESET SCAN MODE) ← 1CYC&STOP
- M02B07 (RAMPS SELECTION) ← 1 (SYNC RAMPS TO PRESETS)
- M08P19 (F7 INPUT DESTINA) ← 1.45 (PRESET SCAN RSET)
- M09P14 (BIT SEL2 SOURCE1) ← 10.02 (DRIVE RUNNING)
- M09B15 (BIT SEL2 SR1 INV) ← 1
- M09P37 (BITSEL2 OUT DEST) ← 1.46 (PRESET SCAN HALT)

The following applies for all modes below

- Reset command: keypad STOP/RESET key or pushbutton at TB2-7-TB2-1.

Keypad Control (KPD CTRL):

Start command: Keypad RUN key.

Stop command: Keypad STOP key.

- * FWD/REV command: Keypad FWD/REV key.

Speed reference source: Keypad reference M01P04

Auto Preset Scan Timer Control (AUTO PRESET CTRL):

Start command: RUN pushbutton at TB2-2-TB2-1.

Stop command: STOP pushbutton at TB2-5-TB2-1.

Preset Scan Reset: Pushbutton at TB2-8-TB2-1.

Speed reference source: PRESET INDICATOR

BIT	BIT	BIT	DRIVE SPEED	DRIVE ACCEL/DECEL	TIME IN PRESETS
2	1	0			
0	0	0	PRESET FREQ1	ACCEL1/DECEL1	TIME IN PRESET 1
0	0	1	PRESET FREQ2	ACCEL2/DECEL2	TIME IN PRESET 2
0	1	0	PRESET FREQ3	ACCEL3/DECEL3	TIME IN PRESET 3
0	1	1	PRESET FREQ4	ACCEL4/DECEL4	TIME IN PRESET 4
1	0	0	PRESET FREQ5	ACCEL5/DECEL5	TIME IN PRESET 5
1	0	1	PRESET FREQ6	ACCEL6/DECEL6	TIME IN PRESET 6
1	1	0	PRESET FREQ7	ACCEL7/DECEL7	TIME IN PRESET 7
1	1	1	PRESET FREQ8	ACCEL8/DECEL8	TIME IN PRESET 8

Program the following preset speeds and corresponding acceleration/deceleration and time in presets for the desired speed profile:

- **M01P25 to M01P32: PRESET FREQ 1 to PRESET FREQ 8
- M02P03: ACCEL 1
- M02P11 to M02P17: ACCEL 2 to ACCEL 8
- M02P04: DECEL 1
- M02P21 to M02P27: DECEL 2 to DECEL 8
- M01P47 to M01P54: TIME IN PRESET 1 to TIME IN PRESET 8

***NOTE:** Reverse function is disabled. If FWD/REV is needed set M06B23 (DISABLE REV ROT) to 0 and M06B17 (EN KEYPAD FWD/RV) to 1.

****NOTE:** If some of the preset speeds are negative, reverse rotation is allowed by setting M06B23 (DISABLE REV ROT) to 0 and M01B10 (BIPOLAR SELECT) to 1.

Additional Notes:

When Programmed as shown, after the RUN pushbutton is pressed, the drive will run one cycle, then stop. If the drive is stopped by pressing the STOP pushbutton before the cycle has completed, the drive will decelerate using the presently active decel rate and the scan cycle is paused or halted at its present stage. This is because parameter M01B46 (PRESET SCAN HALT) is set at 1 when the drive is not in the RUN state. If the RUN pushbutton is now pressed, the scan cycle will resume from the beginning of the stage when the drive was stopped and the cycle was suspended. If, after the initial stop, one desires to reset the cycle before starting the drive again, press the Preset Scan Reset pushbutton before pressing the RUN pushbutton.


If a fault occurs in the middle of a cycle, the scan cycle is also paused or halted at its present stage. After fault is reset, the scan cycle can be resumed or reset to the beginning as described in the section above.

As a final note, if the resumption of a cycle after stopping or upon clearing a fault is not desired, but instead, it is desired that the cycle restart at the beginning upon pressing the RUN pushbutton, make the following changes:

Eliminate the Preset Scan Reset pushbutton and the programming of parameter M08P19 (F7 INPUT DESTINA).

Reprogram parameter M09P37 (BITSEL2 OUT DEST) to 1.45 (PRESET SCAN RSET).

3.7.21.b Auto Preset Scan Timer with Keypad Start/Stop

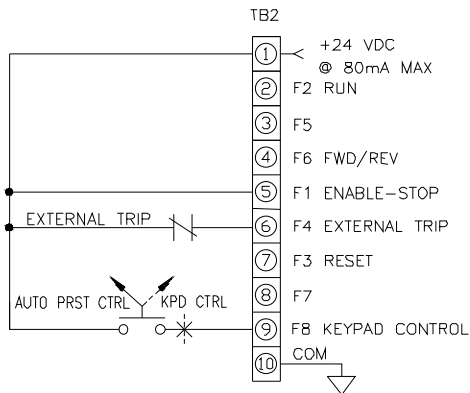

Change the following parameters in the order shown:

- M01B07 (SEL PRESET SPEED) ← 1
- M01B42 (PRESET SEL MODE) ← 1
- M01P43 (PRESET SCAN MODE) ← 1CYC&STOP
- M02B07 (RAMPS SELECTION) ← 1 (SYNC RAMPS TO PRESETS)
- M06P18 (KEYPAD CONT MODE) ← NO KEYS
- M06B15 (EN KEYPAD RUN) ← 1
- M06B16 (EN KEYPAD STOP) ← 1
- M06B17 (EN KEYPAD FWD/RV) ← 0
- M09P08 (BIT SEL1 SOURCE1) ← 6.13 (KEYPAD STOP)
- M09P10 (BIT SEL1 SOURCE2) ← 10.02 (DRIVE RUNNING)
- M09B11 (BIT SEL1 SR2 INV) ← 1
- M09P14 (BIT SEL2 SOURCE1) ← 10.02 (DRIVE RUNNING)
- M09B15 (BIT SEL2 SR1 INV) ← 1
- M09P35 (BITSEL1 OUT DEST) ← 1.45 (PRESET SCAN RSET)
- M09P37 (BITSEL2 OUT DEST) ← 1.46 (PRESET SCAN HALT)

The following applies for all modes below

- Reset command: keypad STOP/RESET key or pushbutton at TB2-7-TB2-1.

Keypad Control (KPD CTRL):

Start command: Keypad RUN key.

Stop command: Keypad STOP key.

- * FWD/REV command: Keypad FWD/REV key.

Speed reference source: Keypad reference M01P04

Auto Preset Scan Timer Control (AUTO PRESET CTRL):

Start command: Keypad RUN key.

Stop command: Keypad STOP key.

Preset Scan Reset: Keypad STOP/RESET key when drive is not in RUN state.

Speed reference source: PRESET INDICATOR

BIT 2	BIT 1	BIT 0	DRIVE SPEED	DRIVE ACCEL/DECEL	TIME IN PRESETS
0	0	0	PRESET FREQ1	ACCEL1/DECEL1	TIME IN PRESET 1
0	0	1	PRESET FREQ2	ACCEL2/DECEL2	TIME IN PRESET 2
0	1	0	PRESET FREQ3	ACCEL3/DECEL3	TIME IN PRESET 3
0	1	1	PRESET FREQ4	ACCEL4/DECEL4	TIME IN PRESET 4
1	0	0	PRESET FREQ5	ACCEL5/DECEL5	TIME IN PRESET 5
1	0	1	PRESET FREQ6	ACCEL6/DECEL6	TIME IN PRESET 6
1	1	0	PRESET FREQ7	ACCEL7/DECEL7	TIME IN PRESET 7
1	1	1	PRESET FREQ8	ACCEL8/DECEL8	TIME IN PRESET 8

Program the following preset speeds and corresponding acceleration/deceleration and time in presets for the desired speed profile:

**M01P25 to M01P32: PRESET FREQ 1 to PRESET FREQ 8

M02P03: ACCEL 1

M02P11 to M02P17: ACCEL 2 to ACCEL8

M02P04: DECEL 1

M02P21 to M02P27: DECEL 2 to DECEL 8

M01P47 to M01P54: TIME IN PRESET 1 to TIME IN PRESET 8

***NOTE:** Reverse function is disabled. If FWD/REV is needed set M06B23 (DISABLE REV ROT) to 0 and M06B17 (EN KEYPAD FWD/RV) to 1.

****NOTE:** If some of the preset speeds are negative, reverse rotation is allowed by setting M06B23 (DISABLE REV ROT) to 0 and M01B10 (BIPOLAR SELECT) to 1.

Additional Notes:

When Programmed as shown, after the Keypad RUN key is pressed, the drive will run one cycle, then stop. If the drive is stopped by pressing the Keypad STOP key before the cycle has completed, the drive will decelerate using the presently active decel rate and the scan cycle is paused or halted at its present stage. This is because parameter M01B46 (PRESET SCAN HALT) is set at 1 when the drive is not in the RUN state. If the Keypad RUN key is now pressed, the scan cycle will resume from the beginning of the stage when the drive was stopped and the cycle was suspended. If, after the initial stop, one desires to reset the cycle before starting the drive again, press the Keypad STOP key before pressing the Keypad RUN key.

If a fault occurs in the middle of a cycle, the scan cycle is also paused or halted at its present stage. If the fault is reset by using the Keypad STOP key, the scan cycle is also reset to the beginning because of the way the Keypad STOP key has been programmed by the BIT SEL1 parameters. If the fault is reset using pushbutton at TB2-7-TB2-1, the scan cycle will be resumed when the Keypad RUN key is pressed.

As a final note, if the resumption of a cycle after stopping or upon clearing a fault is not desired, but instead, it is desired that the cycle restart at the beginning upon pressing the RUN pushbutton, make the following changes:

3-20 DRIVE PROGRAMMING

De-activate the following parameters by reprogramming them to:

M09P08 (BIT SEL1 SOURCE1) ← 0.0
M09P10 (BIT SEL1 SOURCE2) ← 0.0

M09B11 (BIT SEL1 SR2 INV) ← 0
M09P35 (BITSEL1 OUT DEST) ← 0.0

Reprogram parameter M09P37 (BITSEL2 OUT DEST) to 1.45 (PRESET SCAN RSET).

3.7.22 Auto-Restart Typical Setup

Example #1:

M06P02 (AUTO-START MODE) ← RUNNING
M10B25 (ENABLE AUTORESET) ← 1
M10P26 (RESET DELAY) ← 5
M10P27 (NO OF AR ATTEMPTS) ← 5
M10B28 (VFD OK DELAYED) ← 0
M10P35 (AUTORESET MODE) ← PWR LOSS

Example #2:

M06P02 (AUTO-START MODE) ← RUNNING
M10B25 (ENABLE AUTORESET) ← 1
M10P26 (RESET DELAY) ← 5
M10P27 (NO OF AR ATTEMPTS) ← 5
M10B28 (VFD OK DELAYED) ← 1
M10P35 (AUTORESET MODE) ← PWR LOSS

The following is a description of the parameters above that can be changed to achieve different auto-restart features:

M06P02 "AUTO-START MODE":

There are three modes:

- [0] Disabled: The drive will not automatically start when AC power is applied.
- [1] Always: The drive always starts when AC power is applied.
- [2] Running: The drive starts only if it had been running when AC power was previously removed.

M10B25 "ENABLE AUTORESET":

If set to 1, the drive will be automatically reset when tripped after a programmed delay set in M10P26 "RESET DELAY"

M10P26 "RESET DELAY":

Enter the auto-reset delay in seconds

When the programmed value of M10P27 "NO OF AR ATTEMPTS" is reached, any further trips of the same type will not cause a reset. A trip of a different type will cause a reset.

M10P27 "NO OF AR ATTEMPTS":

If no trip has occurred for 10 minutes, the reset count is cleared

M10B28 "VFD OK DELAYED"

This parameter can be used to hold "Drive Normal" status bit M10B01 at 1 until the last Auto-Reset Attempt is used.



Set M10B28 to 1 for "Drive Normal" status bit M10B01 to remain set at 1 every time a trip occurs and "Auto-Reset" is going to occur.

Set M10B28 to 0 to immediately clear "Drive Normal" status bit M10B01 at 0 every time a trip occurs, regardless of any Auto-reset that may occur.

M10P35 "AUTORESET MODE"

Use this parameter to select how parameter M10B25 "ENABLE AUTORESET" function operates. If "PWR LOSS" is selected, only the undervoltage fault is cleared and if "ALLFAULTS" is selected than all faults are cleared.

3.7.23 PID with "2-Wire" Control

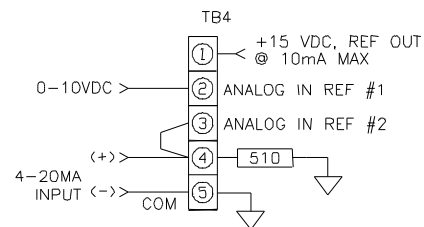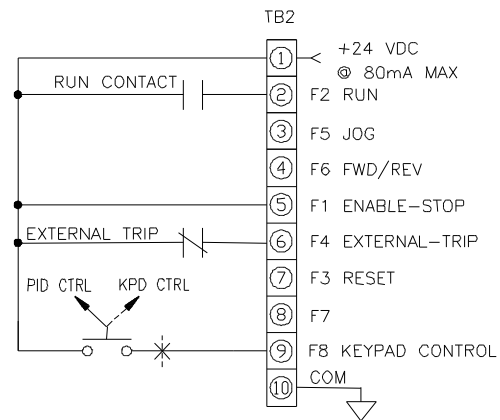

Change the following parameters in the order shown:

M06P07 (SEQUENCING MODE) ← 2-WIRE
M01B07 (SEL PRESET SPEED) ← 1
M14P03 (PID REF SOURCE) ← 1.19 (M01P19)
M14P04 (PID FEEDBACK SRC) ← 1.20 (M01P20)
M14B08 (PID ENABLE) ← 1
M14P15 (PID OUT SCALING) ← 0.060**
M14P16 (PID OUT DESTINAT) ← 1.25*** (M01P25)

See 3.7.26 PID Additional Notes for more information.

Keypad Control (KPD CTRL):

Start/Stop command: RUN contact at TB2-2-TB2-1.

* FWD/REV command: Contact at TB2-4-TB2-1.

Jog command: JOG contact at TB2-3-TB2-1.

Reset command: keypad STOP/RESET key or pushbutton at TB2-7-TB2-1.

Speed reference: Keypad reference M01P04

PID Control (PID CTRL):

Start/Stop command: RUN contact at TB2-2-TB2-1.

PID Reference: Analog Ref#1 at TB4-2, 0-10Vdc .

PID Feedback: Analog Ref#2 at TB4-4, 4-20MA.


- * **FWD/REV command:** Contact at TB2-4-TB2-1.
- Jog command:** JOG contact at TB2-3-TB2-1.
- Reset command:** keypad STOP/RESET key or pushbutton at TB2-7-TB2-1.

**For 60Hz motor speed range, scale factor = 60/1000
(60 is 60Hz and 1000 is maximum value of parameter M01P25 "PRESET FREQ 1").

***Since the PID output in this example controls the speed, one of the preset speed parameters M01P25 "PRESET FREQ 1" is used as PID output destination. If the PID is to trim speed then it is suggested that parameter M01P15 "REF OFFSET" is used and set P01M16 "REF OFFSET SEL" to 1.

NOTE: Reverse function is disabled. If FWD/REV is needed set M06B23 (DISABLE REV ROT) to 0.

3.7.24 PID with "3-Wire" Control

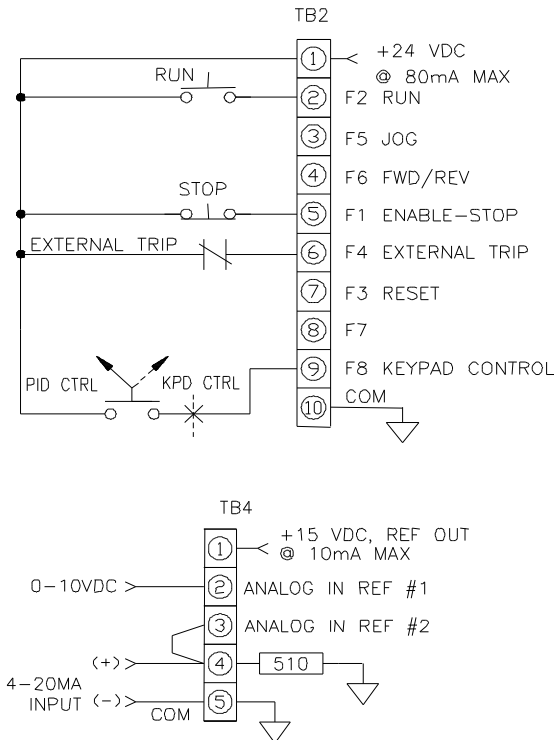

Change the following parameters in the order shown:

- M01B07 (SEL PRESET SPEED) ← 1
- M14P03 (PID REF SOURCE) ← 1.19 (M01P19)
- M14P04 (PID FEEDBACK SRC) ← 1.20 (M01P20)
- M14B08 (PID ENABLE) ← 1
- M14P15 (PID OUT SCALING) ← 0.060**
- M14P16 (PID OUT DESTINAT) ← 1.25*** (M01P25)

See 3.7.26 PID Additional Notes for more information.

Keypad Control (KPD CTRL):

Start command: Keypad RUN key.

Stop command: Keypad STOP key.

- * **FWD/REV command:** Keypad USER key.
- Jog command:** JOG contact at TB2-3-TB2-1.
- Reset command:** keypad STOP/RESET key or pushbutton at TB2-7-TB2-1.
- Speed reference source:** Keypad reference M01P04

PID Control (PID CTRL):

Start command: RUN pushbutton at TB2-2-TB2-1.

Stop command: STOP pushbutton at TB2-5-TB2-1.

PID Reference: Analog Ref#1 at TB4-2, 0-10Vdc .

PID Feedback: Analog Ref#2 at TB4-4, 4-20MA.


- * **FWD/REV command:** Contact at TB2-4-TB2-1.
- Jog command:** JOG contact at TB2-3-TB2-1.
- Reset command:** keypad STOP/RESET key or pushbutton at TB2-7-TB2-1.

**For 60Hz motor speed range, scale factor = 60/1000
(60 is 60Hz and 1000 is maximum value of parameter M01P25 "PRESET FREQ 1").

***Since the PID output in this example controls the speed, one of the preset speed parameters M01P25 "PRESET FREQ 1" is used as PID output destination. If the PID is to trim speed then it is suggested that parameter M01P15 "REF OFFSET" is used and set P01M16 "REF OFFSET SEL" to 1.

NOTE: Reverse function is disabled. If FWD/REV is needed set M06B23 (DISABLE REV ROT) to 0 and M06P18 (KEYPAD CONT MODE) to "ALL KEYS".

3.7.25 PID with Keypad Start/Stop

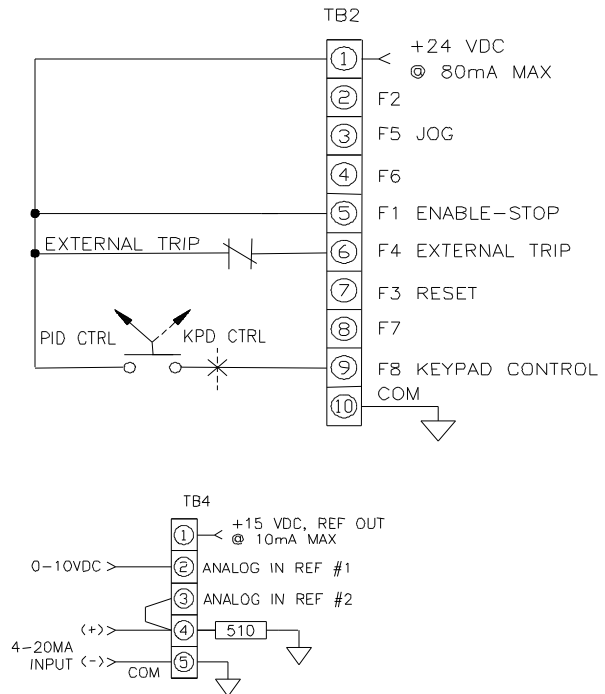

Change the following parameters in the order shown:

- M06P18 (KEYPAD CONT MODE) ← NO KEYS
- M06B15 (EN KEYPAD RUN) ← 1
- M06B16 (EN KEYPAD STOP) ← 1
- M06B17 (EN KEYPAD FWD/RV) ← 0
- M01B07 (SEL PRESET SPEED) ← 1
- M14P03 (PID REF SOURCE) ← 1.19 (M01P19)
- M14P04 (PID FEEDBACK SRC) ← 1.20 (M01P20)
- M14B08 (PID ENABLE) ← 1
- M14P15 (PID OUT SCALING) ← 0.060**
- M14P16 (PID OUT DESTINAT) ← 1.25*** (M01P25)

See 3.7.26 PID Additional Notes for more information.

3-22 DRIVE PROGRAMMING

Keypad Control (KPD CTRL):

Start command: Keypad RUN key.

Stop command: Keypad STOP key.

Jog command: JOG contact at TB2-3-TB2-1.

Reset command: Keypad STOP/RESET key or pushbutton at TB2-7-TB2-1.

* FWD/REV command: Keypad USER key

Speed reference source: Keypad reference M01P04

PID Control (PID CTRL):

Start command: Keypad RUN key.

Stop command: Keypad STOP key.

PID Reference: Analog Ref#1 at TB4-2, 0-10Vdc .

PID Feedback: Analog Ref#2 at TB4-4, 4-20MA.

* FWD/REV command: Keypad USER key.

Jog command: JOG contact at TB2-3-TB2-1.

Reset command: keypad STOP/RESET key or pushbutton at TB2-7-TB2-1.

**For 60Hz motor speed range, scale factor = 60/1000

(60 is 60Hz and 1000 is maximum value of parameter M01P25 "PRESET FREQ 1").

***Since the PID output in this example controls the speed, one of the preset speed parameters M01P25 "PRESET FREQ 1") is used as PID output destination. If the PID is to trim speed then it is suggested that parameter M01P15 "REF OFFSET" is used and set P01M16 "REF OFFSET SEL" to 1.

***NOTE:** Reverse function is disabled. If FWD/REV is needed set M06B23 (DISABLE REV ROT) to 0 and M06B17 (EN KEYPAD FWD/RV) to 1.

3.7.26 PID Additional Notes:

The following applies to the above PID setups:

In above setups PID setpoint M14P03 is analog ref #1, 0-10Vdc.

In above setups PID feedback M14P04 is analog ref #2, 4-20MA.

If a digital setpoint is desired, one can choose for example a preset frequency parameter such as M01P26 "PRESET FREQ 2".

Note that M00P06 "ACCEL RAMP 1" & M00P07 "DECEL RAMP 1" set the acceleration and deceleration rates of the PID output. Use M14P07 "PID REF SLEWRATE" to ramp the PID setpoint M14P03.

PID proportional gain M14P10, integral gain M14P11 and derivative gain M14P12:

With an error of 100%, if M14P10 = 1.000 the output produced by the proportional term is 100%.

With an error of 100%, if M14P11 = 1.000 the output produced by the integral term will increase linearly by 100% every second.

With an error that is increasing by 100% per second, if M14P12 = 1.000 the output produced by the D term will be 100%.

If a minimum and a maximum are needed for the PID output, use M14P13 "PID HIGH LIMIT" and M14P14 "PID LOW LIMIT".

PID Input Scaling:

All variable inputs to the PID (M14P02, M14P03 & M14P04) are automatically scaled to variables having the range $\pm 100.0\%$, or 0 - 100.0% if they are unipolar.

Example: PID setpoint M14P03 is programmed as M01P26 "PRESET FREQ 2".

Since M01P26 has a range ± 1000.0 a value entered in M01P26 of +1000.0 is automatically scaled to +100% for M14P03 and a value of +500.0 is automatically scaled to 50% for M14P03.

PID Output Scaling:

The output after the scale factor M14P15 is automatically scaled to match the range of the destination parameter.

Example: motor speed range is 60Hz and PID destination is M01P25 "PRESET FREQ 1".

Since M01P25 has a range of ± 1000.0 the PID output scale M14P15 should be set to 0.060 (60/1000).

Displaying PID Setpoint & Feedback:

Use the two programmable display parameters M00P19 & M00P20. M11P19 defines M00P19 and M11P20 defines M11P20.

M14P17 is a parameter that monitors PID reference and internally scaled to $\pm 100\%$.

M14P18 is a parameter that monitors PID feedback and internally scaled to $\pm 100\%$.

M11P19 ← M14P17 (display parameter M00P19 = M14P17)

M11P20 ← M14P18 (display parameter M00P20 = M14P18)

To scale M00P19:

M11P21 ← 1.000 (to display units in % scale = 100% x 1.000).

The scale can be changed to represent a meaningful engineering unit.

To scale M00P20:

M11P22 ← 1.000 (to display units in % scale = 100% x 1.000).

The scale can be changed to represent a meaningful engineering unit.

To change text in M00P19 & M00P20:

M11P31 ← SETPOINT (text for M00P19)

M11P32 ← FEEDBACK (text for M00P20)

Note: A user can setup M00P19 & M00P20 scale factors to mean engineering units such as 250 PSI for range. Also a user can choose M00P19 & M00P20 text from a selection of appropriate texts defined in M11P31 & M11P32.

4.0 MENU AND PARAMETER DESCRIPTIONS

4.1 MENU DESCRIPTIONS

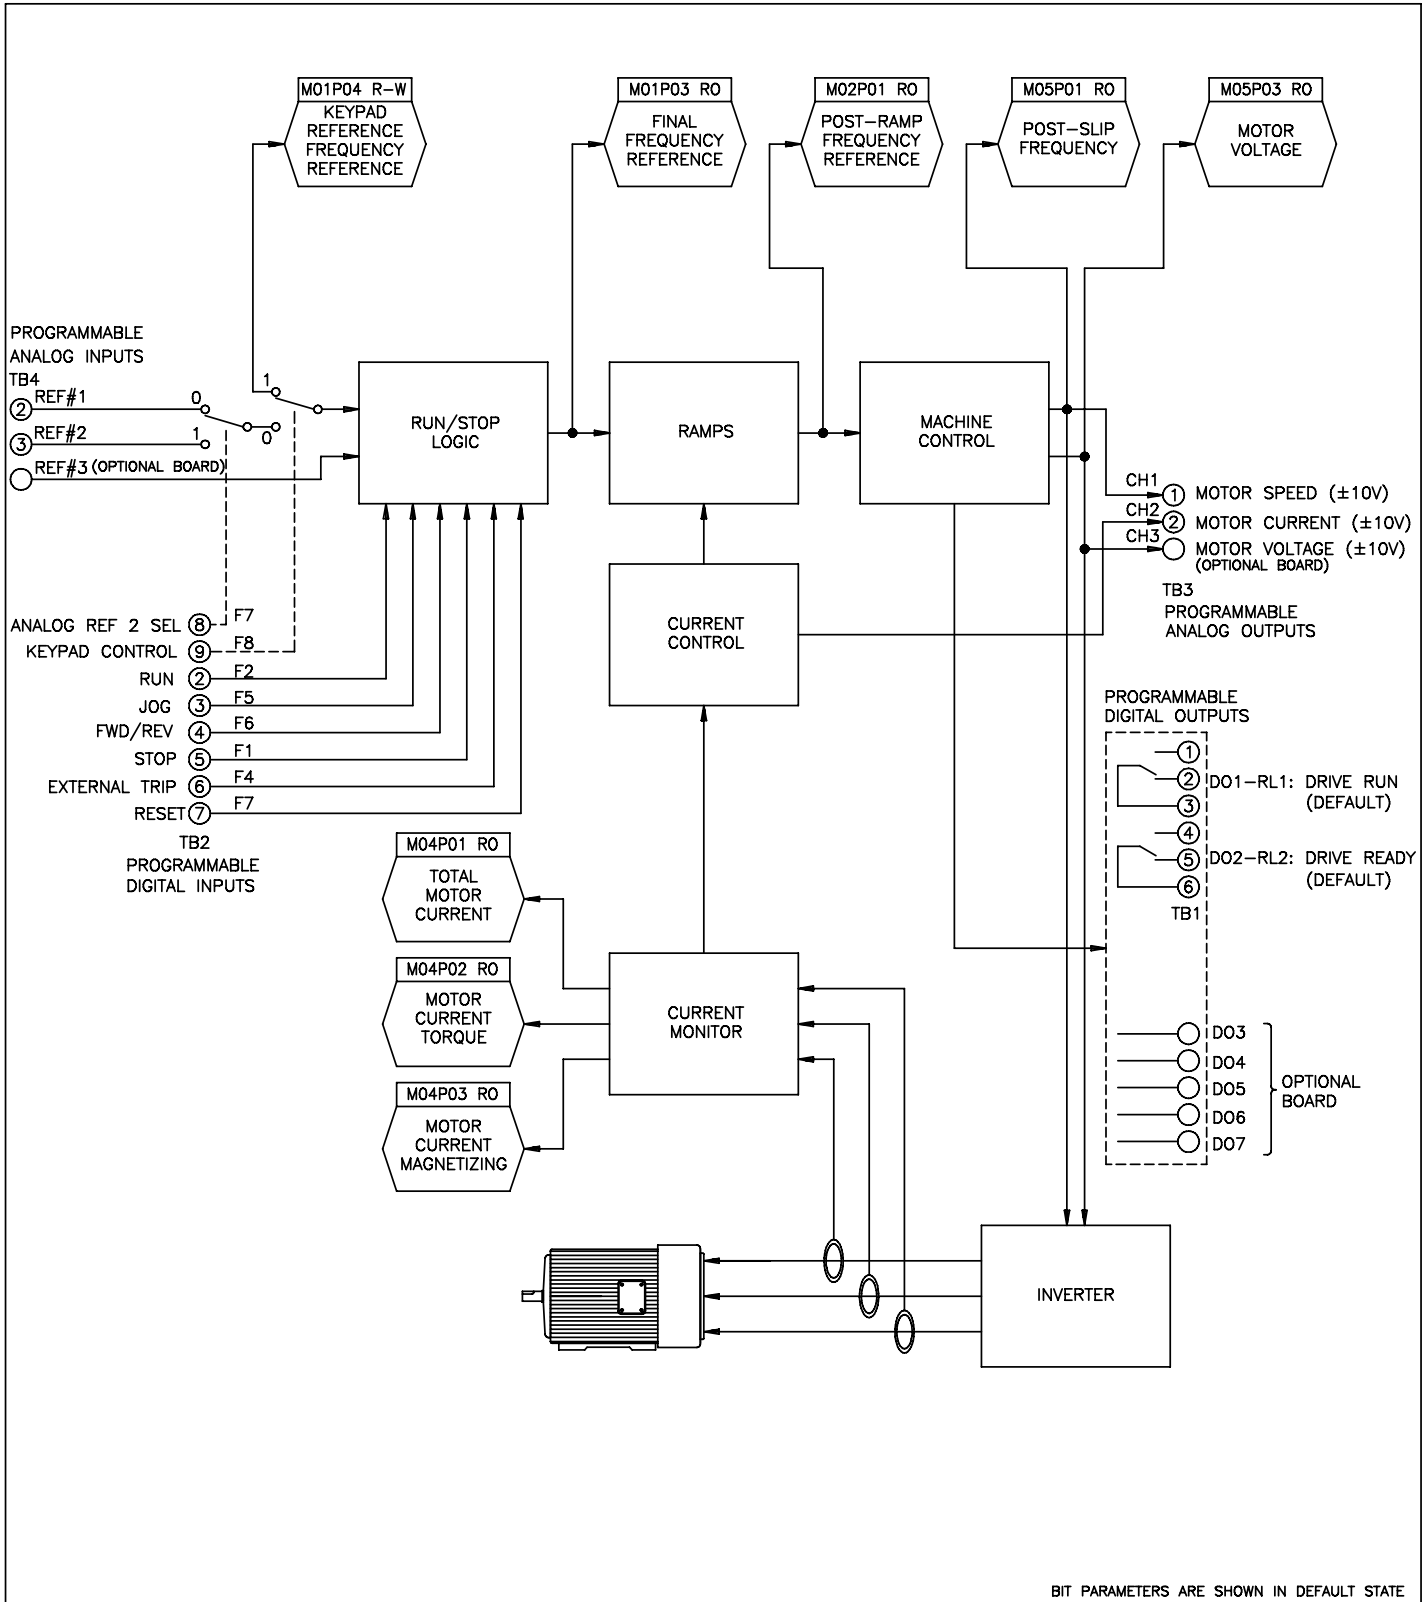


Figure 4-1
 Basic Structure of the Control System

4-2 MENU AND PARAMETER DESCRIPTION

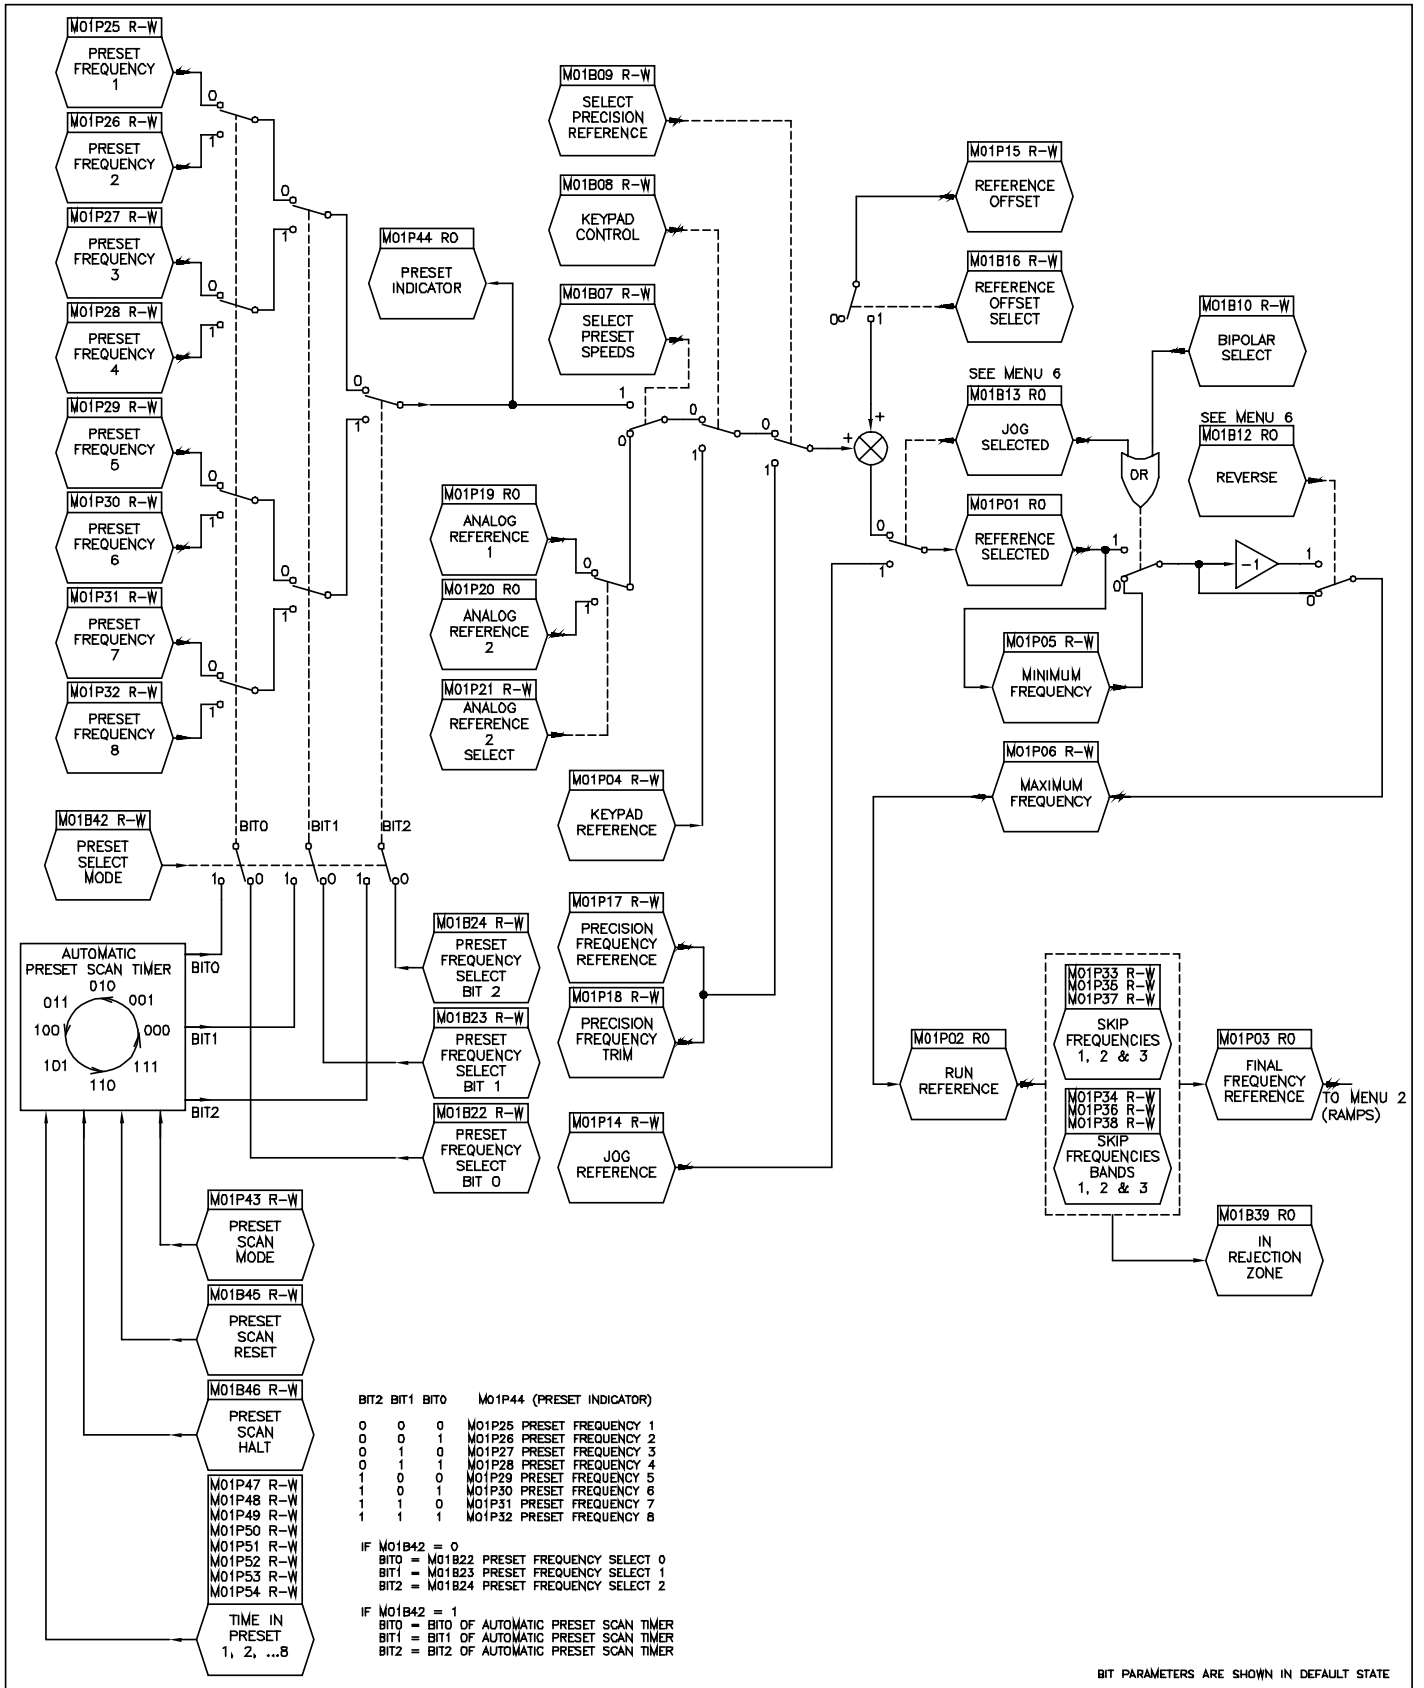


Figure 4-2
Menu 1 - Frequency Reference, Limits and Filters.

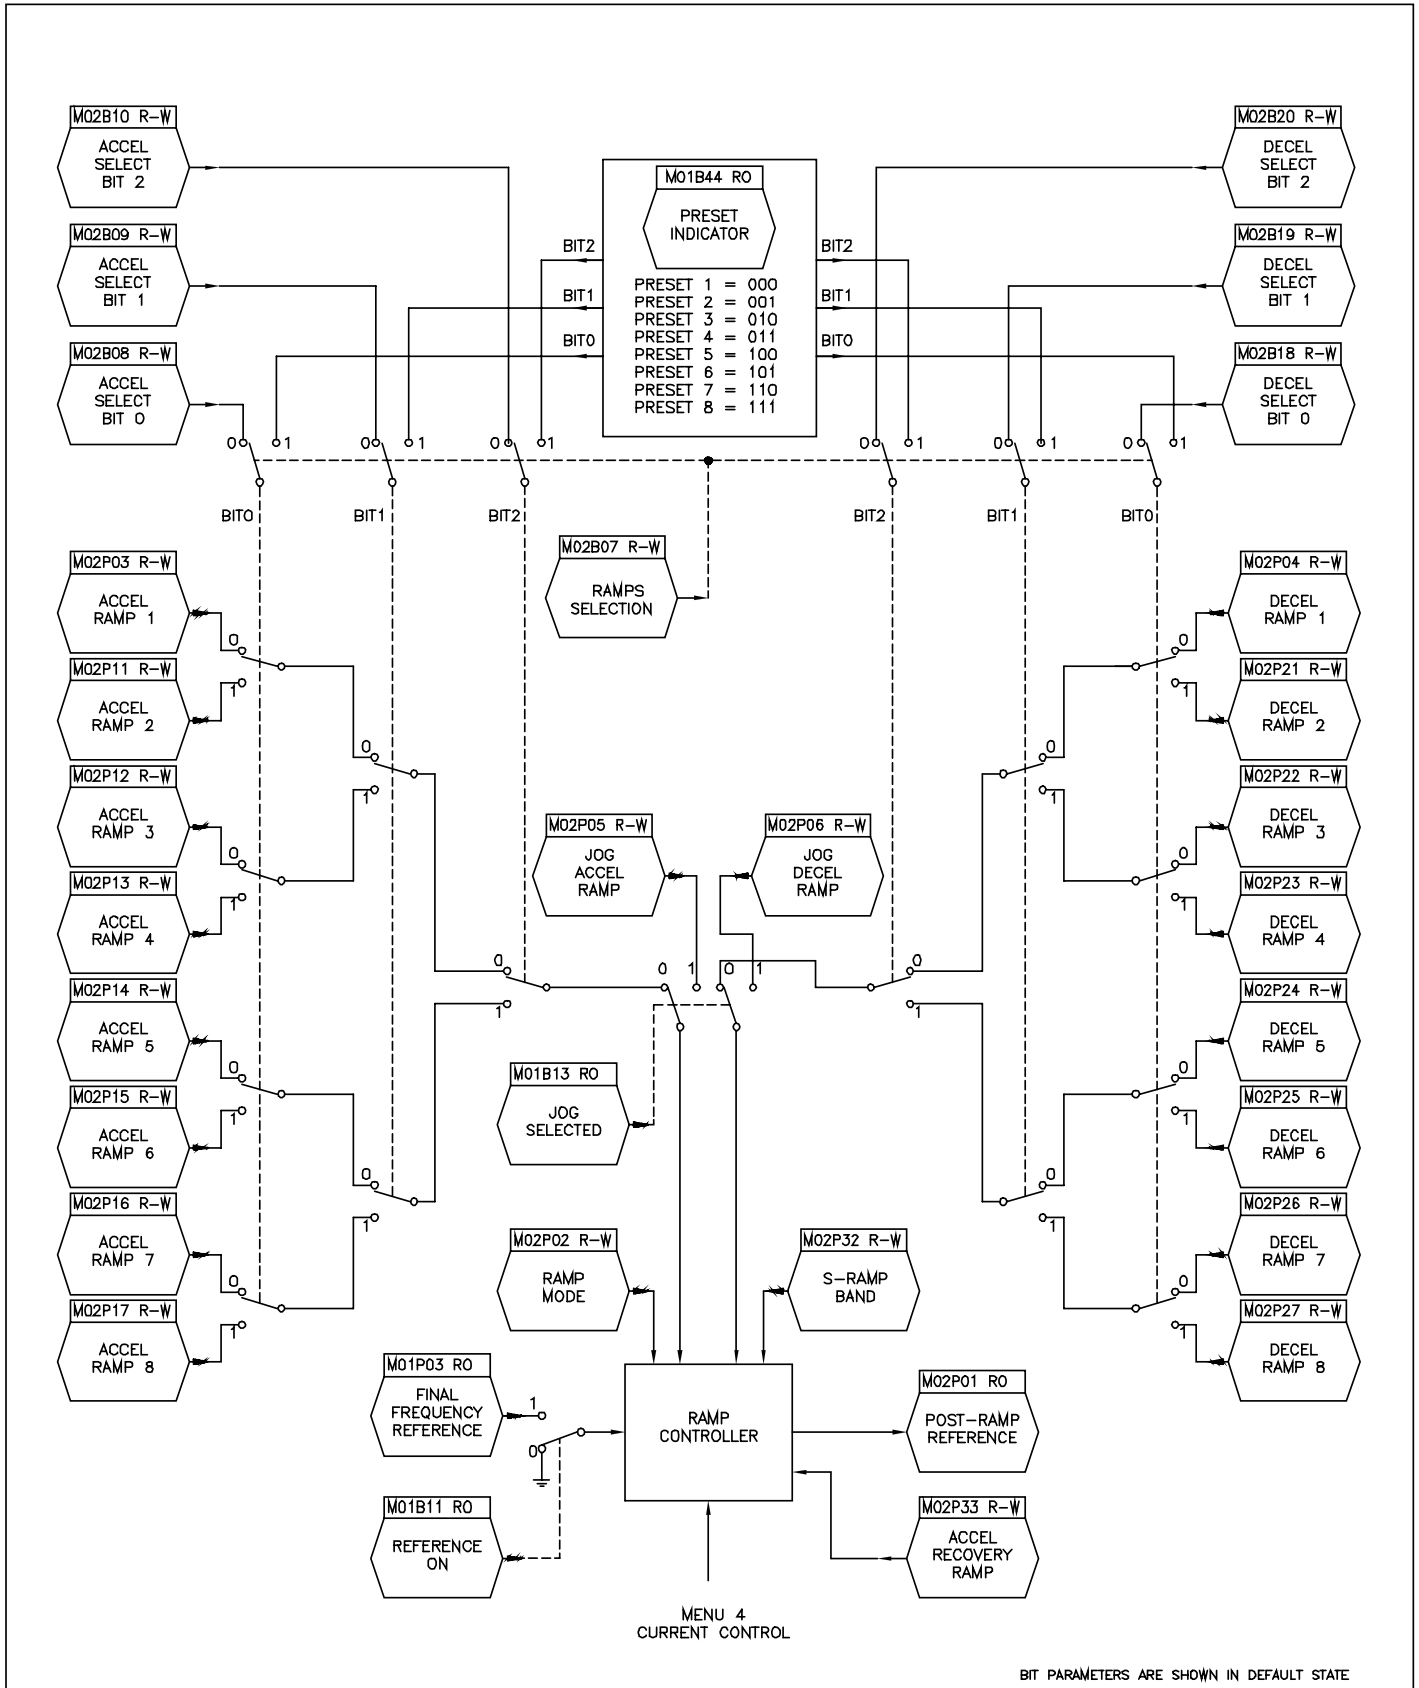


Figure 4-3
Menu 2 - Ramps

4-4 MENU AND PARAMETER DESCRIPTION

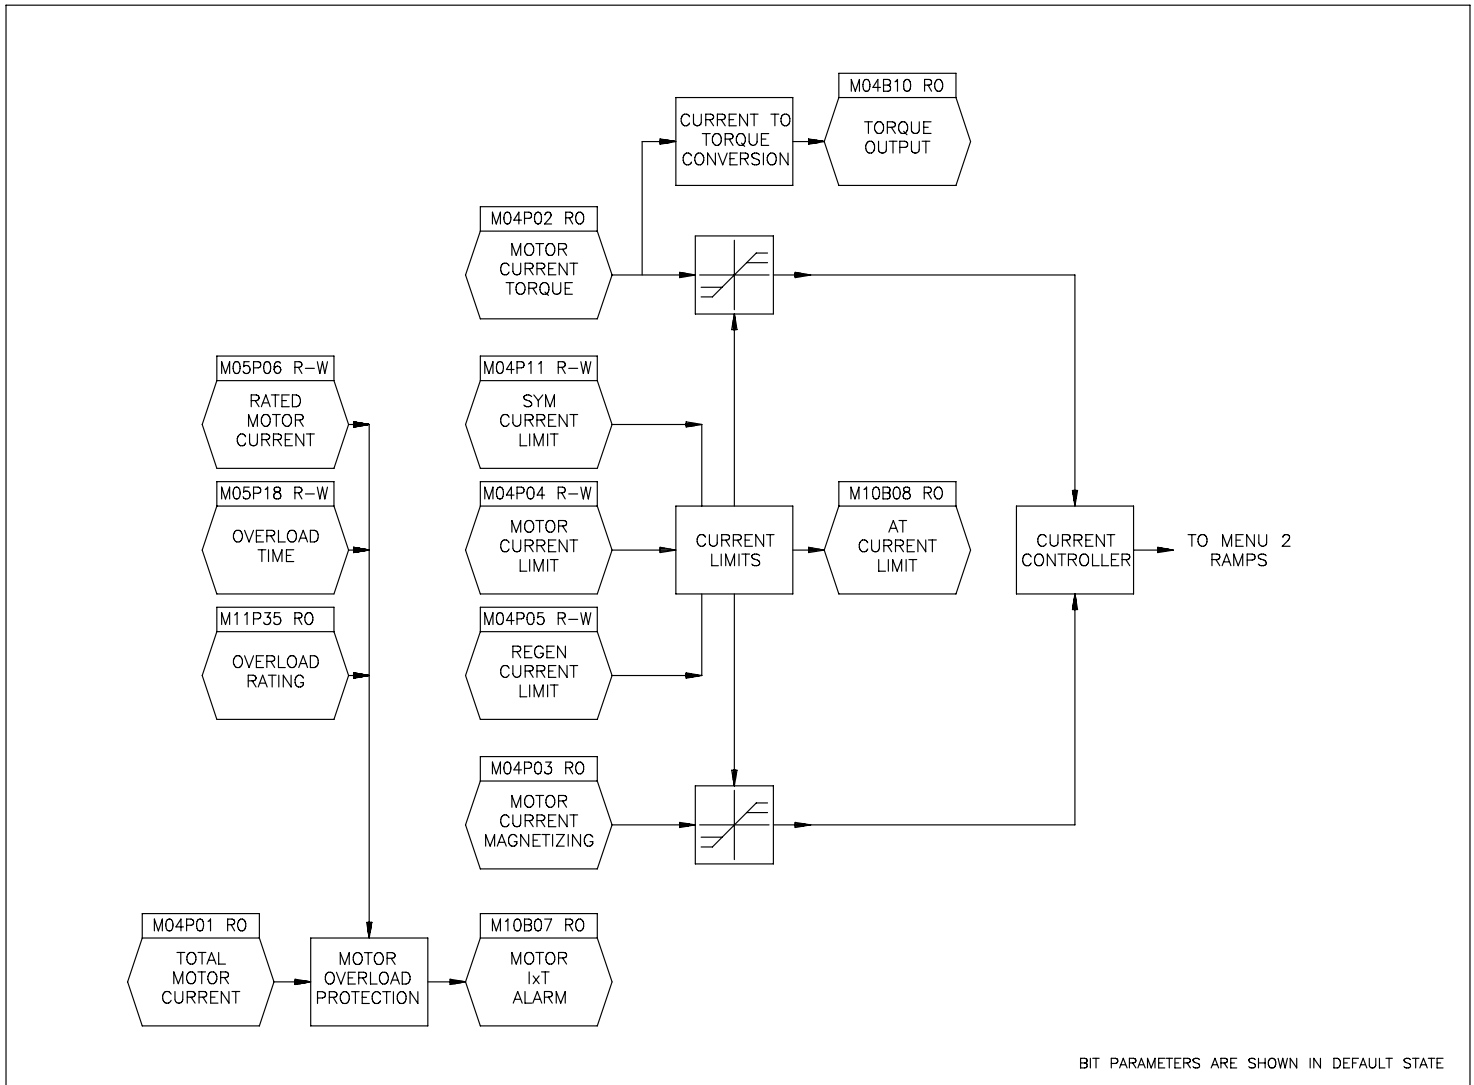


Figure 4-4
Menu 4 - Current Control.

MOTOR DATA	
M05P06	RW RATED MOTOR CURRENT
M05P07	RW RATED MOTOR RPM
M05P08	RW RATED MOTOR VOLTAGE
M05P09	RW BASE MOTOR FREQUENCY
M05P10	RW NUMBER OF POLES
M05P13	RW TORQUE I FACTOR

INPUT VOLTAGES	
M05P04	RO DC BUS VOLTAGE
M05P33	RW RATED LINE VOLTAGE
M05P34	RO AC LINE VOLTAGE
M05B38	RW SLIP COMP ENABLE
M05P47	RO AC LINE RIPPLE
M05P48	RO DC BUS RIPPLE
M05P50	RO BUS CAPACITANCE

OUTPUT FREQUENCIES	
M05P01	RO POST SLIP FREQUENCY
M05P02	RO MOTOR SHAFT RPM

VOLTAGE BOOST	
M05P11	RW AUTO BOOST VOLTAGE
M05P12	RW VOLTAGE CONTROL MODE
M05P14	RW FIXED BOOST VOLTAGE

OUTPUT VOLTAGES	
M05P03	RO MOTOR VOLTAGE

PWM CARRIER	
M05P20	RW MAXIMUM PWM CARRIER
M05P21	RW MINIMUM PWM CARRIER
M05P22	RW SPEED @ MAXIMUM CARRIER
M05P23	RW SPEED @ MINIMUM CARRIER
M05P24	RO PWM CARRIER FREQUENCY

MOTOR POWER & OVERLOAD TIME	
M05P05	RO MOTOR POWER
M05P18	RW OVERLOAD TIME
M05P54	RW IxT BREAK FREQ
M05P55	RW IxT ZER FREQ THLD

BIT PARAMETERS ARE SHOWN IN DEFAULT STATE

Figure 4-5
Menu 5 - Motor Control

4-6 MENU AND PARAMETER DESCRIPTION

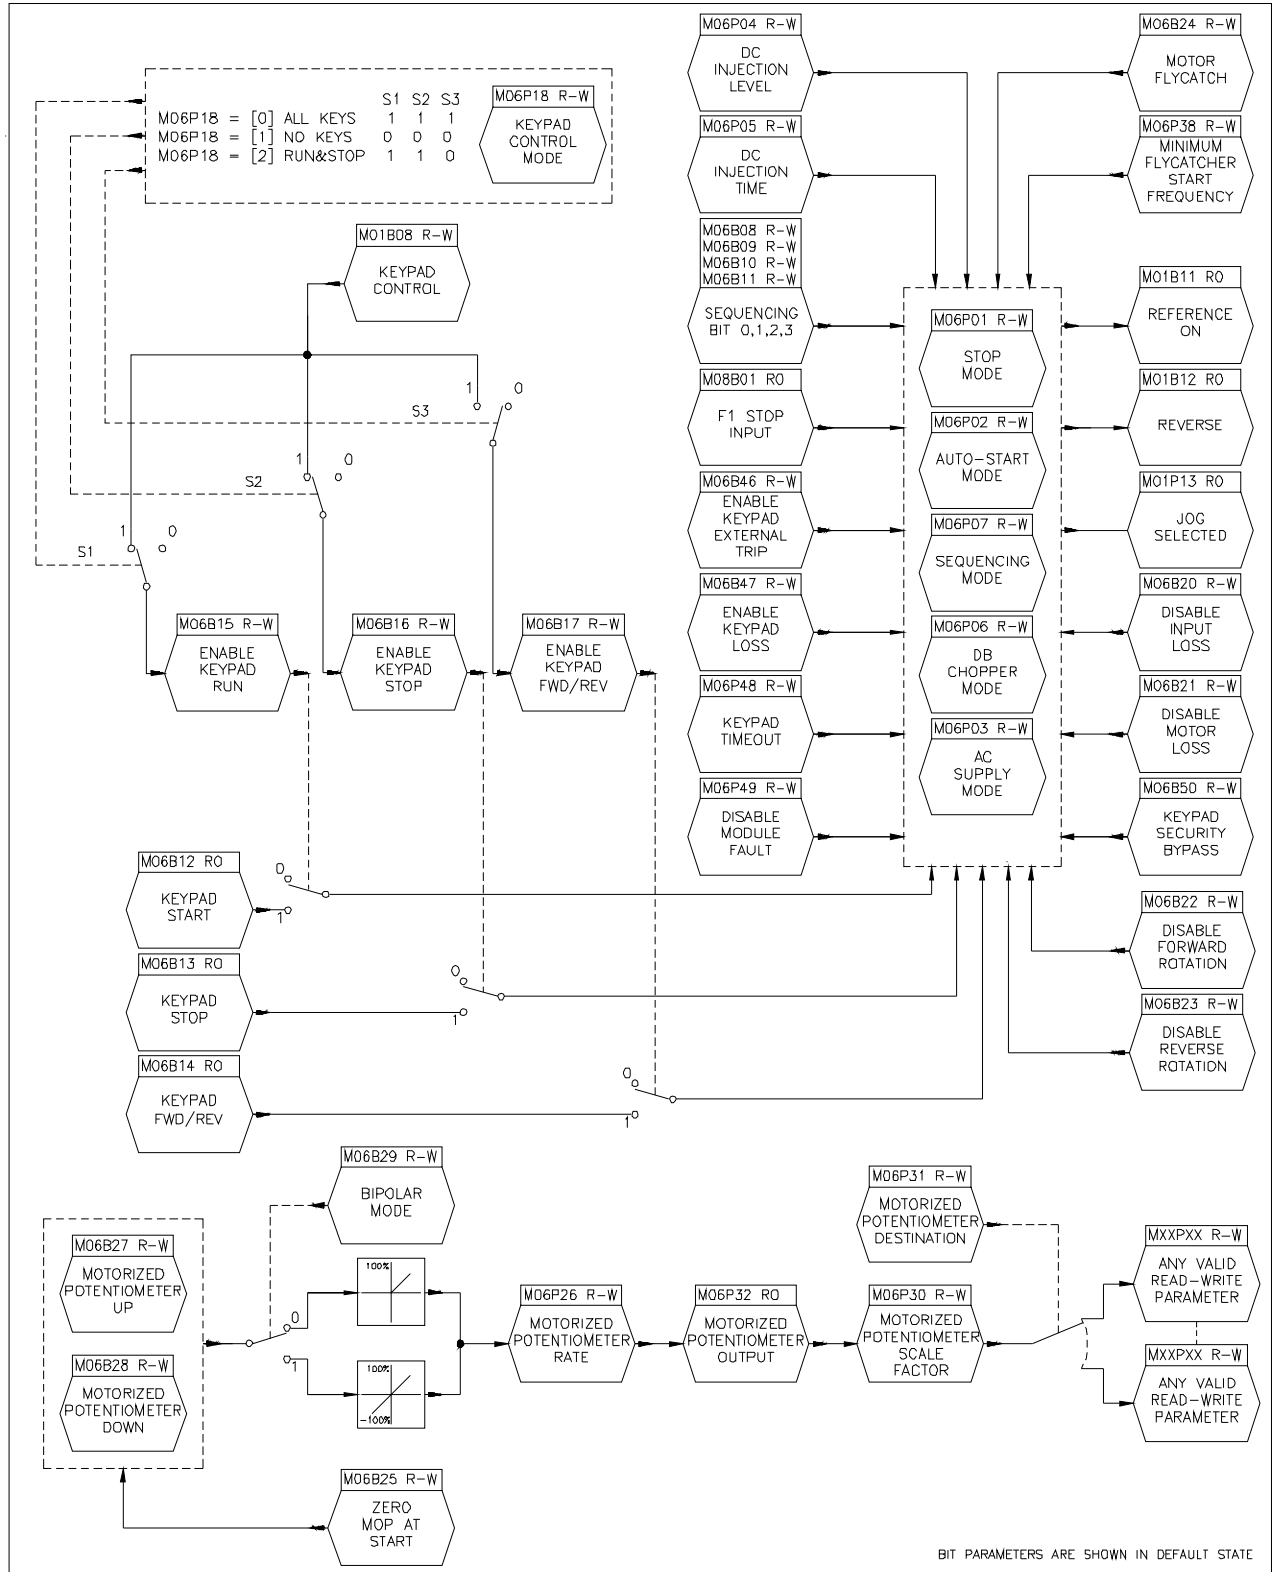


Figure 4-6
Menu 6 - Operational Modes

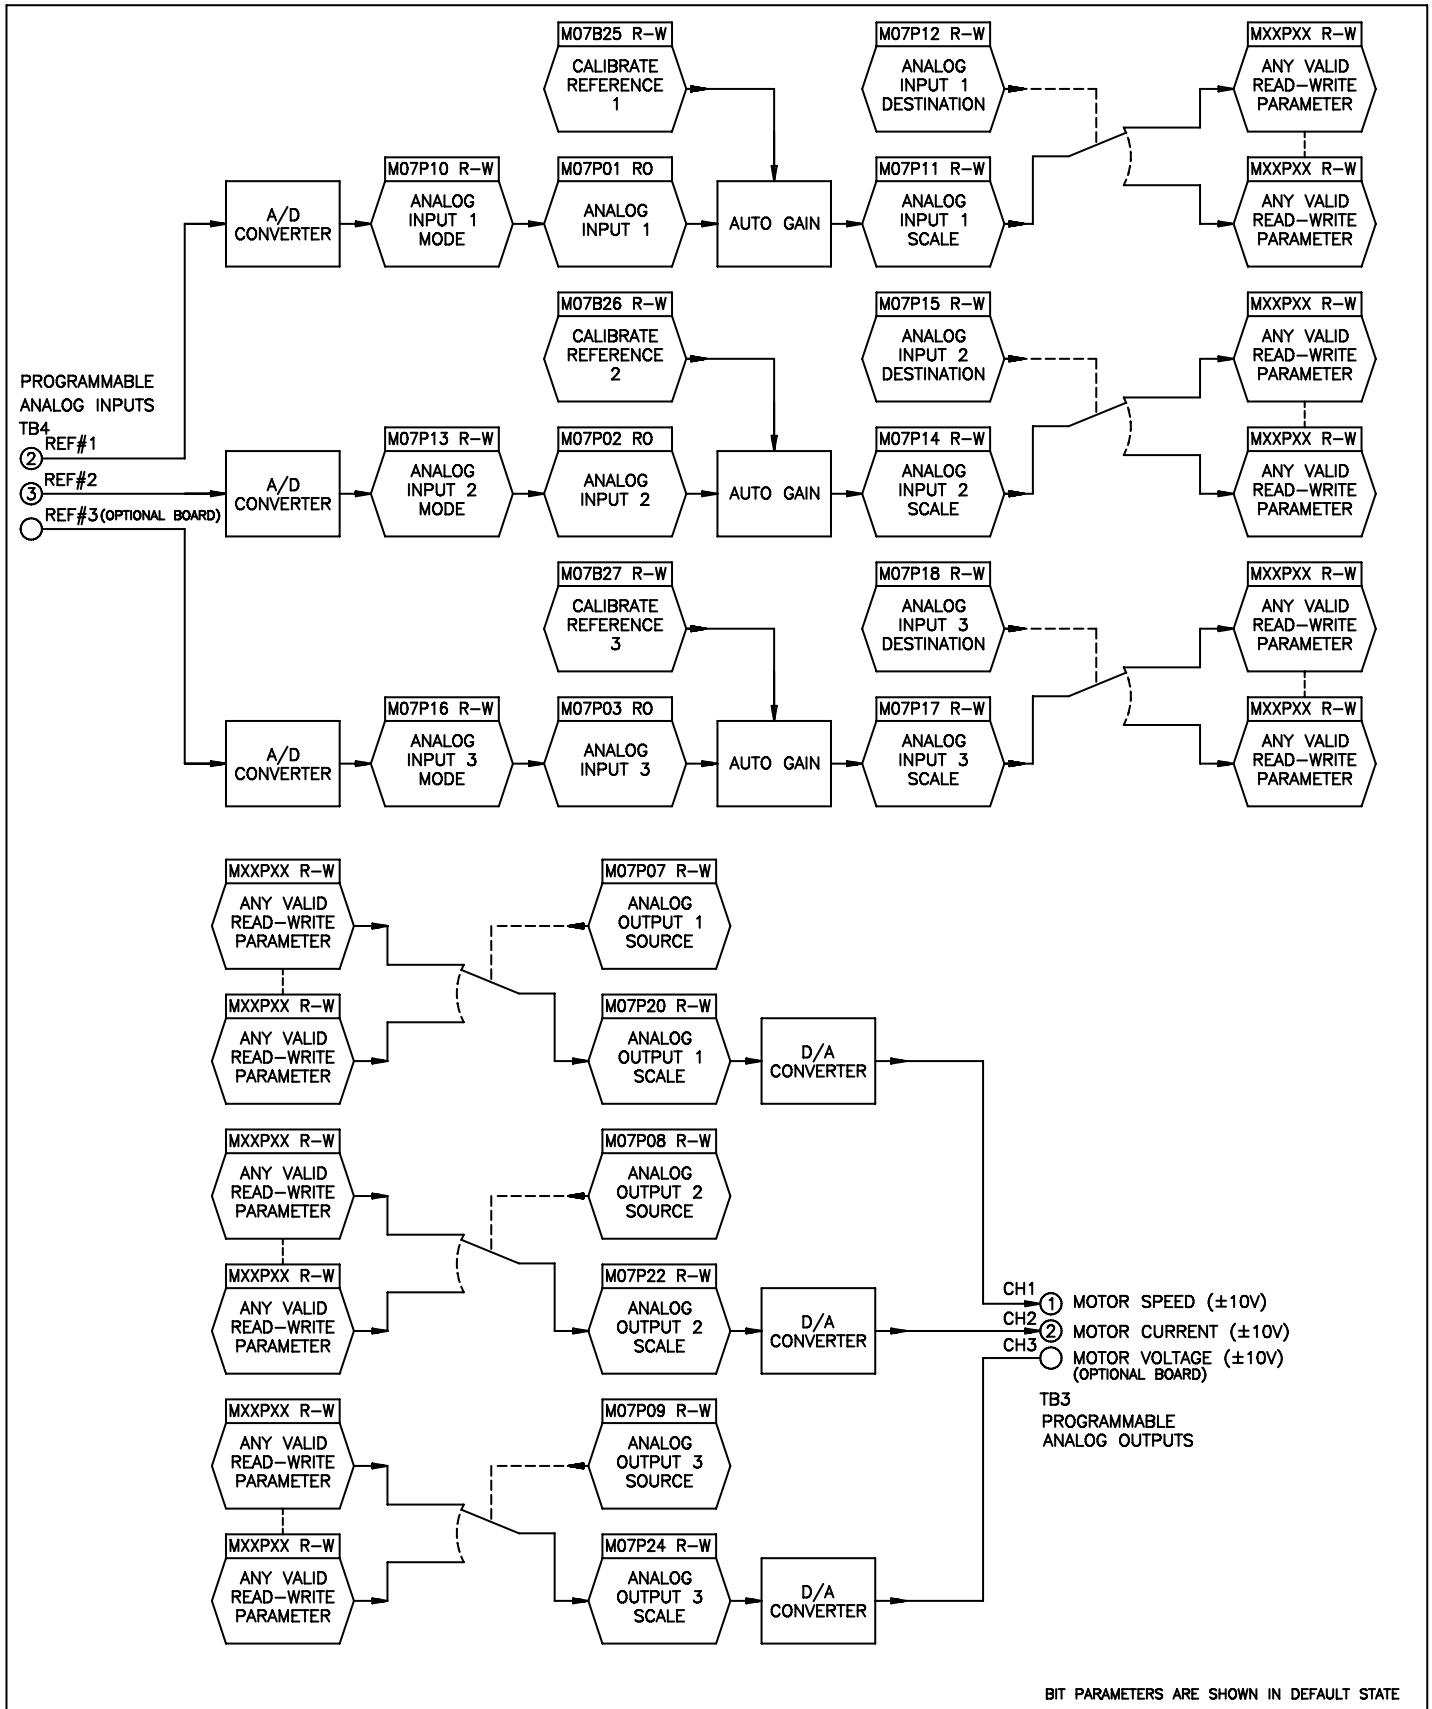


Figure 4-7
Menu 7 - Analog Inputs and Outputs.

4-8 MENU AND PARAMETER DESCRIPTION

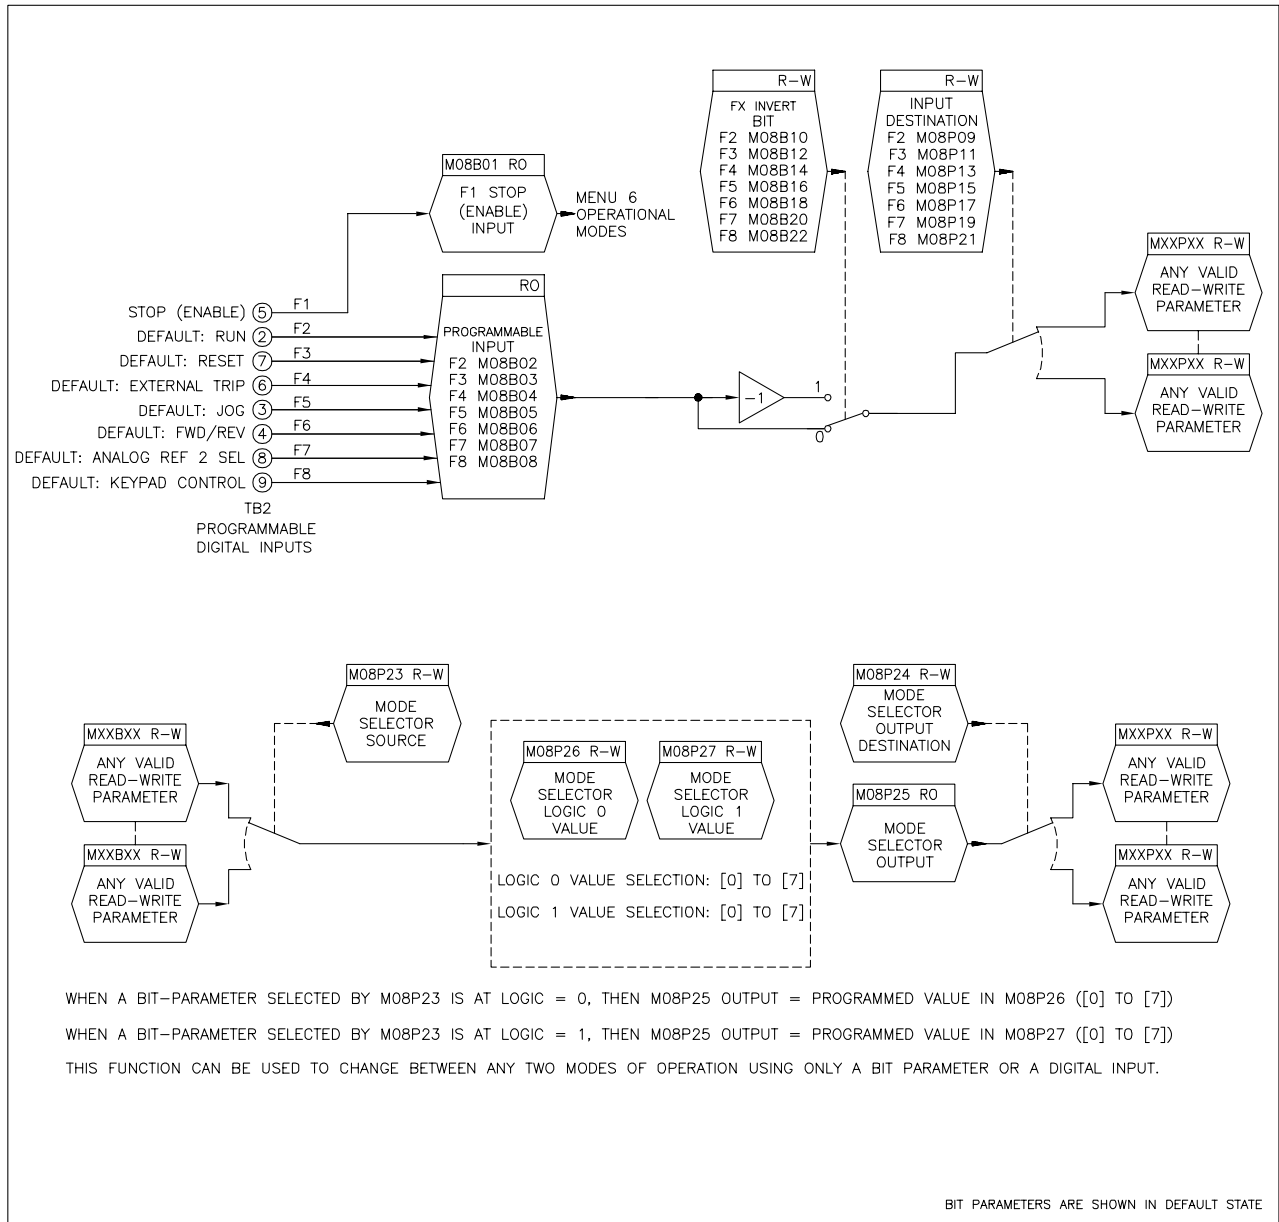


Figure 4-8
Menu 8 - Programmable Digital Inputs and Mode Selector.

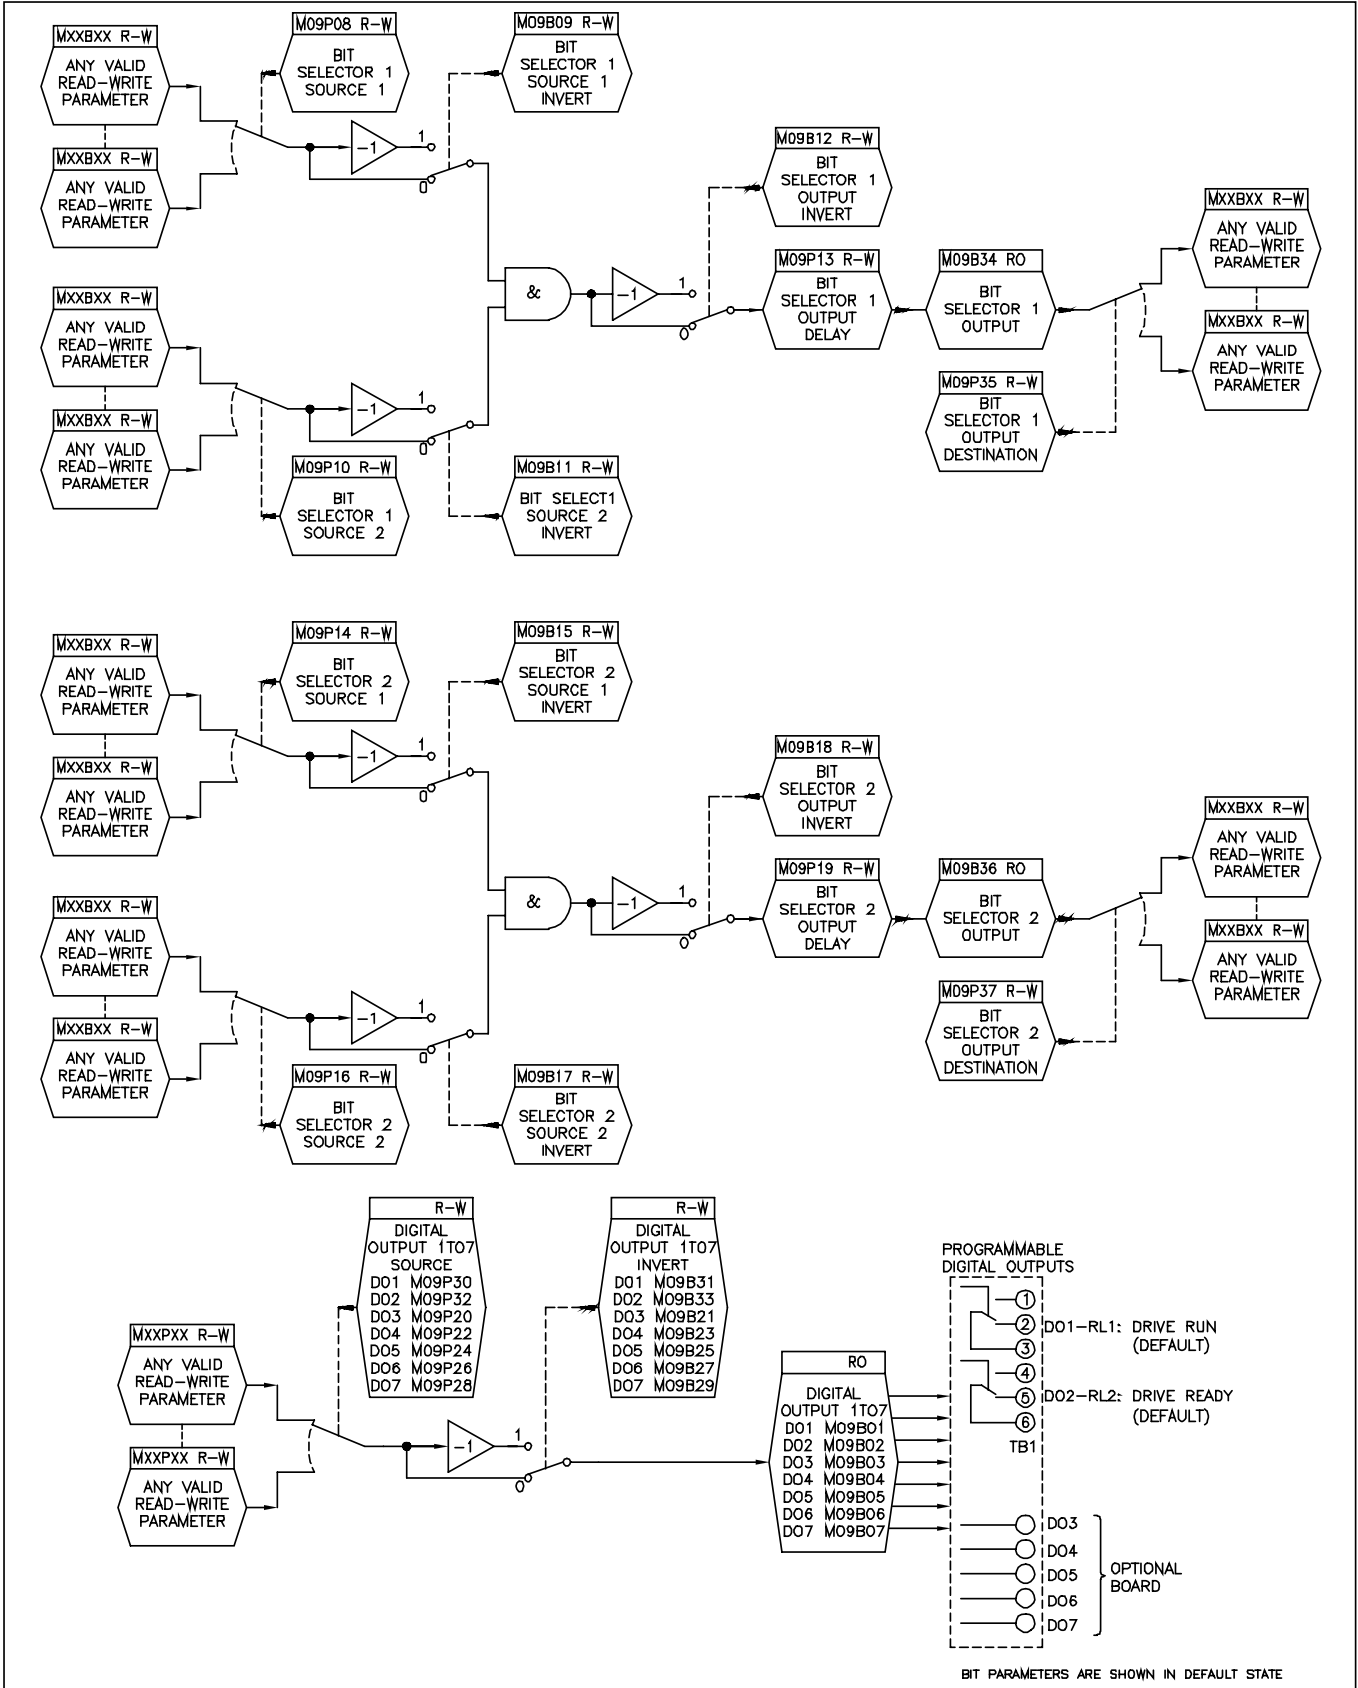


Figure 4-9
Menu 9 - Programmable Digital Outputs and Bit Selectors.

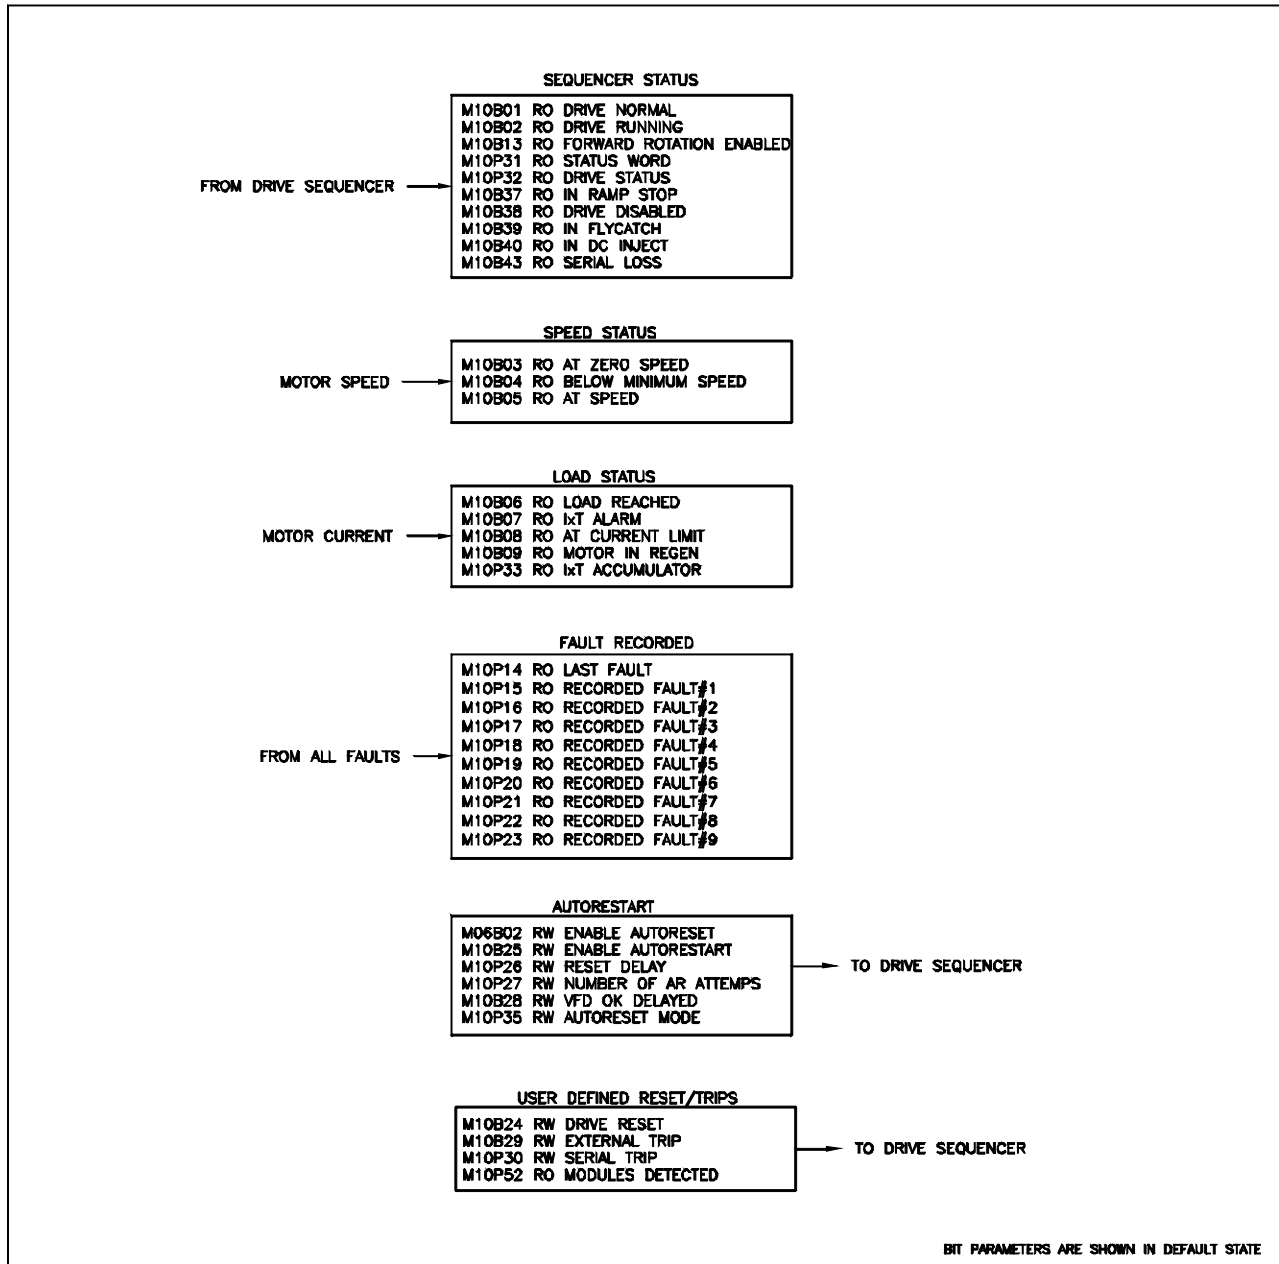


Figure 4-10
Menu 10 - Status Logic and Diagnostic Information

MENU 0 CREATION	
M11P01	RW DEFINE M00P01
M11P02	RW DEFINE M00P02
M11P03	RW DEFINE M00P03
M11P04	RW DEFINE M00P04
M11P05	RW DEFINE M00P05
M11P06	RW DEFINE M00P06
M11P07	RW DEFINE M00P07
M11P08	RW DEFINE M00P08
M11P09	RW DEFINE M00P09
M11P10	RW DEFINE M00P10
M11P11	RW DEFINE M00P11
M11P12	RW DEFINE M00P12
M11P13	RW DEFINE M00P13
M11P14	RW DEFINE M00P14
M11P15	RW DEFINE M00P15
M11P16	RW DEFINE M00P16
M11P17	RW DEFINE M00P17
M11P18	RW DEFINE M00P18
M11P19	RW DEFINE M00P19
M11P20	RW DEFINE M00P20
M11P31	RW TEXT FOR M00P19
M11P32	RW TEXT FOR M00P20
M11P21	RW SCALE FOR M00P19
M11P22	RW SCALE FOR M00P20
M11P30	RW DISPLAY WHEN PWR

SERIAL PORT DEFINITION	
M11P23	RW SERIAL ADDRESS
M11P24	RW SERIAL PARITY
M11P25	RW BAUD RATE
M11P26	RW SERIAL PROTOCOL
M11B41	RW ENABLE SERIAL LOSS
M11P42	RW SERIAL TIMEOUT
M11P43	RW SERIAL LOSS MODE

SOFTWARE VERSION	
M11P27	RO SOFTWARE VERSION
M11P28	RO PROCESSOR 2 VER

SECURITY	
M11P29	RW SECURITY CODE
M11P37	RW ACCESS CODE

DRIVE MODEL SETUP/TYPER/DEFAULTS	
M11P33	RW DRIVE MODEL NUMBER
M11P34	RO VOLTAGE RATING
M11P35	RO OVERLOAD RATING
M11P36	RW FACTORY DEFAULTS
M11P46	RO MODULES REQUIRED
M11B47	RW SERIAL RUN ENABLE
M11P48	RW SERIAL CONTROL MODE

BIT PARAMETERS ARE SHOWN IN DEFAULT STATE

Figure 4-11
Menu 11 - Miscellaneous

4-12 MENU AND PARAMETER DESCRIPTION



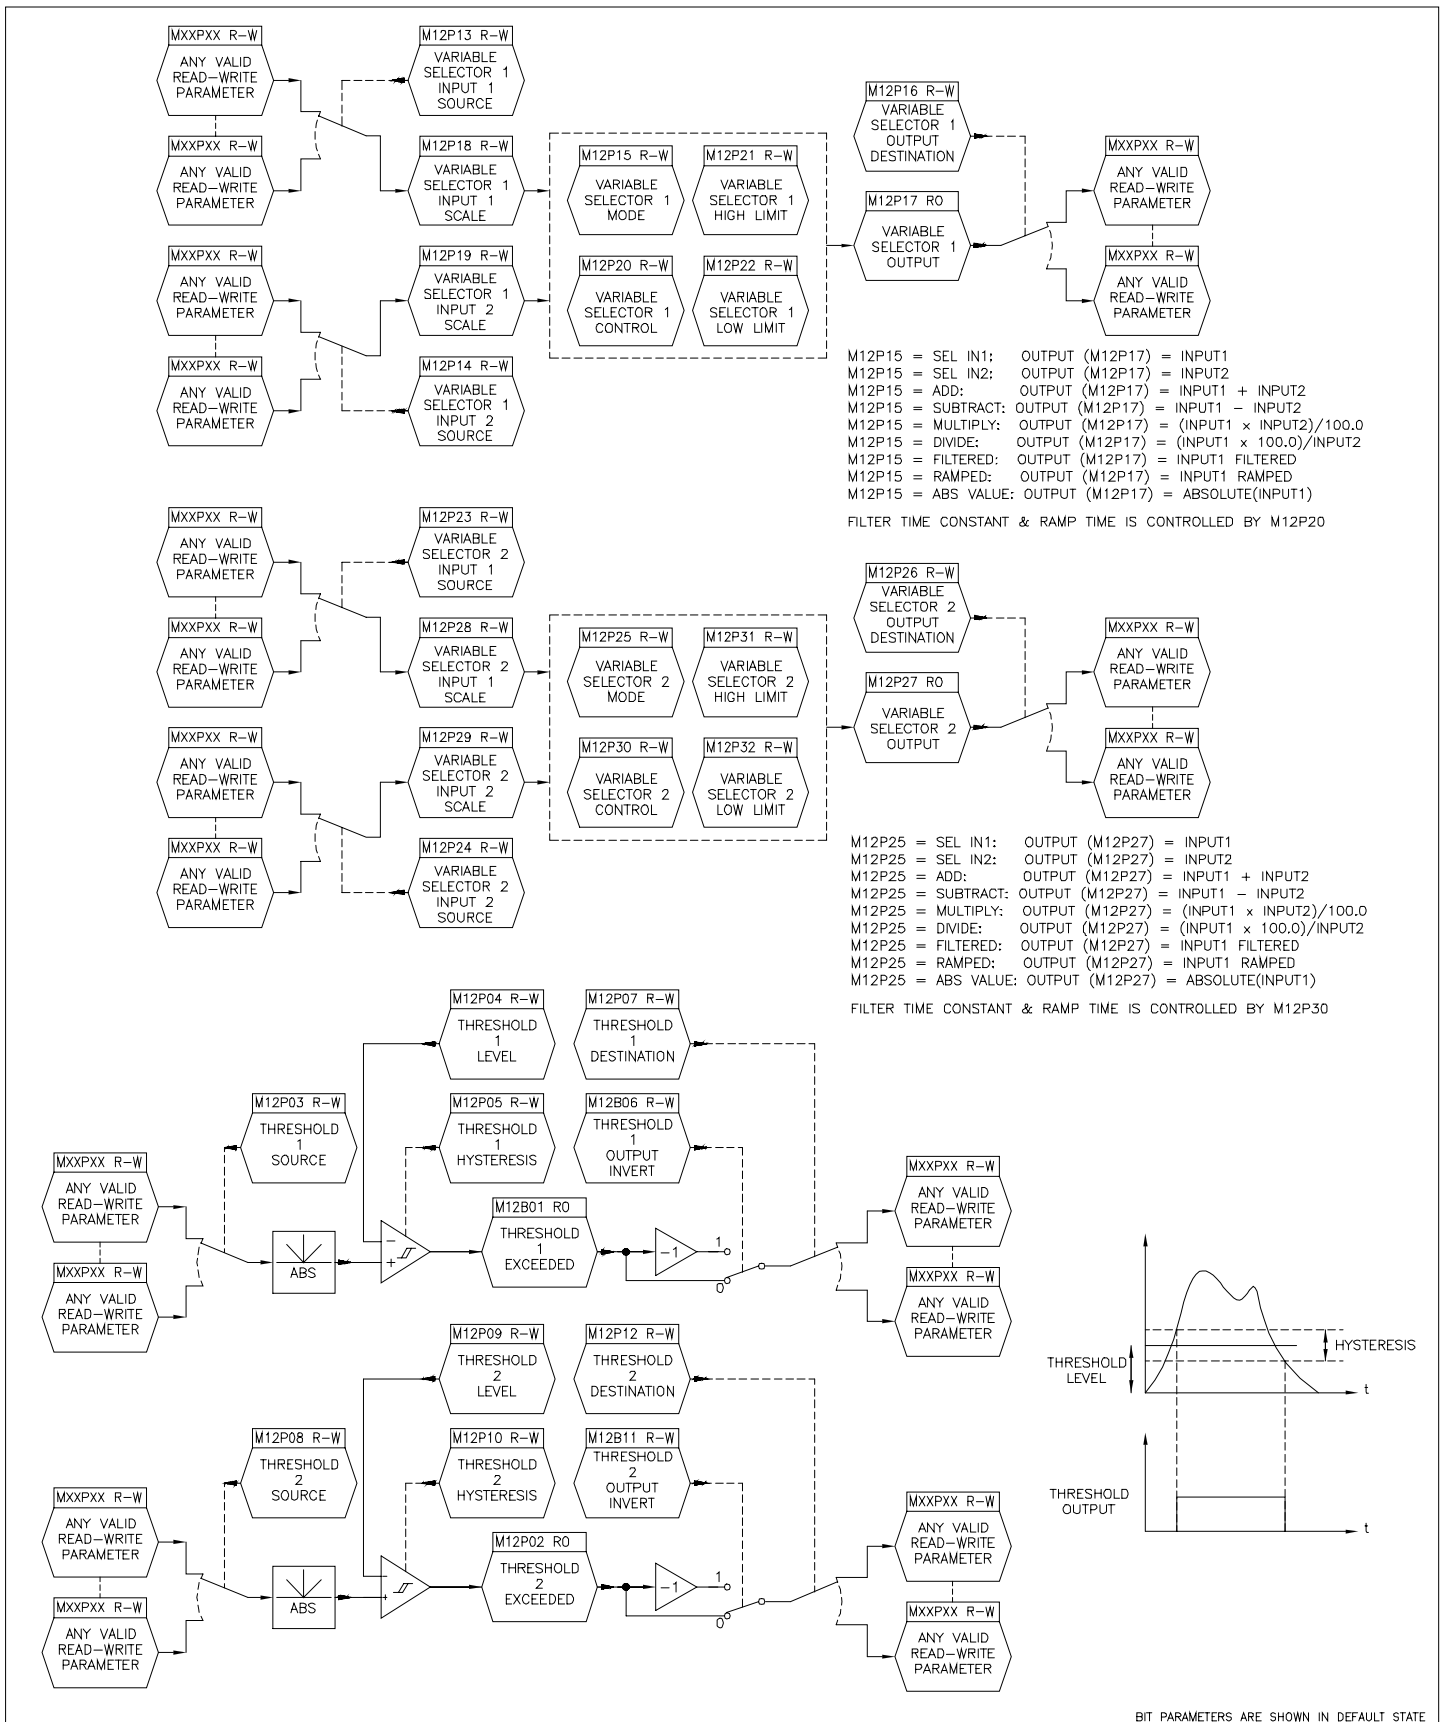


Figure 4-12
Menu 12 - Programmable Thresholds and Variable Selectors (1 of 2)

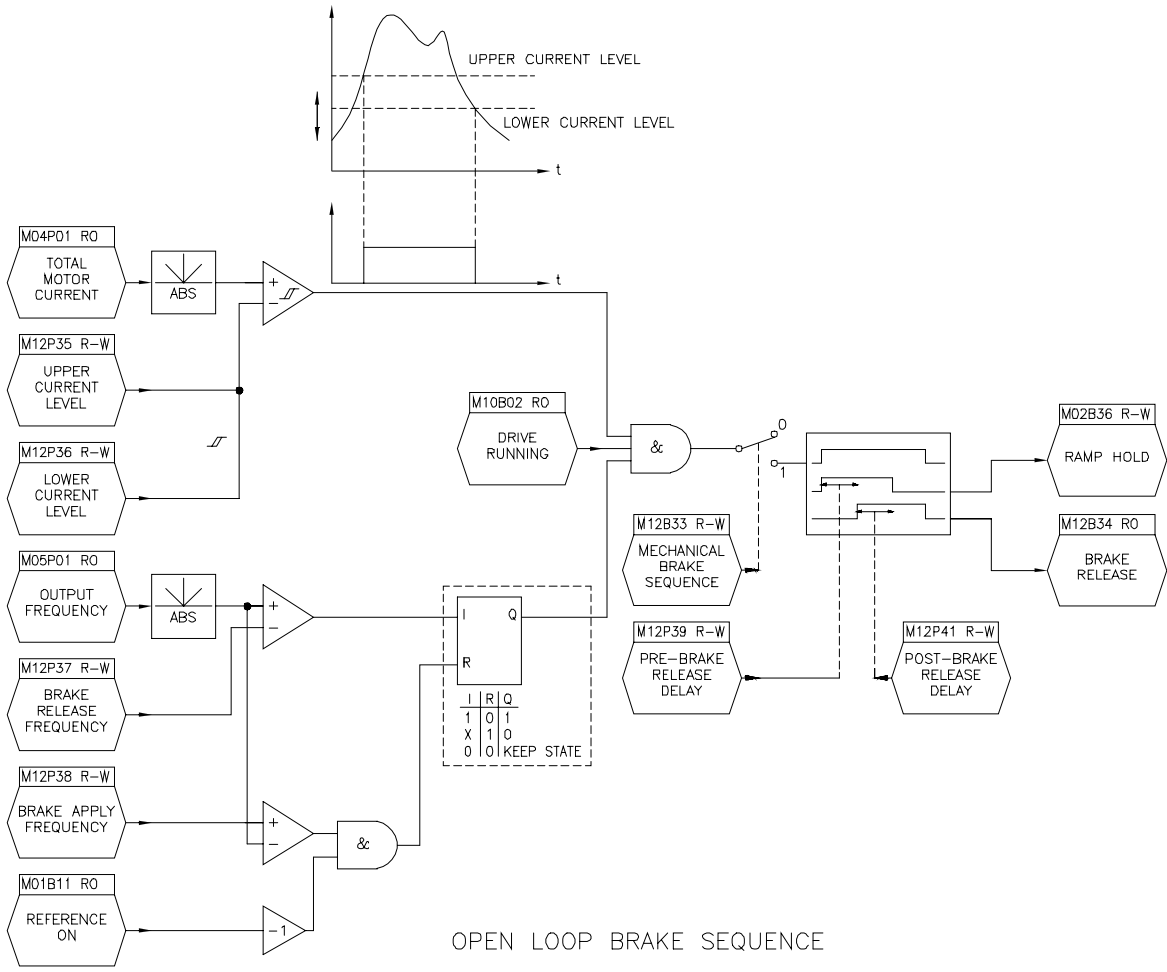

OPEN LOOP BRAKE SEQUENCE

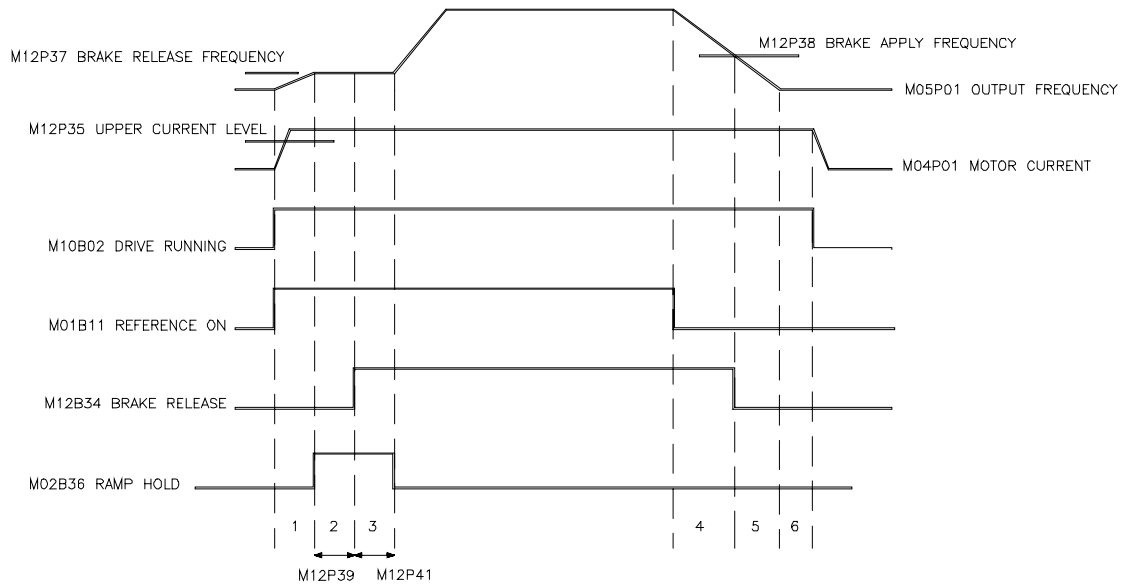

- "1" WAIT FOR UPPER CURRENT LEVEL AND BRAKE RELEASE FREQUENCY
- "2" PRE-BRAKE RELEASE DELAY
- "3" POST BRAKE RELEASE DELAY
- "4" WAIT FOR BRAKE FREQUENCY THRESHOLD
- "5" WAIT FOR ZERO FREQUENCY
- "6" 1 SECOND DELAY AFTER ZERO FREQUENCY

BIT PARAMETERS ARE SHOWN IN DEFAULT STATE

Figure 4-13
Menu 12 - Open-Loop Brake Function (2 of 2)

TIMERS	
M13P01	RO RUN-TIME LOG Y-D
M13P02	RO RUN-TIME LOG H-M
M13P06	RO COUNTDOWN TIMER1
M13P07	RO COUNTDOWN TIMER2
M13P10	RW STARTTIME TIMER1
M13B11	RW TIMER1 DONE
M13P12	RW STARTTIME TIMER2
M13B13	RW TIMER2 DONE

POWER METER	
M13P03	RO ENERGY IN MWH
M13P04	RO ENERGY IN KWH
M13P05	RO RUNNING COST
M13P08	RW COST PER KWH
M13B09	RW RESET POWER METER

BIT PARAMETERS ARE SHOWN IN DEFAULT STATE

Figure 4-14
Menu 13 - Timer Functions.

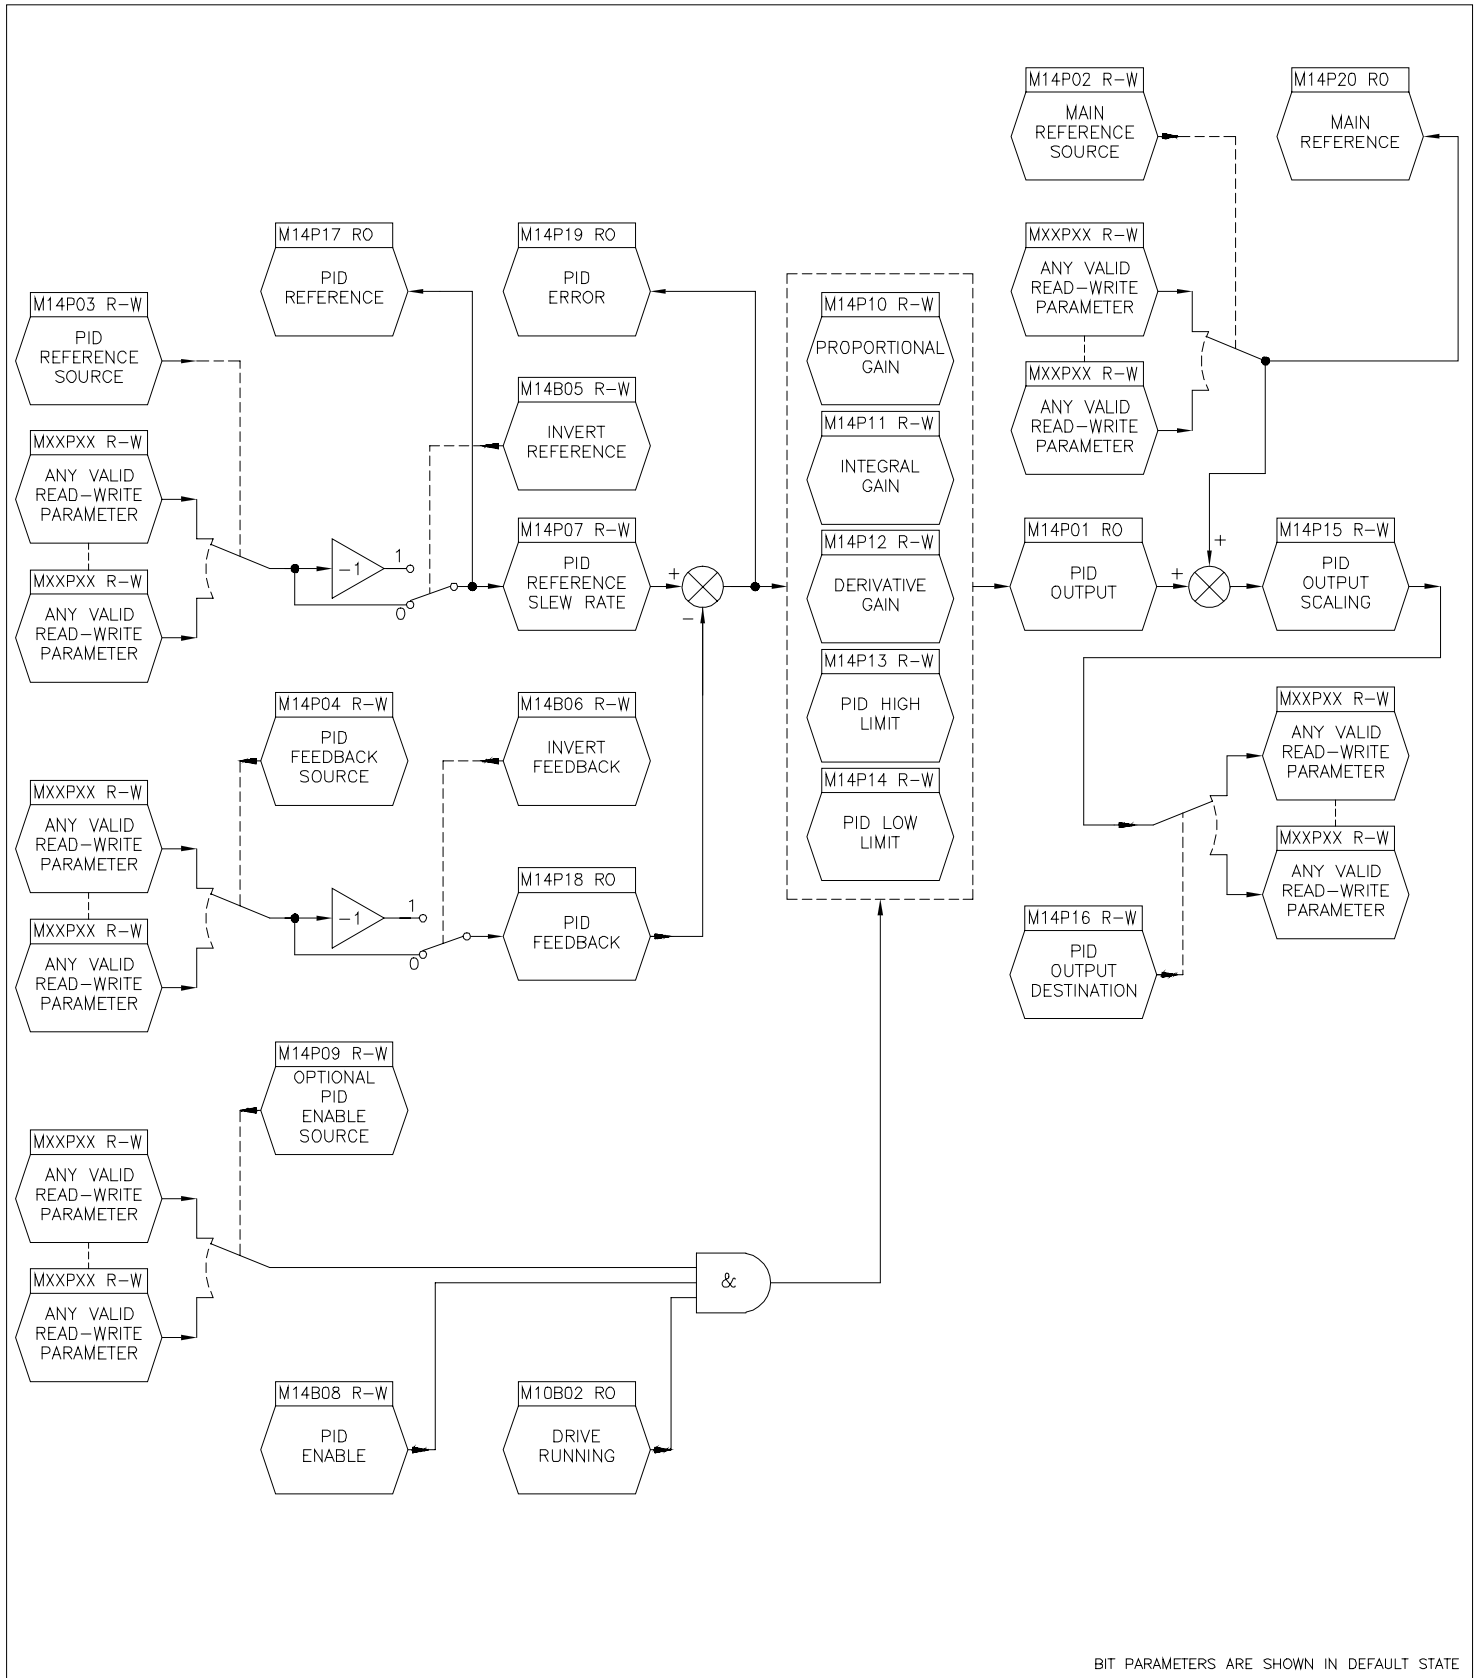


Figure 4-15
Menu 14 - PID Control Loop.

4-16 DRIVE PROGRAMMING

4.2 Parameter Definitions

MXXP00	<p>Parameter 00 is at the beginning of every menu and it is also the menu name:</p> <p>M00P00 QUICK SET UP MENU M01P00 FREQ REFS MENU M02P00 RAMPS MENU M03P00 ENCODER MENU M04P00 CURR-TORQUE CTRL M05P00 MOTOR CONTROL M06P00 OPERATION MODES M07P00 ANALOG I/O MENU M08P00 DIG INS-MODE SEL M09P00 DIG OUTS-BIT SEL M10P00 STATUS-DIAGNOSTIC M11P00 MISCELLANEOUS M12P00 THRESHOLDS-VARSEL M13P00 TIMERS FUNCTIONS M14P00 PID CONTROL LOOP</p>	R-O	Range: Default:
M00P01 (M05P08)	<p>RATED MOTOR VOLT</p> <p>Enter the value from the motor rating plate in order to define the maximum output voltage of the drive.</p> <p>This parameter assumes the R-W or R-O attribute of the parameter assigned to it.</p>	R-W	Range: 100 to 600 VRMS Default: 240 480 600
M00P02 (M05P09)	<p>BASE MOTOR FREQ</p> <p>Enter a value of frequency at which the rated voltage is to be applied to the motor. The motor then enters the constant-power or field-weakening region.</p> <p>This parameter assumes the R-W or R-O attribute of the parameter assigned to it.</p>	R-W	Range: 10.0 to 600.0 Hz Default: 60.0
M00P03 (M05P06)	<p>RATED MOTOR CURR</p> <p>When parameter M05P06 is set at a value lower than the default rating of the drive, the maximum current of the drive can be greater than 1.5 times the motor rating. Consequently, the maximum value of current limit and torque parameters (M04P04, M04P05, M04P06, M04P11 and M06P04) can be increased proportionately.</p> <p>For example, if a 180 Amp drive has parameter M05P06 set at 90 Amps, the maximum values of parameters M04P04, M04P05, M04P11 and M06P04 can be 300% (2 x 150%). This allows larger drives to be used for a high starting torque.</p> <p>When the value is increased beyond the default value of M05P06, the value of M04P11 is automatically decreased.</p> <p>The value entered affects the following:</p> <ul style="list-style-type: none"> Slip compensation Dynamic V/f Ixt detection level <p><u>Industrial and HVAC applications</u></p> <p>Industrial applications benefit from a higher percentage of overload current, but have a lower nominal current. HVAC applications benefit from a higher nominal current, but have a lower percentage of overload current (120%). The overload current has the same value in each case.</p>	R-W	Range: 0 to 1800 A Default: Model Dependent

<p>See parameter M05P18.</p> <p>This parameter assumes the R-W or R-O attribute of the parameter assigned to it.</p>		
<p>M00P04 NUMBER OF POLES (M05P10) Enter the value from the motor rating plate for correct slip compensation and RPM indication.</p> <p>This parameter assumes the R-W or R-O attribute of the parameter assigned to it.</p>	R-W	<p>Range: [0] (2 POLES) to [15] (32 POLES) Default: [1] (4 POLES)</p>
<p>M00P05 SYM CURRENT LIM (M04P11) After having set the required value of maximum current in M05P06, you may increase or decrease the percentage overload current using M04P11. The maximum percentage that can be set is limited by the overload current rating of the drive. The limit applies when motoring and regenerating.</p> <p>The value of M04P11 is automatically reduced when the value of M05P06 is increased beyond the default value.</p> <p>This parameter assumes the R-W or R-O attribute of the parameter assigned to it.</p>	R-W	<p>Range: See M04P04 % Default: 120 or 150 min</p>
<p>M00P06 ACCEL RAMP 1 (M02P03) Acceleration ramp rate is expressed as the time for the output frequency to increase by 100Hz.</p> <p>For example, a programmed ramp time of 5 seconds causes the frequency to increase or decrease by 50Hz in 2.5 seconds.</p> <p>This parameter assumes the R-W or R-O attribute of the parameter assigned to it.</p>	R-W	<p>Range: 0.1 to 3276 s/100Hz Default: Size 0: 30.0 sec Size 1: 30.0 sec Size 2: 60.0 sec Size 3: 60.0 sec</p>
<p>M00P07 DECEL RAMP 1 (M02P04) Deceleration ramp rate is expressed as the time for the output frequency to decrease by 100Hz.</p> <p>This parameter assumes the R-W or R-O attribute of the parameter assigned to it.</p>	R-W	<p>Range: 0.1 to 3276 s/100Hz Default: Size 0: 30.0 sec Size 1: 30.0 sec Size 2: 60.0 sec Size 3: 60.0 sec</p>
<p>M00P08 MAX FREQUENCY (M01P06) Enter a value to define the absolute maximum output frequency.</p> <p>This parameter assumes the R-W or R-O attribute of the parameter assigned to it.</p>	R-W	<p>Range: 0 to 600.0 Hz Default: 60.0</p>
<p>M00P09 MINIMUM FREQ (M01P05) Use in unipolar mode to define the minimum output frequency of the drive. This can be over-riden by M01P06 and is inactive during Jog.</p> <p>This parameter assumes the R-W or R-O attribute of the parameter assigned to it.</p>	R-W	<p>Range: 0 to M01P06 Hz Default: 0</p>
<p>M00P10 RATED LINE VOLTS (M05P33) Enter a value of voltage at which the rated voltage is to be applied to the input of the drive.</p> <p>This parameter assumes the R-W or R-O attribute of the parameter assigned to it.</p>	R-W	<p>Range: 200-250V for D2 Models 380-500V for D4 Models 500-600V for D5 Models Default: 240V for D2 Models 480V for D4 Models 575V for D5 Models</p>
<p>M00P11 SOFTWARE VERSION (M11P27) Indicates version of software in the drive.</p> <p>This parameter assumes the R-W or R-O attribute of the parameter assigned to it.</p>	R-O	<p>Range: XXXX Default:</p>


4-18 DRIVE PROGRAMMING

M00P12 DRIVE MODEL NO (M11P33)	Indicates the drive model number. This parameter assumes the R-W or R-O attribute of the parameter assigned to it.	R-W	Range: Default:
M00P13 MOTOR VOLTAGE (M05P03)	Indicates the RMS voltage applied to the motor. This parameter assumes the R-W or R-O attribute of the parameter assigned to it.	R-O	Range: 0 to M05P08 V _{RMS} Default:
M00P14 MOTOR POWER (M05P05)	Indicates the real component of the power output. This parameter assumes the R-W or R-O attribute of the parameter assigned to it.	R-O	Range: 0 to $\pm M05P03 \times M11P35 \times \frac{\sqrt{3}}{1000}$ KW Default:
M00P15 DC BUS VOLTAGE (M05P04)	Indicates the DC bus voltage. This parameter assumes the R-W or R-O attribute of the parameter assigned to it.	R-O	Range: 0 to 1000.0 V Default:
M00P16 AC LINE VOLTAGE (M05P34)	Indicates RMS voltage of the AC supply. This parameter assumes the R-W or R-O attribute of the parameter assigned to it.	R-O	Range: 0 to 1000.0 V _{RMS} Default:
M00P17 LAST FAULT (M10P14)	This parameter assumes the R-W or R-O attribute of the parameter assigned to it.	R-O	Range: Default:
M00P18 MOT CURR-TOTAL (M04P01)	Indicates the magnitude of the total motor current. This parameter assumes the R-W or R-O attribute of the parameter assigned to it.	R-O	Range: 0 to $\pm M11P35$ A Default:
M00P19 FINAL FREQ REF (M01P03)	Indicates the final frequency reference. This can be used for setting up the system and fault finding. This parameter is always read only (R-O)	R-O	Range: $\pm M01P06$ Hz Default: 0.0
M00P20 MOTOR SHAFT RPM (M05P02)	Indicates motor shaft RPM. The number of poles must be entered correctly in M00P04 (M05P10), and the slip correction must not be at the maximum frequency limit [if the motor is to run at 60Hz, set M00P08 (M01P06) at a higher value to allow for slip compensation]. This parameter is always read only (R-O)	R-O	Range: 0 to 32760 RPM Default:
M01P01 REF SELECTED	Indicates the frequency reference. This can be used for setting up the system and fault finding.	R-O	Range: ± 1000.0 Hz Default:
M01P02 RUN REFERENCE	Indicated the run frequency reference. This can be used for setting up the system and fault finding.	R-O	Range: $\pm M01P06$ Hz Default: 0.0
M01P03 FINAL FREQ REF	Indicates the final frequency reference. This can be used for setting up the system and fault finding.	R-O	Range: $\pm M01P06$ Hz Default: 0.0
M01P04 KEYPAD REFERENCE	Enter a value using the Control Keypad.	R-W	Range: Bipolar: $\pm M01P06$ Hz Unipolar: M01P05 to M01P06 Default: 0
M01P05 MINIMUM FREQ	Use in unipolar mode to define the minimum output	R-W	Range: 0 to M01P06 Hz Default: 0

<p>M01P06 MAX FREQUENCY Enter a value to define the absolute maximum output frequency.</p>	R-W	Range: 0 to 600.0 Hz Default: 60.0
<p>M01B07 SEL PRESET SPEED Set at 1 to select pre-set speeds.</p>	R-W	Range: 0 or 1 Default: 0
<p>M01B08 KEYPAD CONTROL Set at 1 to select control using Keypad keys and Keypad reference, (it forces 1 into M06B15, M06B16, and M06B17 if M06B18 is set to "ALL KEYS".</p>	R-W	Range: 0 or 1 Default: 0
<p>M01B09 SEL PRECIS REF Set at 1 for high resolution (0.001Hz) frequency control. Set at 0 for normal resolution (0.03Hz) frequency control</p>	R-W	Range: 0 or 1 Default: 0
<p>M01B10 BIPOLAR SELECT Set at 1 to select bipolar speed reference signal. Set at 0 to select unipolar speed reference signal. Negative input signals are then treated as zero.</p> <p><u>Analog Operation</u> When M01B10 is set at 0, any analog input programmed to parameters M01P19 and M01P20 is scaled so that 100% corresponds to the maximum set for M01P06, and 0% corresponds to the minimum set for M01P05.</p> <p>When M01B10 is set at 1, the analog input programmed to M01P19 or M01P20 is scaled so that ± 100% corresponds to the maximum ± set for M01P06.</p> <p>In addition, if an analog input programmed in voltage mode is directed to one of these parameters and the parameter is selected as the frequency reference, the scan-rate of the analog input is increased.</p> <div data-bbox="302 1182 857 1793" style="border: 1px solid black; padding: 10px;"> </div>	R-W	Range: 0 or 1 Default: 0
<p>M01B11 REFERENCE ON M01B12 REVERSE M01B13 JOG SELECTED These parameters are controlled by the drive sequencer.</p>	R-O	Range: 0 or 1 Default: 0




4-20 DRIVE PROGRAMMING

M01P14 JOG REFERENCE Frequency reference for Jog.	R-W	Range: 0 to 1000.0 Hz Default: 5.0
M01P15 REF OFFSET When M01B16 is set at 1, the value entered into M01P15 is added to the selected reference parameter. It is used to trim the selected parameter.	R-W	Range: ± 1000.0 Hz Default: 0
M01B16 REF OFFSET SEL Set at 1 to enable addition of the reference offset (M01P15).	R-W	Range: 0 or 1 Default: 0
M01P17 PRECIS FREQ REF	R-W	Range: ± 1000.0 Hz Default: 0
M01P18 PRECIS FREQ TRIM	R-W	Range: 0 to 0.099 Hz Default: 0
M01P19 ANALOG REF 1 M01P20 ANALOG REF 2 See parameter M01B10	R-O	Range: M01P06 Hz Default: 0.0
M01B21 ANALOG REF2 SEL M01B22 PRESET FREQ BIT0 M01B23 PRESET FREQ BIT1 M01B24 PRESET FREQ BIT2 Select the required reference.	R-W	Range: 0 or 1 Default: 0
M01P25 PRESET FREQ 1 M01P26 PRESET FREQ 2 M01P27 PRESET FREQ 3 M01P28 PRESET FREQ 4 M01P29 PRESET FREQ 5 M01P30 PRESET FREQ 6 M01P31 PRESET FREQ 7 M01P32 PRESET FREQ 8 Note that parameter M02B07 (RAMPS SELECTION) must be set at 1 to have the corresponding accel/decel rates selected when the preset speeds are selected. Normal preset frequency references.	R-W	Range: ± 1000.0 Hz Default: 0
M01P33 SKIP FREQUENCY 1 Enter a value to avoid a frequency which induces mechanical resonance's.	R-W	Range: 0 to 1000.0 Hz Default: 0
M01P34 SKIP FREQ 1 BAND Enter a value to define the frequency range either side of Skip frequency 1 over which frequencies are avoided. The bandwidth is twice that entered into this parameter.	R-W	Range: 0 to 5.0 Hz Default: 0.5
M01P35 SKIP FREQUENCY 2 Enter a value to avoid a frequency which induces mechanical resonance's.	R-W	Range: 0 to 1000.0 Hz Default: 0

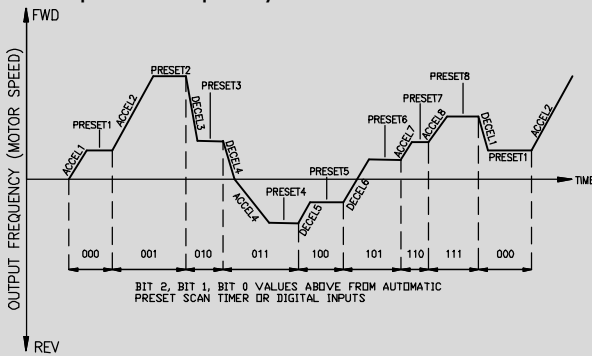

<p>M01P36 SKIP FREQ 2 BAND Enter a value to define the frequency range either side of Skip frequency 2 over which frequencies are avoided. The bandwidth is twice that entered into this parameter.</p>	R-W	Range: 0 to 5.0 Hz Default: 0.5
<p>M01P37 SKIP FREQUENCY 3 Enter a value to avoid a frequency which induces mechanical resonance's.</p>	R-W	Range: 0 to 1000.0 Hz Default: 0
<p>M01P38 SKIP FREQ 3 BAND Enter a value to define the frequency range either side of Skip frequency 3 over which frequencies are avoided. The bandwidth is twice that entered into this parameter.</p>	R-W	Range: 0 to 5.0 Hz Default: 0.5
<p>M01B39 IN REJECT ZONE Indicates the selected reference is within one of the skip frequency bands. The motor speed does not match the demand.</p>	R-O	Range: 0 or 1 Default: 0
<p>M01B42 PRESET SEL MODE Set at 1 to allow the preset timer to sequentially select the preset frequencies. Set at 0 to allow bit parameters M01B22 through M01B24 to select the preset frequencies.</p>	R-W	Range: 0 or 1 Default: 0
<p>M01P43 PRESET SCAN MODE There are three modes for the auto preset scan timer: [0] FOREVER The drive will run the cycle continuously. [1] 1CYC&STOP The drive will run one cycle, then stop. Note that to stop at the end of the cycle, M06P07 (SEQUENCING MODE) must be "2OR3-WIRE" or "3-WIRE SP". [2] 1CYC&CONT The drive will run one cycle and continue at the last preset speed.</p> <p>The preset scan timer is reset and halted and PRESET 1 selected under the following conditions:</p> <ul style="list-style-type: none"> • M01B42 (PRESET SEL MODE) is set at 0. • or M01B45 (PRESET SCAN RSET) is set at 1. • or M01P43 (PRESET SCAN MODE) is changed <p>The preset scan timer is halted at a given stage in the cycle, maintaining the given preset under the following conditions:</p> <ul style="list-style-type: none"> • The drive is in the FAULT state. • or M01B46 (PRESET SCAN HALT) is set at 1. <p>If the preset scan timer is in both the reset and halted states, the reset state dominates.</p> <p>If none of the above conditions are true, the preset scan timer begins running and the presets are selected according to the mode selected. Note that the drive does not have to be in RUN mode for the preset scan timer to run.</p> <p>Also note that parameter M02B07 (RAMPS SELECTION) Must be set at 1 to have the corresponding accel/decel Rates selected when the preset speeds are selected as shown in the figures below.</p>	R-W	Range: [0] to [2] Default: [0] FOREVER

4-22 DRIVE PROGRAMMING

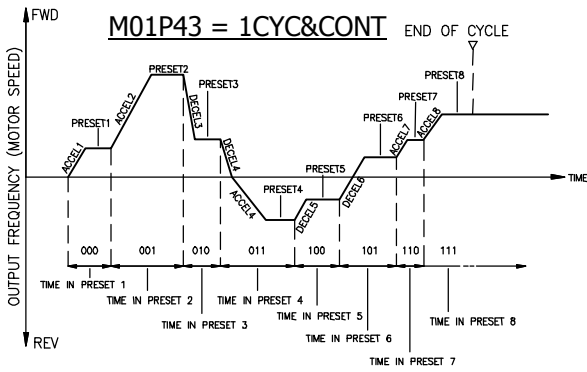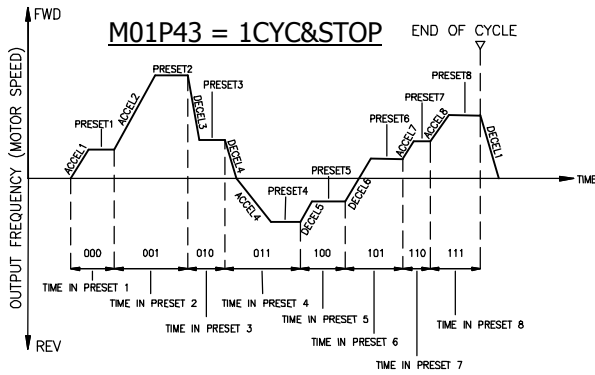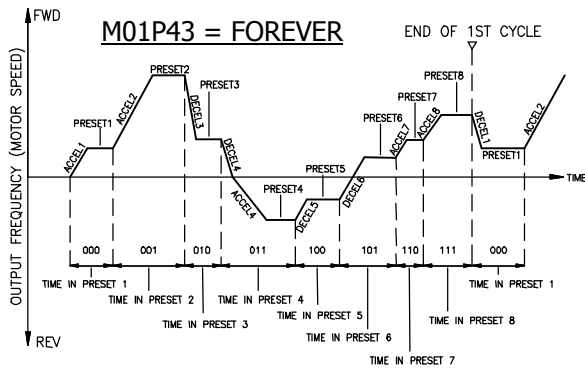

<p>M01P44 PRESET INDICATOR Indicates which preset frequency is presently being used.</p> <p>[0] PRESET 1 000 [1] PRESET 2 001 [2] PRESET 3 010 [3] PRESET 4 011 [4] PRESET 5 100 [5] PRESET 6 101 [6] PRESET 7 110 [7] PRESET 8 111</p>	R-O	Range: [0] to [7] Default:
<p>M01B45 PRESET SCAN RSET Set at 1 to reset the preset timer and select PRESET FREQ 1 (M01P25). This bit parameter can be used to halt an existing preset sequence and start a new one. When this parameter is set at 0, the preset selection follows the preset timer according to the setting of parameter M01P43 (PRESET SCAN MODE).</p>	R-W	Range: 0 or 1 Default: 0
<p>M01B46 PRESET SCAN HALT Set at 1 to halt or suspend the preset timer at the present point in the cycle. This bit parameter can be used to halt an existing preset sequence and then resume when this parameter is then returned to 0. The drive runs at the halted preset speed until the M01B46 is returned to 0.</p>	R-W	Range: 0 or 1 Default: 0
<p>M01P47 TIME IN PRESET 1 Enter a value to define the time the auto preset sequencer stays in "PRESET 1" (as shown by M01P44), when parameter M01B42 is set to 1.</p>	R-W	Range: 0 to 3276.0 Sec Default: 20.0
<p>M01P48 TIME IN PRESET 2 Enter a value to define the time the auto preset sequencer stays in "PRESET 2" (as shown by M01P44), when parameter M01B42 is set to 1.</p>	R-W	Range: 0 to 3276.0 Sec Default: 20.0
<p>M01P49 TIME IN PRESET 3 Enter a value to define the time the auto preset sequencer stays in "PRESET 3" (as shown by M01P44), when parameter M01B42 is set to 1.</p>	R-W	Range: 0 to 3276.0 Sec Default: 20.0
<p>M01P50 TIME IN PRESET 4 Enter a value to define the time the auto preset sequencer stays in "PRESET 4" (as shown by M01P44), when parameter M01B42 is set to 1.</p>	R-W	Range: 0 to 3276.0 Sec Default: 20.0
<p>M01P51 TIME IN PRESET 5 Enter a value to define the time the auto preset sequencer stays in "PRESET 5" (as shown by M01P44), when parameter M01B42 is set to 1.</p>	R-W	Range: 0 to 3276.0 Sec Default: 20.0
<p>M01P52 TIME IN PRESET 6 Enter a value to define the time the auto preset sequencer stays in "PRESET 6" (as shown by M01P44), when parameter M01B42 is set to 1.</p>	R-W	Range: 0 to 3276.0 Sec Default: 20.0
<p>M01P53 TIME IN PRESET 7 Enter a value to define the time the auto preset sequencer stays in "PRESET 7" (as shown by M01P44), when parameter M01B42 is set to 1.</p>	R-W	Range: 0 to 3276.0 Sec Default: 20.0
<p>M01P54 TIME IN PRESET 8 Enter a value to define the time the auto preset sequencer stays in "PRESET 7" (as shown by M01P44), when parameter M01B42 is set to 1.</p>	R-W	Range: 0 to 3276.0 Sec Default: 20.0

4-24 DRIVE PROGRAMMING

M02P01 POST-RAMP REF Frequency reference after the effects of ramps and normal currents limits.	R-O	Range: \pm M01P06 Hz Default: 0.0
M02P02 RAMP MODE Select from: STD RAMP [0] Standard ramp FAST RAMP [1] Fast ramp The Ramp Modes parameter M02P02 controls deceleration ramps only. The settings are as follows: <u>Setting Description</u> 0 STD RAMP Standard ramp 1 FAST RAMP Fast ramp <u>Mode 1 – Fast mode</u> The ramp falls at the programmed deceleration rate subject only to the current limits programmed. This mode is normally used when a AC Regen or braking module is used.	R-W	Range: [0] STD RAMP [1] FAST RAMP Default: [0] STD RAMP
M02P03 ACCEL RAMP 1 Acceleration ramp rate is expressed as the time for the output frequency to increase by 100Hz. For example, a programmed ramp time of 5 seconds causes the frequency to increase or decrease by 50Hz in 2.5 seconds.	R-W	Range: 0.1 to 3276 s/100Hz Default: Size 0: 30.0 sec Size 1: 30.0 sec Size 2: 60.0 sec Size 3: 60.0 sec
M02P04 DECEL RAMP 1 Deceleration ramp rate is expressed as the time for the output frequency to decrease by 100Hz.	R-W	Range: 0.1 to 3276 s/100Hz Default: Size 0: 30.0 sec Size 1: 30.0 sec Size 2: 60.0 sec Size 3: 60.0 sec
M02P05 JOG ACCEL RAMP Acceleration ramp rate is expressed as the time for the output frequency to increase by 100Hz.	R-W	Range: 0.1 to 3276 s/100Hz Default: 60.0 sec
M02P06 JOG DECEL RAMP Deceleration ramp rate is expressed as the time for the output frequency to decrease by 100Hz.	R-W	Range: 0.1 to 3276 s/100Hz Default: 60.0 sec
M02B07 RAMPS SELECTION When M02B07 is set at 1, M01P44 (PRESET INDICATOR) is used to select the associated ACCEL and DECEL ramps. For example, if M01P44 has a value of "PRESET 2" 010, ACCEL RAMP 2 (M02P11) and DECEL RAMP 2 (M02P21) will be selected. This allows the acceleration and deceleration ramps to change automatically with preset frequencies – whether the preset frequencies are selected by M01B22 through M01B24 or automatically by the preset timer. When M02B07 is set at 0, M02P08 to M02P10 & M02P18 to and M02P20 can be independently written to in order to select the acceleration and deceleration ramps.	R-W	Range: 0 or 1 Default: 0
M02B08 ACCEL SEL BIT 0 M02B09 ACCEL SEL BIT 1 M02B10 ACCEL SEL BIT 2 Binary coded selection of the required acceleration ramp to be used. (e.g. – to select M02P14 – Acceleration ramp 5, set M02B08 and M02B10 at 1.)	R-W	Range: 0 or 1 Default: 0
M02P11 ACCEL RAMP 2 M02P12 ACCEL RAMP 3	R-W	Range: 0.1 to 3276 s/100Hz Default: 60.0 sec

<p>M02P13 ACCEL RAMP 4 M02P14 ACCEL RAMP 5 M02P15 ACCEL RAMP 6 M02P16 ACCEL RAMP 7 M02P17 ACCEL RAMP 8</p> <p>Acceleration ramp rate is expressed as the time for the output frequency to increase by 100Hz.</p>		
<p>M02B18 DECEL SEL BIT 0 M02B19 DECEL SEL BIT 1 M02B20 DECEL SEL BIT 2</p> <p>Binary coded selection of the required acceleration ramp to be used. (e.g. – to select M02P24 – Deceleration ramp 5, set M02B18 and M02B20 at 1.)</p>	R-W	Range: 0 or 1 Default: 0
<p>M02P21 DECEL RAMP 2 M02P22 DECEL RAMP 3 M02P23 DECEL RAMP 4 M02P24 DECEL RAMP 5 M02P25 DECEL RAMP 6 M02P26 DECEL RAMP 7 M02P27 DECEL RAMP 8</p> <p>Deceleration ramp is expressed as the time for the output frequency to decrease by 100Hz.</p>	R-W	Range: 0.1 to 3276 s/100Hz Default: 60.0 sec
<p>M02P32 S-RAMP BAND</p> <p>Enter a value to define the frequency band for the curve at each end of the S-ramp. Time taken for acceleration or deceleration on the curve is double that for a straight ramp.</p> <p>If the ramp time changes during a change of speed, the S-ramp does not give stepless acceleration or deceleration. For example:</p> <p>If different ramp rates are used for acceleration and deceleration, and the drive passes through zero speed.</p> <p>If the ramp rates are changed using the acceleration or deceleration select bits.</p>	R-W	Range: 0 to M01P06 Hz Default: 0
<p>M02P33 ACCEL RECOVER RAMP</p> <p>Use this parameter when using the drive in applications where the load is cyclic in nature (punch Press, vibratory feeder, injection molding machine, kiln and other applications with repeated shock loading where the requirement to minimize speed droop is important).</p> <p>For a typical application as described above, set the following parameters as follow:</p> <p>M02P33 (ACCEL RECOVER RAMP) = 1 sec to .1 sec M00P06 (ACCEL RAMP1) = 1 sec to 5 sec M05P11 (AUTO BOOST VOLT) = 3% to 6% for size 0 2% to 4% for size 1 2% to 3% for size 2 1% to 2% for size 3 M05P14 (FIXED BOOST VOLT) = 2.0% for size 0 1.5% for size 1 1.0% for size 2 0.5% for size 3</p> <p>Change M05P14 only if starting the load is a problem; otherwise leave this parameter at the default setting.</p>	R-W	Range: 0.01 to 100.00 sec Default: 5.0 sec

4-26 DRIVE PROGRAMMING

M02B36 RAMP HOLD Set at 1 to hold the speed reference ramp. If the drive has been commanded to stop, the ramp hold function is disabled.	R-W	Range: 0 or 1 Default: 0
M04P01 MOT CURR-TOTAL Indicates the magnitude of the total motor current.	R-O	Range: 0 to $\pm M11P35$ A Default:
M04P02 MOT CURR-TORQ Indicates the magnitude of the torque-producing motor current.	R-O	Range: 0 to $\pm M11P35$ A Default:
M04P03 MOT CURR-MAGNETZ Indicates the magnitude of the magnetizing motor current.	R-O	Range: 0 to $\pm M11P35$ A Default:
M04P04 MOTOR CURR LIMIT Normal current limit See parameter M05P06.	R-W	Range: 0 to $\frac{M11P35}{M05P06} \times 100$ % Default: 150
M04P05 REGEN CURR LIMIT Normal current limit. See parameter M05P06.	R-W	Range: 0 to $\frac{M11P35}{M05P06} \times 100$ % Default: Max Number
M04P10 TORQUE OUTPUT Indicates torque in the motor as % of rated torque. Below rated frequency, the torque output is equal to the torque-producing current relative to $i_{\text{torq rated}}$. Above rated frequency, the torque is compensated to allow for the reducing flux in the motor.	R-O	Range: Max M05P06 % of max Default:
M04P11 SYM CURRENT LIM After having set the required value of maximum current in M05P06, you may increase or decrease the percentage overload current using M04P11. The maximum percentage that can be set is limited by the overload current rating of the drive. The limit applies when motoring and regenerating. The value of M04P11 is automatically reduced when the value of M05P06 is increased beyond the default value.	R-W	Range: See M04P04 % Default: 120 or 150 min
M05P01 POST-SLIP FREQ Final frequency applied to the motor after the effects of current limits and slip compensation. <u>Note:</u> For scaling purposes use +/- 1.125 x M01P06 Hz for the maximum value of this parameter.	R-O	Range: $\pm M01P06$ Hz Default:
M05P02 MOTOR SHAFT RPM Indicates motor shaft RPM. The number of poles must be entered correctly in M00P04 (M05P10).	R-O	Range: 0 to 32760 RPM Default:
M05P03 MOTOR VOLTAGE Indicates the RMS voltage applied to the motor.	R-O	Range: 0 to M05P08 VRMS Default:
M05P04 DC BUS VOLTAGE Indicates the DC bus voltage.	R-O	Range: 0 to 1000.0 V Default:
M05P05 MOTOR POWER Indicates the real component of the power output.	R-O	Range: 0 to $\pm M05P03 \times M11P35 \times \frac{\sqrt{3}}{1000}$ KW Default:
M05P06 RATED MOTOR CURR When parameter M05P06 is set at a value lower than the default rating of the drive, the maximum current of the drive can be greater than 1.5 times the motor rating.	R-W	Range: 0-1800 A Default: Model Dependent

<p>Consequently, the maximum value of current limit and torque parameters (M04P04, M04P05, M04P06, M04P11 and M06P04) can be increased proportionately.</p> <p>For example, if a 180 Amp drive has parameter M05P06 set at 90 Amps, the maximum values of parameters M04P04, M04P05, M04P11 and M06P04 can be 300% (2 x 150%). This allows larger drives to be used for a high starting torque.</p> <p>When the value is increased beyond the default value of M05P06, the value of M04P11 is automatically decreased.</p> <p>The value entered affects the following:</p> <ul style="list-style-type: none"> Slip compensation Dynamic V/f Ixt detection level <p><u>Industrial and HVAC applications</u></p> <p>Industrial applications benefit from a higher percentage of overload current, but have a lower nominal current. HVAC applications benefit from a higher nominal current, but have a lower percentage of overload current (120%). The overload current has the same value in each case. See parameter M05P18.</p>		
<p>M05P07 RATED MOTOR RPM Enter the value from the motor rating plate. This is used by the drive to apply correct slip compensation.</p>	R-W	Range: 0 to 32760 RPM Default: 0
<p>M05P08 RATED MOTOR VOLT Enter the value from the motor rating plate in order to define the maximum output voltage of the drive.</p>	R-W	Range: 100 to 600 VRMS Default: 240 480 575
<p>M05P09 BASE MOTOR FREQ Enter a value of frequency at which the rated voltage is to be applied to the motor. The motor then enters the constant-power or field-weakening region.</p>	R-W	Range: 10.0 to 600 Hz Default: 60.0
<p>M05P10 NUMBER OF POLES Enter the value from the motor rating plate for correct slip compensation and RPM indication.</p>	R-W	Range: [0] (2 POLES) to [15] (32 POLES) Default: [1] (4 POLES)
<p>M05P11 AUTO BOOST VOLT The level of boost is determined by: Autoboost = Voltage boost x itorq/I_{torq} rated Use this parameter when using the drive in applications where the load is hard to start. Set the following parameters as follow: M05P11 (AUTO BOOST VOLT) = 3% to 6% for size 0 2% to 4% for size 1 2% to 3% for size 2 1% to 2% for size 3 M05P14 (FIXED BOOST VOLT) = 2.0% for size 0 1.5% for size 1 1.0% for size 2 0.5% for size 3 Do not increase M05P11 & M05P14 above the recommended values before checking with the factory.</p>	R-W	Range: 0 to 25.5% of M05P08 Default: Size 0: 1% Size 1: 1% Size 2: 0.5% Size 3: 0.3%
<p>M05P12 VOLT CONTR MODE [0] AUTO Auto boost only [1] FIXED Fixed boost only [2] AUTO+ FIXD Auto boost & fixed boost only</p>	R-W	Range: [0] to [2] Default: [2] AUTO + FIXD

<p>phase loss. An INPUTLOSS fault is generated when excessive AC line voltage unbalance or phase loss is detected.</p>		
<p>M05P48 DC BUS RIPPLE Indicates the peak to peak ripple on the DC bus voltage. The DC bus voltage is continuously monitored for excessive ripple when the drive is running. A BUSRIPPLE FAULT is generated when the ripple becomes excessive in order to protect the drive. The BUSRIPPLE fault can be caused due to excessive AC line voltage unbalance, phase loss or defective DC bus capacitors.</p>	R-O	Range: 0.0 to 1000.0 V Default:
<p>M05P50 BUS CAPACITANCE Represents the DC bus capacitance of the drive measured at power-down. This value is model dependent is used mainly for troubleshooting.</p>	R-O	Range: 0.0 to 32767 $\mu\text{sec}/\text{V}^2$ Default:
<p>M05P54 IxT BREAK FREQ Used to program the speed sensitive IxT curve. When operating a general purpose (TEFC) motor at reduced speeds, the ability to dissipate heat is also reduced due to slower cooling fan speed. This parameter sets the motor frequency break point below which motor derating is required. See parameter M10B07 (IxT ALARM) for details on the speed sensitive overload feature.</p>	R-W	Range: 1.0 to M05P09 Hz Default: 60.0
<p>M05P55 IxT ZER FRQ THLD Used to program the speed sensitive IxT curve. When operating a general purpose (TEFC) motor at reduced speeds, the ability to dissipate heat is also reduced due to slower cooling fan speed. This parameter determines the motor derating at low speeds. Specifically, this parameter sets the maximum continuous motor current at zero speed. A value of 60.0 is suggested for these type motors. For blower-cooled (TENV) motors, a value of 100.0 is suggested. See parameter M10B07 (IxT ALARM) for details on the speed sensitive overload feature.</p>	R-W	Range: 1.0 to 100.0 % Default: 100.0
<p>M06P01 STOP MODE Parameter M06P01 controls the stopping mode. In Torque Mode, regardless of M06P01 value, the stopping method is always coast to stop.</p> <p>[0] RAMP The drive ramps to zero speed [1] COAST Coast to stop [2] RAMP+DC Ramp + DC injection braking [3] DC INJECT Automatic DC injection braking [4] TIMED DC Timed DC injection braking</p> <p>The settings are described below:</p> <p><u>[0] Ramp stop:</u> The drive ramps to zero speed during the first phase; in the second phase the output is disabled.</p> <p><u>[1] Coast to Stop:</u> The inverter output is disabled as soon as a STOP command is received, and the motor coasts to rest. The inverter cannot be re-enabled for a time delay "de-flux time". The de-flux time allows the rotor flux to decay in induction motors. The de-flux time is model dependent.</p>	R-W	Range: [0] to [4] Default: [0] RAMP

4-30 DRIVE PROGRAMMING

<p><u>[2] Ramp plus DC injection braking:</u> The drive ramps to zero speed during the first phase; in the second phase injection braking is used at a current level programmed in parameter M06P04 for a time specified by M06P05.</p> <p><u>[3] Automatic DC injection braking</u> In the first phase after a stop command the inverter output is disabled for a time to de-flux the rotor. In the second phase injection braking is used at a current level programmed in parameter M06P04 for a time automatically determined by the drive when zero speed is detected. The drive automatically senses zero speed and therefore it adjusts the injection time to suit the application. If the injection current level specified in M06P04 is too small the drive will not sense zero speed (normally a minimum of 50 - 60% is required for M06P04)</p> <p><u>[4] Timed DC injection braking</u> In the first phase after a stop command the inverter output is disabled for a time to de-flux the rotor. In the second phase injection braking is used at a current level programmed in parameter M06P04 for a time specified by M06P05.</p>		
<p>M06P02 AUTO-START MODE There are three modes:</p> <p>[0] DISABLED The drive will not automatically start when AC power is applied.</p> <p>[1] ALWAYS The drive always starts when AC power is applied.</p> <p>[2] RUNNING The drive starts only if it had been running when AC power was previously removed.</p> <p>The Auto-start modes are as follows: The Auto-start modes define the behavior of the drive when AC power is applied.</p> <p><u>Mode[0] – DISABLED</u> The drive will not automatically start when AC power is applied.</p> <p><u>Mode [1] – ALWAYS</u> The drive always starts irrespective of the state before AC power was removed. The STOP input switch must be closed.</p> <p><u>Mode [2] – RUNNING (Power-down dependent)</u> The drive starts only if it had been running when AC power was removed. The STOP input switch must be closed.</p>	R-W	Range: [0] to [2] Default: [0] DISABLED
<p>M06P03 AC SUPPLY MODE This parameter is used to tell the drive if the AC line voltage source is from a three phase supply or a single phase supply. Note: set this parameter to 1-PHASE only if the drive is factory engineered for single phase operation or the drive is derated. The derating factor is usually 50%, but this is</p>	R-W	Range: 1-PHASE or 3-PHASE Default: 3-PHASE

<p>not always true. Contact the factory if single phase operation is required. [0] 1-PHASE Single phase operation [1] 3-PHASE Three phase operation</p>																																						
<p>M06P04 DC INJECT LEVEL DC Current level at injection.</p>	R-W	Range: 0 to $\frac{M11P35}{M05P06} \times 100$ % of FLC Default: 100																																				
<p>M06P05 DC INJECT TIME When M06P01 is set at [2] or [4], enter the required injection time.</p>	R-W	Range: 0.5 to 25.5 Default: 5.0																																				
<p>M06B06 DB CHOPPER MODE Use this parameter to enable or disable the Brake Chopper Function when the drive is not running. - When M06P06 is set at 0 Brake Chopper function is enabled even when the drive is not running - When M06P06 is set at 1 Brake Chopper function is disabled when the drive is not running</p>	R-W	Range: 0 or 1 Default: 0																																				
<p>M06P07 SEQUENCING MODE [0] 2OR3-WIRE: 2 or 3-wire logic [1] 3-WIRE SP: 3-wire Run Fwd / Run Rev [2] RFWD RREV: Run Fwd / Run Rev logic [3] 2-WIRE: 2-wire logic</p>	R-W	Range: [0] to [3] Default: [0] 2OR3-WIRE																																				
<p>M06B08 SEQUENCING BIT 0 M06B09 SEQUENCING BIT 1 M06B10 SEQUENCING BIT 2 M06B11 SEQUENCING BIT 3 Binary coded selection of sequencer mode. There are four sequencing modes as shown below. Any terminal can be used for any of the function in each mode. [0] [2OR3-WIRE] 2 or 3-wire logic [1] [3-WIRE-SP] 3-wire Run Fwd / Run Rev [2] [RFWD RREV] Run Fwd / Run Rev logic [3] [2-WIRE] 2-wire logic</p> <p>[0] 2OR3-WIRE: 2 or 3-wire logic</p> <table border="0" style="width: 100%;"> <tr> <td></td> <td style="text-align: right;">TB2 default</td> <td></td> </tr> <tr> <td></td> <td style="text-align: right;">pin number</td> <td></td> </tr> <tr> <td>Sequencing bit 0</td> <td>Run (latching)</td> <td style="text-align: right;">2</td> </tr> <tr> <td>Sequencing bit 1</td> <td>Jog</td> <td style="text-align: right;">3</td> </tr> <tr> <td>Sequencing bit 2</td> <td>Reverse</td> <td style="text-align: right;">4</td> </tr> <tr> <td>Sequencing bit 3</td> <td>Not used</td> <td></td> </tr> </table> <p>When Keypad mode is enabled, sequencing bit 0 can be over-ridden by the RUN key and sequencing bit 2 can be over-ridden by the FWD-REV keypad key.</p> <p>[1] 3-WIRE-SP: 3-wire Run Fwd / Run Rev</p> <table border="0" style="width: 100%;"> <tr> <td></td> <td style="text-align: right;">TB2 default</td> <td></td> </tr> <tr> <td></td> <td style="text-align: right;">pin number</td> <td></td> </tr> <tr> <td>Sequencing bit 0</td> <td>Run forward (latching)</td> <td style="text-align: right;">2</td> </tr> <tr> <td>Sequencing bit 1</td> <td>Jog forward</td> <td style="text-align: right;">3</td> </tr> <tr> <td>Sequencing bit 2</td> <td>Run Reverse (latching)</td> <td style="text-align: right;">4</td> </tr> <tr> <td>Sequencing bit 3</td> <td>Jog Reverse</td> <td></td> </tr> </table> <p>When Keypad mode is enabled, the RUN key can also start</p>		TB2 default			pin number		Sequencing bit 0	Run (latching)	2	Sequencing bit 1	Jog	3	Sequencing bit 2	Reverse	4	Sequencing bit 3	Not used			TB2 default			pin number		Sequencing bit 0	Run forward (latching)	2	Sequencing bit 1	Jog forward	3	Sequencing bit 2	Run Reverse (latching)	4	Sequencing bit 3	Jog Reverse		R-W	Range: 0 or 1 Default: 0
	TB2 default																																					
	pin number																																					
Sequencing bit 0	Run (latching)	2																																				
Sequencing bit 1	Jog	3																																				
Sequencing bit 2	Reverse	4																																				
Sequencing bit 3	Not used																																					
	TB2 default																																					
	pin number																																					
Sequencing bit 0	Run forward (latching)	2																																				
Sequencing bit 1	Jog forward	3																																				
Sequencing bit 2	Run Reverse (latching)	4																																				
Sequencing bit 3	Jog Reverse																																					

4-32 DRIVE PROGRAMMING

the drive, and the FWD-REV key can change the direction (unless one of the sequencing bit signals is being held, in which case the sequencing bits have priority). Jog states always over-ride run.

[2] RFWD RREV: Run Fwd / Run Rev logic

		TB2 default pin number
Sequencing bit 0	Run forward	2
Sequencing bit 1	Jog	3
Sequencing bit 2	Run Reverse	4
Sequencing bit 3	Not used	

For the drive to run, parameter M08P01 (Stop input), and sequencing bit 0 or 2 must be set at 1.

To Jog forward or reverse, the Jog sequencing bit must be set at 1, together with the appropriate direction sequencing bit. Pressing the RUN, STOP and FWD-REV keypad keys has no effect.

[3] 2-WIRE: 2- wire logic

		TB2 default pin number
Sequencing bit 0	Run	2
Sequencing bit 1	Jog	3
Sequencing bit 2	Reverse	4
Sequencing bit 3	Not used	

Read-only parameter M08B01 (Stop input) indicates that the drive is enabled or disabled. When M08B01 = 0, the drive is disabled.

Sequencing bit 0 must be set at 1 for the drive to run. When sequencing bit 0 is set at 0 the drive stops.

To jog forward or reverse the jog sequencing bit must be active together with the run bit and the appropriate direction selection.

Because this mode requires signals to be continuously applied to the control signal terminals for the drive to run, the RUN, STOP and FWD-REV keypad keys are inactive.

M06B12 M06B13 M06B14	KEYPAD START KEYPAD STOP KEYPAD FWD/REV When a key is pressed the related parameter is set at 1.	R-O	Range: 0 or 1 Default: 0
M06B15 M06B16 M06B17	EN KEYPAD RUN EN KEYPAD STOP EN KEYPAD FWD/RV Use these parameters to enable or disable individual keys of the Control Keypad. When M06P18 is set at 0 and M01B08 (Keypad control) is set at 1, these parameters are automatically set at 1.	R-W	Range: 0 or 1 Default: 0
M06P18	KEYPAD CONT MODE Set at "NO KEYS" to disable M01B08 from controlling the Keypad Keys: M06B15, M06B16, and M06B17. [0] ALL KEYS M06B15, M06B16, and M06B17 controlled by M01P08. [1] NO KEYS M06B15, M06B16, and M06B17 not controlled by M01P08.	R-W	Range: [0] TO [2] Default: [2] RUN & STOP

[2] RUN & STOP M06B15 and M06B16 controlled by M01P08.		
M06B20 DISABL INPUTLOSS This parameter is used only when the drive is operated from a 3-PHASE AC line supply to detect a phase loss or excessive voltage unbalance. This parameter is defaulted at 0 (enable input loss). If an INPUTLOSS fault occurs, check for excessive supply voltage unbalance or phase loss. This is a protective feature and it may be disabled temporarily only for diagnostic purposes.	R-W	Range: 0 or 1 Default: 0 (enable)
M06B21 DISABL MOTORLOSS This parameter is defaulted at 0 (enable motor loss). This feature is used to protect the drive. Disable only when running a drive without the motor connected for testing purposes and make sure to re-enable when testing is done. A MOTORLOSS fault is generated when the motor current is not detected or the motor current is below what it should be when the drive is in the RUN state.	R-W	Range: 0 or 1 Default: 0 (enable)
M06B22 DISABLE FWD ROT Set at 1 to prevent the drive producing forward rotation of the motor.	R-W	Range: 0 or 1 Default: 0
M06B23 DISABLE REV ROT Set at 0 to enable the drive to reverse the rotation of the motor.	R-W	Range: 0 or 1 Default: 1
M06B24 MOTOR FLYCATCH Set M06B24 at 1 to select this feature. Enable or disable drive flycatcher (catch a spinning motor) feature.	R-W	Range: 0 or 1 Default: 0
M06B25 ZERO MOP AT STRT When M06P25 is set at 1, and AC power is applied to the drive, the motorized potentiometer output is set at zero. When M06P25 is set at 0, and AC power is applied to the drive, the motorized potentiometer output returns to the level that existed when AC power was previously removed.	R-W	Range: 0 or 1 Default: 0
M06P26 MOP RATE The value in parameter M06P26 defines the time taken for the motorized potentiometer function to ramp from 0 to 100.0%. Twice this time will be taken to adjust the output from - 100.0% to +100.0%.	R-W	Range: 5 to 255 s/100% Default: 20
M06B27 MOP UP M06B28 MOP DOWN To control these motorized potentiometer parameters, two digital inputs must be programmed. Apply signals to these inputs to control the up and down functions.	R-W	Range: 0 or 1 Default: 0
M06B29 BIPOLAR MOP Set M06P29 at 1 to allow the motorized potentiometer to go negative, otherwise the output remains positive only.	R-W	Range: 0 or 1 Default: 0
M06P30 MOP SCALE FACTOR This parameter can be used to restrict the output of the motorized potentiometer to operate over a reduced range so that it can be used as a trim, for example.	R-W	Range: 0.000 to 10.000 Default: 1.000
M06P31 MOP DESTINATION Program the destination parameter that the motorized potentiometer is to control. If the motorized	R-W	Range: MXXPXX Default: M00P00 (00.00)

4-34 DRIVE PROGRAMMING

<p>potentiometer is to control speed, it is suggested that one of the preset speed parameters is entered in M06P31. If the motorized potentiometer is to trim speed, it is suggested that M01P15 (offset parameter) is entered in M06P31.</p> <p>Factory defaulted to an unused parameter M00P00.</p> <p><u>Note:</u> The scaling to the destination parameter is such that when M06P32 (MOP OUTPUT) = 100.0 %, and M06P30 (MOP SCALE FACTOR) = 1.000, the destination parameter will be set to its maximum value.</p>		
<p>M06P32 MOP OUTPUT Saved at power down.</p> <p>This parameter indicates the current level of the motorized potentiometer. The value is saved when AC power is removed from the drive.</p>	R-O	Range: ±100.00 % Default:
<p>M06P38 MINFLY STRT FREQ Motor Flycatch Min Starting Search Frequency in % of Max Frequency (M01P06). The search always starts from the previous speed in which the drive last ran only if the speed was above the Min Starting Search Frequency. The Min Starting Search Frequency can be set at a higher level above set speed in applications where the motor is load-sharing or overhauled to make sure the search always starts at least at or above motor speed at the time of the search.</p>	R-W	Range: 0-100% Default: 50%
<p>M06B46 EN KEYPAD EXTRIP</p> <p>Set this parameter to 1 to enable the Control Keypad Stop/Reset key to cause an "EXTERNAL TRIP" fault if it is pressed twice rapidly within a one second interval. This feature, when enabled, is active in all sequencing modes for parameter M06P07 (SEQUENCING MODE). Additionally when this parameter is set to 1, the "KEYPDLOSS" fault detection is enabled regardless of the value for parameter M06B47 (EN KEYPAD LOSS).</p>	R-W	Range: 0 or 1 Default: 0
<p>M06B47 EN KEYPAD LOSS</p> <p>Set this parameter to 1 to enable the "loss of Control Keypad communications" fault. When this parameter is set to 1, a "KEYPDLOSS" fault will be generated if there is no communication detected between the Control Keypad and the drive for a time period equal to parameter M06P48 (KEYPAD TIMEOUT).</p>	R-W	Range: 0 or 1 Default: 0
<p>M06P48 KEYPAD TIMEOUT</p> <p>Period of time over which communications between the drive and the Control Keypad must be lost before a "KEYPDLOSS" fault is generated. See M06B47 for details.</p>	R-W	Range: 0.2 to 3276.0 sec Default: 1.0
<p>M06B49 DISABLE MOD FLT</p> <p>If the drive model is one that has parallel power modules, setting this parameter to "1" disables the power module check described under parameter M10P52 (MODULES DETECTED). Note that the Factory should be consulted before setting this parameter to "1".</p>	R-W	Range: 0 or 1 Default: 0
<p>M06B50 KPAD SECURITY BYP</p> <p>Keypad Security Bypass. If this parameter is set to "1", the user can still access parameter M01P04 (KEYPAD REFERENCE) when parameter M11P29 (SECURITY CODE)</p>	R-W	Range: 0 or 1 Default: 0

<p>is set to a non-zero value. This allows an operator to use the Motor Operated Potentiometer (MOP) mode to control motor speed, but be locked-out from changing any other R/W parameters in the drive.</p>		
<p>M06P56 FLYCATCHING MODE [0] UNIDIRECT: Unidirectional [1] BIDIRECT: Bidirectional</p> <p>The Flycatching modes define the behavior of the drive when it is started and parameter M06P24 (MOTOR FLYCATCH) is set to "1".</p> <p>The Flycatching modes are as follows:</p> <p><u>Mode [0] - UNIDIRECT</u> Unidirectional Frequency Scanning. The drive scanning frequency will start at the last known running frequency with the polarity of the present commanded frequency reference.</p> <p><u>Mode [1] - BIDIRECT</u> Bidirectional Frequency Scanning. The drive scanning frequency will start at the last known running frequency with the polarity of the present commanded frequency reference. If the motor speed is not found, the drive will start scanning in the opposite direction.</p>	R-W	Range: [0] to [1] Default: [0] UNIDIRECT
<p>M07P01 ANALOG IN 1 M07P02 ANALOG IN 2 M07P03 ANALOG IN 3</p> <p>Displays the amplitude of the signal applied to Analog input 1, 2, or 3. The scaling is such that when the voltage between the analog input terminal for the given analog input and the common is 12.2 volts, the corresponding parameter above will read 100.0%. *Analog input 3 is optional.</p>	R-O	Range: ±100% for voltage input 0 to 100% for current input Default:
<p>M07P07 ANALOG OUT 1 SRC M07P08 ANALOG OUT 2 SRC M07P09 ANALOG OUT 3 SRC</p> <p>Enter the parameter number that is required to supply a value to Analog output 1. * Analog output 3 is optional.</p> <p><u>Note for M07P07:</u> The scaling of the source parameter is such that when it is at its maximum value and M07P20 (ANALOG OUT1 SCAL) = 1.000, +/- 10.00 volts will be present on ANALOG OUT 1.</p> <p><u>Note for M07P08:</u> The scaling of the source parameter is such that when it is at its maximum value and M07P22 (ANALOG OUT2 SCAL) = 1.000, +/- 10.00 volts will be present on ANALOG OUT 2.</p> <p><u>Note for M07P09:</u> The scaling of the source parameter is such that when it is at its maximum value and M07P24 (ANALOG OUT3 SCAL) = 1.000, +/- 10.00 volts will be present on ANALOG OUT 3.</p>	R-W	Range: MXXPXX Default: M05P01 (05.01) M04P01 (04.01) M05P03 (05.03)

4-36 DRIVE PROGRAMMING

<p>M07P10 ANALOG IN 1 MODE</p> <table border="1"> <thead> <tr> <th>Set</th> <th>Display</th> <th>Mode</th> </tr> </thead> <tbody> <tr> <td>[0]</td> <td>VOLT IN</td> <td>Voltage input</td> </tr> <tr> <td>[1]</td> <td>0-20 MA</td> <td>0 – 20 mA</td> </tr> <tr> <td>[2]</td> <td>20-0 MA</td> <td>20 – 0 mA</td> </tr> <tr> <td>[3]</td> <td>4-20MA TP</td> <td>4 – 20 mA Trip on current loop loss</td> </tr> <tr> <td>[4]</td> <td>20-4MA TP</td> <td>20 – 4 mA Trip on current loop loss</td> </tr> <tr> <td>[5]</td> <td>4-20MA MS</td> <td>4 – 20 mA Min speed current loop loss</td> </tr> <tr> <td>[6]</td> <td>20-4MA MS</td> <td>20 – 4 mA Min speed on current loop loss</td> </tr> <tr> <td>[7]</td> <td>4-20MA LS</td> <td>4 – 20 mA Last speed on current loop loss</td> </tr> <tr> <td>[8]</td> <td>20-4MA LS</td> <td>20 – 4 mA Last speed on current loop loss</td> </tr> <tr> <td>[9]</td> <td>4-20MA KP</td> <td>4 – 20 mA Last speed on current loop loss Also copy Last speed to KEYPAD REFERENCE (M01P04)</td> </tr> <tr> <td>[10]</td> <td>20-4MA KP</td> <td>20 – 4 mA Last speed on current loop loss Also copy Last speed to KEYPAD REFERENCE (M01P04)</td> </tr> </tbody> </table> <p>In 4-20mA and 20-4mA operation, the threshold for current-loop loss is 3mA.</p> <p>Read-only parameters and some other sensitive parameters (such as switching frequency) cannot be controlled using the analog inputs.</p> <p>When 0-20MA, 20-0MA, 4-20MA, or 20-4MA is used, wire the current signal to the on-board burden resistor at TB4-4 & TB4-5. Jumper TB4-4 to the either analog reference #1 (TB4-2) or analog reference #2 (TB4-3). The on-board burden resistor converts current to voltage before the signal is sent to analog reference #1 or #2.</p> <p>If an inverse function is desired using 10V to 0V signal (10V = lower speed & 0V = upper speed), program ANALOG IN MODE to [2] 20-0MA and wire to analog reference #1 (TB4-2) or analog reference #2 (TB4-3) directly. Do not use the burden resistor in this case, since the signal is already a voltage.</p>	Set	Display	Mode	[0]	VOLT IN	Voltage input	[1]	0-20 MA	0 – 20 mA	[2]	20-0 MA	20 – 0 mA	[3]	4-20MA TP	4 – 20 mA Trip on current loop loss	[4]	20-4MA TP	20 – 4 mA Trip on current loop loss	[5]	4-20MA MS	4 – 20 mA Min speed current loop loss	[6]	20-4MA MS	20 – 4 mA Min speed on current loop loss	[7]	4-20MA LS	4 – 20 mA Last speed on current loop loss	[8]	20-4MA LS	20 – 4 mA Last speed on current loop loss	[9]	4-20MA KP	4 – 20 mA Last speed on current loop loss Also copy Last speed to KEYPAD REFERENCE (M01P04)	[10]	20-4MA KP	20 – 4 mA Last speed on current loop loss Also copy Last speed to KEYPAD REFERENCE (M01P04)	R-W	Range: [0] to [10] Default: [0] VOLT IN
Set	Display	Mode																																				
[0]	VOLT IN	Voltage input																																				
[1]	0-20 MA	0 – 20 mA																																				
[2]	20-0 MA	20 – 0 mA																																				
[3]	4-20MA TP	4 – 20 mA Trip on current loop loss																																				
[4]	20-4MA TP	20 – 4 mA Trip on current loop loss																																				
[5]	4-20MA MS	4 – 20 mA Min speed current loop loss																																				
[6]	20-4MA MS	20 – 4 mA Min speed on current loop loss																																				
[7]	4-20MA LS	4 – 20 mA Last speed on current loop loss																																				
[8]	20-4MA LS	20 – 4 mA Last speed on current loop loss																																				
[9]	4-20MA KP	4 – 20 mA Last speed on current loop loss Also copy Last speed to KEYPAD REFERENCE (M01P04)																																				
[10]	20-4MA KP	20 – 4 mA Last speed on current loop loss Also copy Last speed to KEYPAD REFERENCE (M01P04)																																				
<p>M07P11 ANALOG IN 1 SCAL</p> <p>Enter a value to scale Analog input 1.</p> <p>NOTE: In most cases, adjustment of M07P11, M07P14 and M07P17 is not necessary since the inputs are automatically scaled so that 100% input signal sets the destination parameter at 60 Hz (value of MAX FREQUENCY M01P06)</p> <p>When a speed pot is used (wired as shown in Figure 2-5), You may want to set ANALOG IN 1 SCAL to 0.800 so that maximum pot travel corresponds to 60Hz.</p>	R-W	Range: 0 to 10.000 Default: 1.000																																				
<p>M07P12 ANALOG IN 1 DEST</p> <p>Enter the parameter that Analog input 1 is to control.</p> <p><u>Note:</u> The scaling to the destination parameter is such that when M07P11 (ANALOG IN 1 SCAL) = 1.000 and ANALOG IN 1 is at its rated value (10.00 volts, 20 ma, 4ma or 0 ma depending on the value of M07P10 (ANALOG IN 1 MODE)), the destination parameter will be set to its maximum value.</p>	R-W	Range: MXXPXX Default: M01P19 (01.19)																																				
<p>M07P13 ANALOG IN 2 MODE</p> <p>See parameter M07P10.</p>	R-W	Range: [0] to [10] Default: [5] 4 to 20MA MS																																				


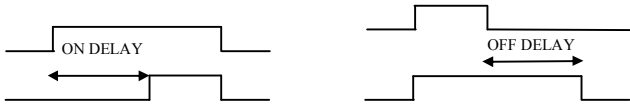
<p>M07P14 ANALOG IN 2 SCAL Enter a value to scale Analog input 2. See M07P11 for details.</p>	R-W	Range: 0 to 10.000 Default: 1.000
<p>M07P15 ANALOG IN 2 DEST Enter the parameter that Analog input 2 is to control.</p> <p><u>Note:</u> The scaling to the destination parameter is such that when M07P14 (ANALOG IN 2 SCAL) = 1.000 and ANALOG IN 2 is at its rated value (10.00 volts, 20 ma, 4ma or 0 ma depending on the value of M07P13 (ANALOG IN 2 MODE)), the destination parameter will be set to its maximum value.</p>	R-W	Range: MXXPXX Default: M01P20 (01.20)
<p>M07P16 ANALOG IN 3 MODE See parameter M07P10. * Analog input 3 is optional.</p>	R-W	Range: [0] to [10] Default: [0] VOLT IN
<p>M07P17 ANALOG IN 3 SCAL Enter a value to scale Analog input 3. See M07P11 for details.</p>	R-W	Range: 0 to 10.000 Default: 1.000
<p>M07P18 ANALOG IN 3 DEST Enter the parameter that Analog input 3 is to control. Factory defaulted to an unused parameter M00P00.</p> <ul style="list-style-type: none"> • Analog input 3 is optional. <p><u>Note:</u> The scaling to the destination parameter is such that when M07P17 (ANALOG IN 3 SCAL) = 1.000 and ANALOG IN 3 is at its rated value (10.00 volts, 20 ma, 4ma or 0 ma depending on the value of M07P16 (ANALOG IN 3 MODE)), the destination parameter will be set to its maximum value.</p>	R-W	Range: MXXPXX Default: M00P00 (00.00)
<p>M07P20 ANALOG OUT1 SCAL Enter a value to scale Analog output 1.</p> <p>NOTE: In most cases, adjustment of M07P20, M07P22 and M07P24 is not necessary since the output is automatically scaled so that 100% output signal is produced when the source parameter is at maximum.</p>	R-W	Range: 0 to ±10.000 Default: 1.000
<p>M07P22 ANALOG OUT2 SCAL Enter a value to scale Analog output 2.</p>	R-W	Range: 0 to ±10.000 Default: 1.000
<p>M07P24 ANALOG OUT3 SCAL Enter a value to scale Analog output 3. * Analog input 3 is optional.</p>	R-W	Range: 0 to ±10.000 Default: 1.000
<p>M07B25 CALIBRATE REF 1 M07B26 CALIBRATE REF 2 M07B27 CALIBRATE REF 3</p> <p>When set at 1 the signal applied to analog input# 1, 2, or 3 is automatically scaled so that the applied input signal corresponds to the maximum value of the destination parameter times a multiplier.</p> <p>Example: ANALOG INPUT DESTINATION (M07P12) its destination is defaulted to ANALOG REFERENCE 1 (M01P19). When M07B25 is set to 1, the applied signal at analog input#1 at TB4-2 is automatically scaled to correspond to 60Hz (Value at MAX FREQUENCY M01P06).</p>	R-W	Range: 0 or 1 Default: 0
<p>M08B01 F1 ENABLE-STOP INPUT M08B02 F2 PROGRAM INPUT M08B03 F3 PROGRAM INPUT</p>	R-O	Range: 0 or 1 Default:

4-38 DRIVE PROGRAMMING

<p>M08B04 F4 PROGRAM INPUT M08B05 F5 PROGRAM INPUT M08B06 F6 PROGRAM INPUT M08B07 F7 PROGRAM INPUT M08B08 F8 PROGRAM INPUT</p> <p>Bit parameters M08B01 to M08B08 indicate the logic states of the programmable digital inputs F1 to F8 as follows:</p> <p style="padding-left: 40px;">0 = Inactive (logic 0) 1 = Active (logic 1)</p> <p>The input destination parameters (M08B09, etc.) define the parameter that the related programmable input (F2, etc.) is to control.</p> <p>Variable parameters, read-only parameters and Keypad control parameters (M06P12 to M06P14) cannot be controlled by the programmable digital inputs.</p> <p><u>Note:</u> F1 (Enable/Stop) input is not programmable. When F1 input is open (de-energized) the drive will ramp stop in 3-wire control if the stopping mode is ramp-stop and always coast stops in 2-wire control regardless of the stopping mode.</p>		
<p>M08P09 F2 INPUT DESTINA Enter the parameter number to use as the destination for input F2. Default: Sequencing bit 0 (run).</p>	R-W	Range: MXXPXX Default: M06B08 (06.08)
<p>M08B10 F2 INVERT Set to 1 to invert the logic sense of F2.</p>	R-W	Range: 0 or 1 Default: 0
<p>M08P11 F3 INPUT DESTINA Enter the parameter number to use as the destination for input F3. Default: Reset</p>	R-W	Range: MXXPXX Default: M10B24 (10.24)
<p>M08B12 F3 INVERT Set to 1 to invert the logic sense of F3.</p>	R-W	Range: 0 or 1 Default: 0
<p>M08P13 F4 INPUT DESTINA Enter the parameter number to use as the destination for input F4. Default: External Trip</p>	R-W	Range: MXXPXX Default: M10B29 (10.29)
<p>M08B14 F4 INVERT Set to 1 to invert the logic sense of F4.</p>	R-W	Range: 0 or 1 Default: 0
<p>M08P15 F5 INPUT DESTINA Enter the parameter number to use as the destination for input F5. Default: Sequencing bit 1 (Jog).</p>	R-W	Range: MXXPXX Default: M06B09 (06.09)
<p>M08B16 F5 INVERT Set to 1 to invert the logic sense of F5.</p>	R-W	Range: 0 or 1 Default: 0
<p>M08P17 F6 INPUT DESTINA Enter the parameter number to use as the destination for input F6. Default: Sequencing bit 2 (Reverse).</p>	R-W	Range: MXXPXX Default: M06B10 (06.10)
<p>M08B18 F6 INVERT Set to 1 to invert the logic sense of F6.</p>	R-W	Range: 0 or 1 Default: 0

M08P19	F7 INPUT DESTINA Enter the parameter number to use as the destination for input F7. Default: Analog reference 2 select (Auto).	R-W	Range: MXXPXX Default: M01B21 (01.21)
M08B20	F7 INVERT Set to 1 to invert the logic sense of F7.	R-W	Range: 0 or 1 Default: 0
M08P21	F8 INPUT DESTINA Enter the parameter number to use as the destination for input F8. Default: Control Keypad select.	R-W	Range: MXXPXX Default: M01B08 (01.08)
M08B22	F8 INVERT Set to 1 to invert the logic sense of F8.	R-W	Range: 0 or 1 Default: 0
M08P23	MODE SELECT SRC Enter the bit parameter number to be used as a source for the mode selector. The mode selector is available to the user to change between any two modes of operation using only a bit parameter or a digital input. Factory defaulted to an unused parameter M00B00.	R-W	Range: MXXBXX Default: M00B00 (00.00)
M08P24	MODESEL OUT DEST Define the destination of the mode selector output. The destination must be a valid R-W mode parameter, a parameter with multiple choice. Factory defaulted to an unused parameter M00P00.	R-W	Range: MXXPXX Default: M00P00 (00.00)
M08P25	MODE SELECT OUT This parameter shows the selected mode output value of the mode selector output.	R-O	Range: [0] to [8] Default:
M08P26	MODE SEL LOGIC 0 Enter the desired mode number when the mode selector source bit parameter is at logic 0	R-W	Range: [0] to [8] Default: [0]
M08P27	MODE SEL LOGIC 1 Enter the desired mode number when the mode selector source bit parameter is at logic 1	R-W	Range: [0] to [8] Default: [1]
M09B01 M09B02 M09B03 M09B04 M09B05 M09B06 M09B07	DIGITAL OUTPUT 1 DIGITAL OUTPUT 2 DIGITAL OUTPUT 3 DIGITAL OUTPUT 4 DIGITAL OUTPUT 5 DIGITAL OUTPUT 6 DIGITAL OUTPUT 7 These parameters show the logic state of the 7 digital outputs. * Digital outputs 3 to 7 are optional.	R-O	Range: 0 or 1 Default: 0
M09P08	BIT SEL1 SOURCE1 Enter the bit parameter number to be used as source 1 for bit selector 1. Factory defaulted to an unused parameter M00P00 which is equivalent to setting the source to 1.	R-W	Range: MXXBXX Default: M00B00 (00.00)
M09B09	BIT SEL1 SR1 INV Set at 1 to invert the logic state of source 1 for bit selector 1.	R-W	Range: 0 or 1 Default: 0

4-40 DRIVE PROGRAMMING

<p>M09P10 BIT SEL1 SOURCE2 Enter the bit parameter number to be used as source 2 for bit selector 1. Factory defaulted to an unused parameter M00P00 which is equivalent to setting the source to 1.</p>	R-W	Range: MXXBXX Default: M00B00 (00.00)
<p>M09B11 BIT SEL1 SR2 INV Set at 1 to invert the logic state of source 2 for bit selector 1.</p>	R-W	Range: 0 or 1 Default: 0
<p>M09B12 BIT SEL1 OUT INV Set at 1 to invert the logic state of bit selector 1 output.</p>	R-W	Range: 0 or 1 Default: 0
<p>M09P13 BIT SEL 1 DELAY Enter a value for the required delay for selector 1 output to become active (logic 1). If the parameter value is positive, the delay is an "ON Delay" as shown below. If the parameter value is negative, the delay is an "OFF Delay" as shown below.</p> 	R-W	Range: 0 to ±3276.0 Sec Default: 0
<p>M09P14 BIT SEL2 SOURCE1 Enter the bit parameter number to be used as source 1 for bit selector 2. Factory defaulted to an unused parameter M00P00 which is equivalent to setting the source to 1.</p>	R-W	Range: MXXBXX Default: M00B00 (00.00)
<p>M09B15 BIT SEL2 SR1 INV Set at 1 to invert the logic state of source 1 for bit selector 2.</p>	R-W	Range: 0 or 1 Default: 0
<p>M09P16 BIT SEL2 SOURCE2 Enter the bit parameter number to be used as source 2 for bit selector 2. Factory defaulted to an unused parameter M00P00 which is equivalent to setting the source to 1.</p>	R-W	Range: MXXBXX Default: M00B00 (00.00)
<p>M09B17 BIT SEL2 SR2 INV Set at 1 to invert the logic state of source 2 for bit selector 2.</p>	R-W	Range: 0 or 1 Default: 0
<p>M09B18 BIT SEL2 OUT INV Set at 1 to invert the logic state of bit selector 2 output.</p>	R-W	Range: 0 or 1 Default: 0
<p>M09P19 BIT SEL 2 DELAY Enter a value for the required delay for selector 1 output to become active (logic 1). If the parameter value is positive, the delay is an "ON Delay" as shown below. If the parameter value is negative, the delay is an "OFF Delay" as shown below.</p> 	R-W	Range: 0 to ±3276.0 Sec Default: 0
<p>M09P20 DIGITAL OUT3 SRC Enter the bit parameter number to be used as source for digital output 3. The default setting indicates when drive is at below</p>	R-W	Range: MXXBXX Default: M10B04 (10.04)

	<p>minimum frequency. * Digital outputs 3 to 7 are optional.</p>		
M09B21	<p>DIGITAL OUT3 INV Set at 1 to invert the logic state of digital output 3.</p>	R-W	<p>Range: 0 or 1 Default: 0</p>
M09P22	<p>DIGITAL OUT4 SRC Enter the bit parameter number to be used as source for digital output 4. The default setting indicates when the drive is At speed. * Digital outputs 3 to 7 are optional.</p>	R-W	<p>Range: MXXBXX Default: M10B05 (10.05)</p>
M09B23	<p>DIGITAL OUT4 INV Set at 1 to invert the logic state of digital output 4. * Digital outputs 3 to 7 are optional.</p>	R-W	<p>Range: 0 or 1 Default: 0</p>
M09P24	<p>DIGITAL OUT5 SRC Enter the bit parameter number to be used as source for digital output 5. The default setting indicates when the drive is in Current limit. * Digital outputs 3 to 7 are optional.</p>	R-W	<p>Range: MXXBXX Default: M10B08 (10.08)</p>
M09B25	<p>DIGITAL OUT5 INV Set at 1 to invert the logic state of digital output 5. * Digital outputs 3 to 7 are optional.</p>	R-W	<p>Range: 0 or 1 Default: 0</p>
M09P26	<p>DIGITAL OUT6 SRC Enter the bit parameter number to be used as source for digital output 6. The default setting indicates when Forward direction is demanded. * Digital outputs 3 to 7 are optional.</p>	R-W	<p>Range: MXXBXX Default: M10B13 (10.13)</p>
M09B27	<p>DIGITAL OUT6 INV Set at 1 to invert the logic state of digital output 6. * Digital outputs 3 to 7 are optional.</p>	R-W	<p>Range: 0 or 1 Default: 0</p>
M09P28	<p>DIGITAL OUT7 SRC Enter the bit parameter number to be used as source for digital output 7. The default setting indicates load reached. * Digital outputs 3 to 7 are optional.</p>	R-W	<p>Range: MXXBXX Default: M10B06 (10.06)</p>
M09B29	<p>DIGITAL OUT7 INV Set at 1 to invert the logic state of digital output 7. * Digital outputs 3 to 7 are optional.</p>	R-W	<p>Range: 0 or 1 Default: 0</p>
M09P30	<p>DIGITAL OUT1 SRC Enter the bit parameter number to be used as source for digital output 1. The default setting indicates when drive is running.</p>	R-W	<p>Range: MXXBXX Default: M10B02 (10.02)</p>
M09B31	<p>DIGITAL OUT1 INV Set at 1 to invert the logic state of digital output 1.</p>	R-W	<p>Range: 0 or 1 Default: 0</p>

4-42 DRIVE PROGRAMMING

M09P32	DIGITAL OUT2 SRC Enter the bit parameter number to be used as source for digital output 2. The default setting indicates when drive is normal (not faulted).	R-W	Range: MXXBXX Default: M10B01 (10.01)
M09B33	DIGITAL OUT2 INV Set at 1 to invert the logic state of digital output 2.	R-W	Range: 0 or 1 Default: 0
M09B34	BIT SEL1 OUTPUT This parameter monitors the output of the bit selector 1.	R-O	Range: 0 or 1 Default:
M09P35	BITSEL1 OUT DEST Enter the destination for the output of the bit selector 1. Factory defaulted to an unused parameter M00B00.	R-W	Range: MXXBXX Default: M00B00 (00.00)
M09B36	BIT SEL2 OUTPUT This parameter monitors the output of the bit selector 2.	R-O	Range: 0 or 1 Default:
M09P37	BITSEL2 OUT DEST Enter the destination for the output of the bit selector 2. Factory defaulted to an unused parameter M00B00.	R-W	Range: MXXBXX Default: M00B00 (00.00)
M10B01	DRIVE NORMAL M10B01 = 0 indicates the drive is tripped. M10B01 = 1 indicates the drive is normal (not tripped), or if M10B28 = 1, the drive is tripped but an auto reset is going to occur.	R-O	Range: 0 or 1 Default: 0
M10B02	DRIVE RUNNING M10B02 = 1 indicates the output bridge of the drive is active.	R-O	Range: 0 or 1 Default: 0
M10B03	AT ZERO SPEED M10B03 = 1 indicates the ramp output is between -1Hz and +1Hz.	R-O	Range: 0 or 1 Default:
M10B04	BELOW MIN SPEED In bipolar mode (M01B10 set at 1), M10B04 is in the same state as M10B03 (zero frequency). In unipolar mode (M01B10 set at 0), M10B04 = 1 when the drive is running and the ramp output is between: [+min freq.+1Hz] and [-min freq.-1Hz].	R-O	Range: 0 or 1 Default:
M10B05	AT SPEED When the drive is running M10B05 = 1 indicates the ramp output is within 1Hz of the selected speed reference.	R-O	Range: 0 or 1 Default:
M10B06	LOAD REACHED M10B06 = 1 indicates: Load current \geq Rated load current Load current = torque component	R-O	Range: 0 or 1 Default: 0
M10B07	IxT ALARM	R-O	Range: 0 or 1 Default:

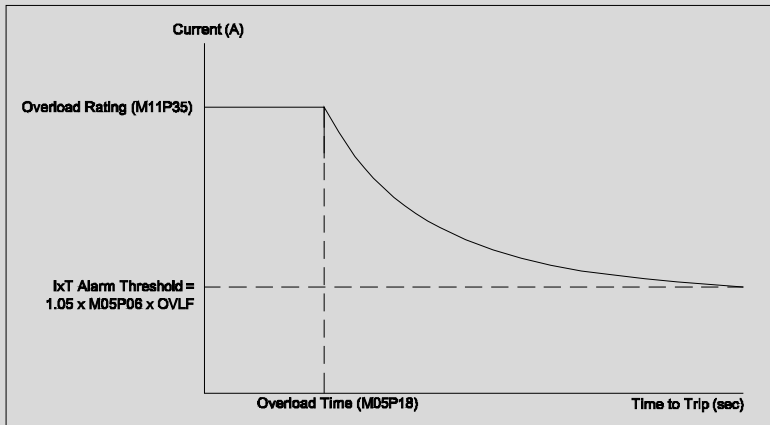


Figure 10-3 Time to Trip is Dependent on the Extent of Current Overload

M10B07 = 1 indicates that motor current is greater than the value defined by the speed sensitive overload "Continuous Operation Zone" (see Fig 10-3a). If the current is not reduced, the drive will trip on a MTR OVRLD fault after a period of time that depends on the extent of the overload.

The threshold level of motor current where M10B07 becomes set to "1" varies with motor speed (M05P01) and is calculated by:

$$\text{IxT Alarm Threshold} := 1.05 \cdot \text{M05P06} \cdot \text{OVLF}$$

Where

For $0 < \text{M05P01} < \text{M05P54}$

$$\text{OVLF} := \frac{1}{100} \cdot \left(\text{M05P55} + \frac{100 - \text{M05P55}}{\text{M05P54}} \cdot \text{M05P01} \right)$$

For $\text{M05P01} > \text{M05P54}$

$$\text{OVLF} := 1$$

Speed Sensitive Motor Overload

The Motor Overload protection is a fully programmable speed sensitive algorithm that complies with UL 508C sections 43.3, 43.4 and 43.5.

The SPEED SENSITIVE MOTOR OVERLOAD algorithm is setup using the following three(3) parameters:

- M05P18 (OVERLOAD TIME)
- M05P54 (IxT BREAK FREQ)
- M05P55 (IxT ZER FRQ THLD)

By proper programming of these parameters, thermal protection for either general purpose self-cooled (TEFC) motors or Blower-Cooled (TENV) motors can be obtained.

The following RO status parameters can be used to monitor whether the motor is operating outside of the "Continuous Operation Zone" and how close the VFD is to tripping on a "MTR OVRLD" fault:

M10B07 (IxT ALARM) – set to "1" when motor is operating outside of the "Continuous Operation Zone"

M10P33 (IxT ACCUMULATOR) – "MTR OVRLD" fault occurs when value reaches 100.0%

Also note that the keypad fault LED blinks whenever M10B07 (IxT

4-44 DRIVE PROGRAMMING

ALARM) is set to "1"

See Figure 10-3a. for graphical definition of the M05P54 (IxT BREAK FREQ) and M05P55 (IxT ZER FRQ THLD) parameters. These two parameters define the continuous operation zone of the motor.

The M05P18 (OVERLOAD TIME) parameter determines how long the motor can run outside the continuous operation zone before it will thermally trip.

General purpose (TEFC) motors cannot run at high torque levels while at low speed continuously. This is because the cooling for the motor is supplied by a fan that is driven by the motor shaft. As the speed of the motor decreases, the flow of air supplied by the fan decreases and the less cooling there is. For this type of motor, the proper motor thermal overload protection curve can be matched to the motor thermal time constant by setting the M05P55 (IxT ZERO FRQ THLD) parameter to 60.0% and the M05P54 (IxT BREAK FREQ) parameter to the M05P09 (BASE MOTOR FREQ) value. This means at zero speed the motor can safely draw 60.0% rated motor current indefinitely without overheating. At base speed, the motor can safely draw its full load rated current due to full cooling capability. See Figure 10-3c.

For Blower-Cooled (TENV) motors, running at high torque levels at low speed can be tolerated. This is because the cooling for the motor is supplied by a separately powered blower that provides the same volume of cooling air, regardless of the motor speed. For this type of motor, the proper motor thermal overload protection curve can be matched to the motor thermal time constant by setting the M05P55 (IxT ZERO FRQ THLD) parameter to 100.0% and the M05P54 (IxT BREAK FREQ) parameter to the M05P09 (BASE MOTOR FREQ) value. This means at zero speed, the motor can safely draw 100% rated motor current indefinitely without overheating. Also, at base speed, the motor can safely draw its full load rated current due to full cooling capability. See Figure 10-3b.

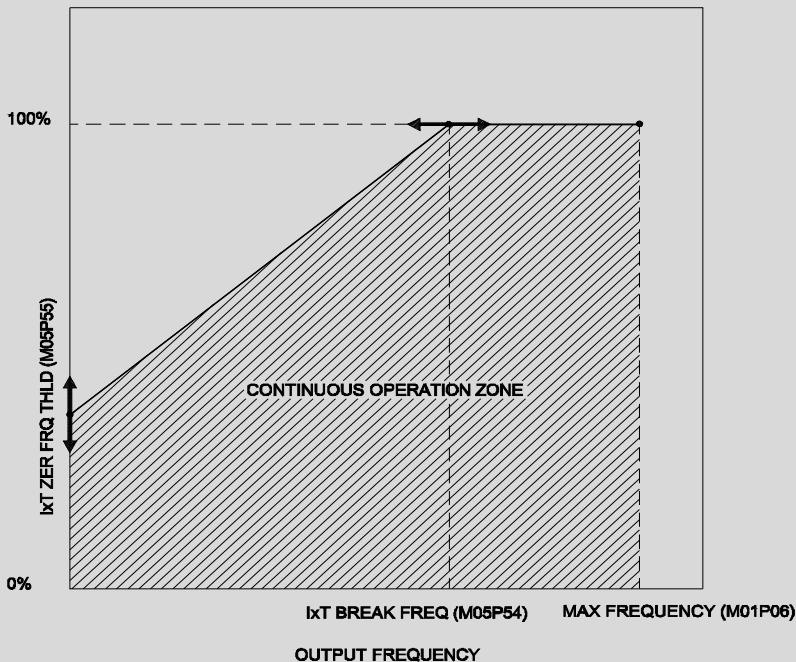


Figure 10-3a. Motor Thermal Continuous Operation Zone

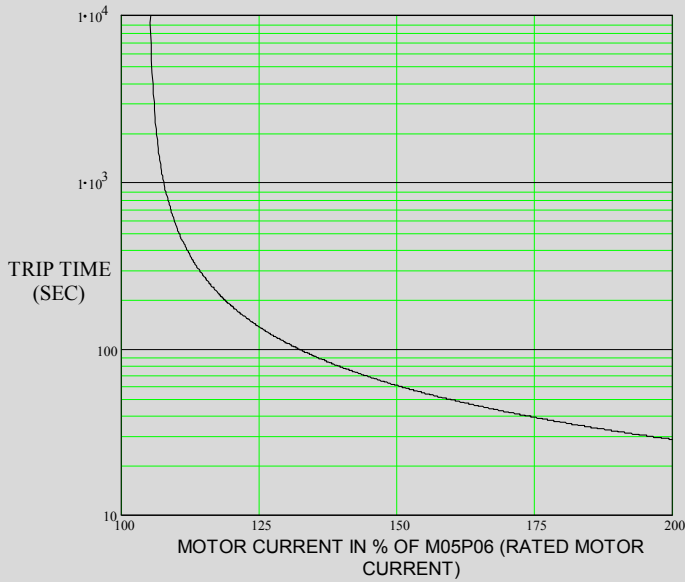


Figure 10-3b.
Thermal Trip Curve for Blower-Cooled (TENV) Motor

Conditions:

M05P18 (OVERLOAD TIME) = 60 SEC

M05P54 (I_{xT} BREAK FREQ = 60.0 Hz

M05P55 (I_{xT} ZER FRQ THLD) = **100.0 %**

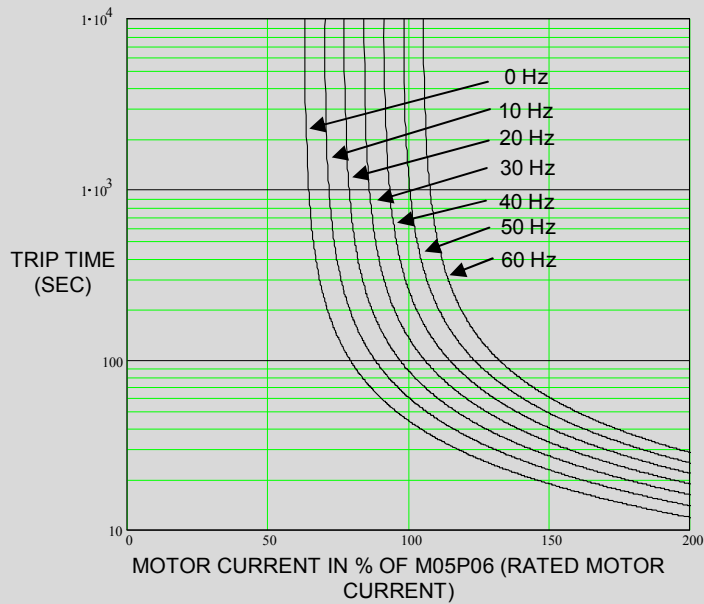


Figure 10-3c.
Motor Thermal Trip Curves for General Purpose (TEFC) Motor

Conditions:

M05P18 (OVERLOAD TIME) = 60 SEC

M05P54 (I_{xT} BREAK FREQ = 60.0 Hz

M05P55 (I_{xT} ZER FRQ THLD) = **60.0 %**

Time-to-Trip equation (in seconds):

4-46 DRIVE PROGRAMMING

$$\text{TIMEtoTRIP} := \frac{\text{M05P18}}{\left(\frac{\text{MotorCurrent}}{\text{OVLf}} - 1.05 \cdot \text{M05P06} \right) \cdot \left(\frac{900}{\text{M05P01}} - 1.05 \cdot 600 \right)}$$

M05P18 is factory defaulted to 60 seconds.

To illustrate the speed sensitive nature of the motor overload trip time, consider the following examples:

Example 1: For D4-0500CT: M11P35 = 900A (150% rated drive 600x1.5) and:

M05P18 (OVERLOAD TIME) = 60.0 seconds
M05P54 (IxT BREAK FREQ) = 60.0 Hz
M05P55 (IxT ZER FRQ THLD) = 60.0 %

If a user enters 600A in M05P06 and if the motor is running at 900A motor current and at a speed (M05P01) of 60.0 Hz:

$$\text{OVLf} := \frac{1}{100} \cdot \left(60 + \frac{100 - 60}{60} \cdot 60 \right) \quad \text{OVLf} = 1$$

$$\text{TIMEtoTRIP} := \frac{60}{\left(\frac{900}{1.0} - 1.05 \cdot 600 \right) \cdot \left(\frac{900}{900 - 1.05 \cdot 600} \right)} \quad \text{TIMEtoTRIP} = 60$$

Example 2: Same as example 1, but the motor is instead running at a speed (M05P01) of 30.0 Hz:

$$\text{OVLf} := \frac{1}{100} \cdot \left(60 + \frac{100 - 60}{60} \cdot 30 \right) \quad \text{OVLf} = 0.8$$

$$\text{TIMEtoTRIP} := \frac{60}{\left(\frac{900}{0.8} - 1.05 \cdot 600 \right) \cdot \left(\frac{900}{900 - 1.05 \cdot 600} \right)} \quad \text{TIMEtoTRIP} = 32.727$$

Example 3: Same as example 1, but the motor is instead running at a speed (M05P01) of 0.0 Hz:

$$\text{OVLf} := \frac{1}{100} \cdot \left(60 + \frac{100 - 60}{60} \cdot 0.0 \right) \quad \text{OVLf} = 0.6$$

$$\text{TIMEtoTRIP} := \frac{60}{\left(\frac{900}{0.6} - 1.05 \cdot 600 \right) \cdot \left(\frac{900}{900 - 1.05 \cdot 600} \right)} \quad \text{TIMEtoTRIP} = 18.621$$

M10B08 AT CURRENT LIMIT

M10B08 = 1 indicates the normal current limit is active.

R-O

Range: 0 or 1
Default: 0

M10B09 MOTOR IN REGEN

M10B09 = 1 indicates the output bridge is transferring power from the motor to the DC bus.

R-O

Range: 0 or 1
Default: 0

M10B13	FWD ROTATIO EN M10B13 = 1 indicates the pre-ramp reference is positive.	R-O	Range: 0 or 1 Default: 0
M10P14	LAST FAULT	R-O	Range: Default:
M10P15	RECORDED FAULT#1		
M10P16	RECORDED FAULT#2		
M10P17	RECORDED FAULT#3		
M10P18	RECORDED FAULT#4		
M10P19	RECORDED FAULT#5		
M10P20	RECORDED FAULT#6		
M10P21	RECORDED FAULT#7		
M10P22	RECORDED FAULT#8		
M10P23	RECORDED FAULT#9 These parameters indicate Recorded Fault#1 is most recent.		
M10B24	DRIVE RESET Set at 1 to reset the drive. If the drive is to be reset by an input signal, a programmable digital input must be programmed to control this parameter. F3 input destination default is M10B24.	R-W	Range: 0 or 1 Default: 0
M10B25	ENABLE AUTORESET If set to 1, the drive will automatically reset trips when tripped after a programmed delay set in M10P26 "RESET DELAY". Auto-reset function resets only the faults as specified in parameter M10P35 "AUTORESET MODE".	R-W	Range: 0 or 1 Default: 0
M10P26	AUTORESET DELAY Enter the auto-reset delay in seconds. This parameter defines the time between a trip and an auto-reset.	R-W	Range: 0 to 3276.0 Sec Default: 5
M10P27	NO OF AR ATTEMPTS If this parameter is set to zero then no auto-reset attempts are made. Any other value will cause the drive to automatically reset following a trip. When the programmed value of M10P27 is reached, any further trips of the same type will not cause an auto-reset. A trip of a different type will cause an auto-reset. If there has been no trip for 10 minutes then the reset count is cleared.	R-W	Range: 0 to 10 Default: 0
M10B28	VFD OK DELAYED This parameter can be used to hold "Drive Normal" status bit M10B01 at 1 until the last Auto-Reset Attempt is used. Set M10B28 to 1 for "Drive Normal" status bit M10B01 to remain set at 1 every time a trip occurs and "Auto-Reset" is going to occur. Set M10B28 to 0 to immediately clear "Drive Normal" status bit M10B01 at 0 every time a trip occurs, regardless of any Auto-reset that may occur.	R-W	Range: 0 or 1 Default: 1
M10B29	EXTERNAL TRIP When an external trip signal is required to control this parameter, use a programmable digital input and ensure that the input state is at logic 1 to prevent the drive tripping. M10B29 = 0 the drive will trip. F4 input destination fault is M10B29.	R-W	Range: 0 or 1 Default: 1

4-48 DRIVE PROGRAMMING

<p>M10P30 SERIAL TRIP Parameter M10P30 can be accessed by the serial port to trip the drive and display a relevant trip code.</p> <p>When trip codes 68 or 69 are entered into M10P30, the trip message, "SER TRIP1" or "SER TRIP2" respectively, will be shown and the drive will trip.</p> <p>The drive can be reset by setting M10P30 at 70.</p>	R-W	Range: 68 to 69 Default: 0																																																												
<p>M10P31 STATUS WORD Parameter M10P31 contains a binary coded number. This indicates the current state of the read-only parameters that indicate the status of the drive. The coded number can be used to control indicators on a separate display panel. When this parameter is viewed on the Real-time Operator Module (ROM), it is displayed as a hexadecimal number.</p> <p>The binary codes that are produced when the parameters are at logic 1 are as follows:</p> <table border="1" data-bbox="121 863 950 1276"> <thead> <tr> <th>Parameter</th> <th>Parameter Name</th> <th>Description</th> <th>Binary</th> </tr> </thead> <tbody> <tr> <td>M10B01</td> <td>DRIVE NORMAL</td> <td>Drive normal (not tripped)</td> <td>2⁰</td> </tr> <tr> <td>M10B02</td> <td>DRIVE RUNNING</td> <td>Drive is running</td> <td>2¹</td> </tr> <tr> <td>M10B03</td> <td>AT ZERO SPEED</td> <td>Zero frequency or stopped</td> <td>2²</td> </tr> <tr> <td>M10B04</td> <td>BELOW MIN SPEED</td> <td>Running at or below minimum frequency</td> <td>2³</td> </tr> <tr> <td>M10B05</td> <td>AT SPEED</td> <td>Drive running at set speed</td> <td>2⁴</td> </tr> <tr> <td>M10B06</td> <td>LOAD REACHED</td> <td>Load reached</td> <td>2⁵</td> </tr> <tr> <td>M10B07</td> <td>IxT ALARM</td> <td>IxT motor overload</td> <td>2⁶</td> </tr> <tr> <td>M10B08</td> <td>AT CURRENT LIMIT</td> <td>Drive output is at current limit</td> <td>2⁷</td> </tr> <tr> <td>M10B09</td> <td>MOTOR IN REGEN</td> <td>Motor regenerating</td> <td>2⁸</td> </tr> <tr> <td>Reserved</td> <td></td> <td></td> <td>2⁹</td> </tr> <tr> <td>Reserved</td> <td></td> <td></td> <td>2¹⁰</td> </tr> <tr> <td>Reserved</td> <td></td> <td></td> <td>2¹¹</td> </tr> <tr> <td>M10B13</td> <td>FWD ROTATIO EN</td> <td>Forward rotation commanded</td> <td>2¹²</td> </tr> <tr> <td>M10B25</td> <td>ENABLE AUTORESET</td> <td>Enable auto-reset</td> <td>2¹³</td> </tr> </tbody> </table>	Parameter	Parameter Name	Description	Binary	M10B01	DRIVE NORMAL	Drive normal (not tripped)	2 ⁰	M10B02	DRIVE RUNNING	Drive is running	2 ¹	M10B03	AT ZERO SPEED	Zero frequency or stopped	2 ²	M10B04	BELOW MIN SPEED	Running at or below minimum frequency	2 ³	M10B05	AT SPEED	Drive running at set speed	2 ⁴	M10B06	LOAD REACHED	Load reached	2 ⁵	M10B07	IxT ALARM	IxT motor overload	2 ⁶	M10B08	AT CURRENT LIMIT	Drive output is at current limit	2 ⁷	M10B09	MOTOR IN REGEN	Motor regenerating	2 ⁸	Reserved			2 ⁹	Reserved			2 ¹⁰	Reserved			2 ¹¹	M10B13	FWD ROTATIO EN	Forward rotation commanded	2 ¹²	M10B25	ENABLE AUTORESET	Enable auto-reset	2 ¹³	R-O	Range: 0 to 32761 Default: 0
Parameter	Parameter Name	Description	Binary																																																											
M10B01	DRIVE NORMAL	Drive normal (not tripped)	2 ⁰																																																											
M10B02	DRIVE RUNNING	Drive is running	2 ¹																																																											
M10B03	AT ZERO SPEED	Zero frequency or stopped	2 ²																																																											
M10B04	BELOW MIN SPEED	Running at or below minimum frequency	2 ³																																																											
M10B05	AT SPEED	Drive running at set speed	2 ⁴																																																											
M10B06	LOAD REACHED	Load reached	2 ⁵																																																											
M10B07	IxT ALARM	IxT motor overload	2 ⁶																																																											
M10B08	AT CURRENT LIMIT	Drive output is at current limit	2 ⁷																																																											
M10B09	MOTOR IN REGEN	Motor regenerating	2 ⁸																																																											
Reserved			2 ⁹																																																											
Reserved			2 ¹⁰																																																											
Reserved			2 ¹¹																																																											
M10B13	FWD ROTATIO EN	Forward rotation commanded	2 ¹²																																																											
M10B25	ENABLE AUTORESET	Enable auto-reset	2 ¹³																																																											
<p>M10P32 DRIVE STATUS [0] READY [1] RUNNING [2] RAMP STOP [3] DISABLED [4] FLYCATCH [5] DC INJECT [6] FAULT [7] RESET</p>	R-O	Range: [0] to [7] Default:																																																												
<p>M10P33 IxT ACCUMULATOR When the motor current is greater than the value defined by the speed sensitive overload "Continuous Operation Zone" (see Fig 10-3a), this parameter will display a value greater than 0. If the current is not reduced, the IxT ACCUMULATOR value will eventually reach 100 % and the drive will trip on a MTR OVRLD fault.</p> <p>When the IxT ACCUMULATOR value is greater than 0 the IxT Alarm parameter bit (M10B07) is set at 1 and the keypad fault LED blinks.</p>	R-O	Range: 0.0 to 100.0 % Default:																																																												
<p>M10P35 AUTORESET MODE Use this parameter to select how parameter M10B25 "ENABLE AUTORESET" function operates.</p>	R-W	Range: [0] to [1] Default: [0] PWR LOSS																																																												

<p>Select from: [0] PWR LOSS Reset undervoltage and overvoltage faults only [1] ALLFAULTS Reset all faults</p>																																												
<p>M10B37 IN RAMP STOP M10B37 = 1 indicates the drive is in the RAMP STOP state (Drive is ramping down to a stop) as indicated by parameter M10P32 (DRIVE STATUS).</p>	R-O	Range: 0 or 1 Default:																																										
<p>M10B38 DRIVE DISABLED M10B38 = 1 indicates the drive is in the DISABLED state as indicated by parameter M10P32 (DRIVE STATUS).</p>	R-O	Range: 0 or 1 Default:																																										
<p>M10B39 IN FLYCATCH M10B39 = 1 indicates the drive is in the FLYCATCH state as indicated by parameter M10P32 (DRIVE STATUS).</p>	R-O	Range: 0 or 1 Default:																																										
<p>M10B40 IN DC INJECT M10B40 = 1 indicates the drive is in the DC INJECT state as indicated by parameter M10P32 (DRIVE STATUS).</p>	R-O	Range: 0 or 1 Default:																																										
<p>M10B43 SERIAL LOSS M10B43 = 1 indicates a serial communications loss as described in M11P43.</p>	R-O	Range: 0 or 1 Default:																																										
<p>M10P52 MODULES DETECTED For drive models that have parallel power modules and where parameter M06B49 (DISABLE MOD FLT) is set to "0", the number of power modules detected on the ribbon cable bus (modules "on line") is indicated. The drive scans continually for the number of power modules "on line" if it is not in the "RUN" state. If parameter M10P52 does not equal parameter M11P46 (MODULES REQUIRED), a "# OF MODS" fault is generated. If the drive model is not one that has parallel power modules or parameter M06B49 is set to "1", this parameter is set to "0". Note that there are a number of causes for the "# OF MODS" fault to be generated. See the Fault Description Section for a full explanation of the "# OF MODS" fault.</p>	R-O	Range: 1 to 6 Default:																																										
<p>M11P01 DEFINE M00PXX to M11P20 Use the Menu 11 parameters in the following table to assign parameters in the Advanced menus to the User menu (Menu 0). The default assignments are shown. The Menu 11 parameters in the table are read-write.</p> <table border="1" data-bbox="261 1520 914 2009"> <thead> <tr> <th>Parameter number</th> <th>Menu 0 User parameter</th> <th>Default assignment</th> </tr> </thead> <tbody> <tr><td>M11P01</td><td>M05P08</td><td>RATED MOTOR VOLT</td></tr> <tr><td>M11P02</td><td>M05P09</td><td>RATED MOTOR FREQ</td></tr> <tr><td>M11P03</td><td>M05P06</td><td>RATED MOTOR CURR</td></tr> <tr><td>M11P04</td><td>M05P10</td><td>NUMBER OF POLES</td></tr> <tr><td>M11P05</td><td>M04P11</td><td>SYM CURRENT LIM</td></tr> <tr><td>M11P06</td><td>M02P03</td><td>ACCEL RAMP 1</td></tr> <tr><td>M11P07</td><td>M02P04</td><td>DECEL RAMP 1</td></tr> <tr><td>M11P08</td><td>M01P06</td><td>MAX FREQUENCY</td></tr> <tr><td>M11P09</td><td>M01P05</td><td>MIN FREQUENCY</td></tr> <tr><td>M11P10</td><td>M05P33</td><td>RATED LINE VOLTS</td></tr> <tr><td>M11P11</td><td>M11P27</td><td>SOFTWARE VERSION</td></tr> <tr><td>M11P12</td><td>M11P33</td><td>DRIVE MODEL NO</td></tr> <tr><td>M11P13</td><td>M05P03</td><td>MOTOR VOLTAGE</td></tr> </tbody> </table>	Parameter number	Menu 0 User parameter	Default assignment	M11P01	M05P08	RATED MOTOR VOLT	M11P02	M05P09	RATED MOTOR FREQ	M11P03	M05P06	RATED MOTOR CURR	M11P04	M05P10	NUMBER OF POLES	M11P05	M04P11	SYM CURRENT LIM	M11P06	M02P03	ACCEL RAMP 1	M11P07	M02P04	DECEL RAMP 1	M11P08	M01P06	MAX FREQUENCY	M11P09	M01P05	MIN FREQUENCY	M11P10	M05P33	RATED LINE VOLTS	M11P11	M11P27	SOFTWARE VERSION	M11P12	M11P33	DRIVE MODEL NO	M11P13	M05P03	MOTOR VOLTAGE	R-W	Range: Default:
Parameter number	Menu 0 User parameter	Default assignment																																										
M11P01	M05P08	RATED MOTOR VOLT																																										
M11P02	M05P09	RATED MOTOR FREQ																																										
M11P03	M05P06	RATED MOTOR CURR																																										
M11P04	M05P10	NUMBER OF POLES																																										
M11P05	M04P11	SYM CURRENT LIM																																										
M11P06	M02P03	ACCEL RAMP 1																																										
M11P07	M02P04	DECEL RAMP 1																																										
M11P08	M01P06	MAX FREQUENCY																																										
M11P09	M01P05	MIN FREQUENCY																																										
M11P10	M05P33	RATED LINE VOLTS																																										
M11P11	M11P27	SOFTWARE VERSION																																										
M11P12	M11P33	DRIVE MODEL NO																																										
M11P13	M05P03	MOTOR VOLTAGE																																										

4-50 DRIVE PROGRAMMING

M11P14	M05P05	MOTOR POWER		
M11P15	M05P04	DC BUS VOLTAGE		
M11P16	M05P34	AC LINE VOLTAGE		
M11P17	M10P14	LAST FAULT		
M11P18	M04P01	MOT CURR-TOTAL		
M11P19	M01P03	FINAL FREQ REF		
M11P20	M05P02	MOTOR SHAFT RPM		
<p>For parameters programmed into M11P19 and M11P20, a scale factor can be applied using M11P21 and M11P22 in order to indicate some meaningful unit such as gallons per minute. Also a text can be applied using M11P31 & M11P32.</p>				
M11P21	SCALE FOR M00P19	Enter a value to scale M00P19 to represent a meaningful unit, such as gallons per minute. To change text use parameter M11P31.	R-W	Range: 0.0 to ±10.000 Default: 1.000
M11P22	SCALE FOR M00P20	Enter a value to scale M00P20 to represent a meaningful unit, such as gallons per minute. To change text use parameter M11P32.	R-W	Range: 0.0 to ±10.000 Default: 1.000
M11P23	SERIAL ADDRESS	Enter an address for serial communications.	R-W	Range: 1 to 255 Default: 1
M11P24	SERIAL PARITY	Select the required mode of operation for serial communications. [0] NO PARITY No Parity [1] OD PARITY Odd Parity [2] EV PARITY Even Parity	R-W	Range: [0] to [2] Default: [0] NO PARITY
M11P25	BAUD RATE	[0] = 4800 BAUD [1] = 9600 BAUD [2] = 19.2 KBD	R-W	Range: [0] to [2] Default: [1] 9600 BAUD
M11P26	SERIAL PROTOCOL	Use this parameter to select the serial protocol. [0] MODBUSUSD Modbus US Drives Protocol [1] METASYSN2 Johnson Controls Metasys N2 Protocol [2] MODBUSRTU Modbus RTU Protocol	R-W	Range: [0] to [2] Default: [0] MODBUSUSD
M11P27	SOFTWARE VERSION	Indicates version of software in the drive.	R-O	Range: XXXX Default:
M11P28	PROCESSOR 2 VER	Indicates software version present on any optional card fitted.	R-O	Range: XXXX Default:
M11P29	SECURITY CODE	User can create his own security code using a four-digit number to lock parameter editing. For more details refer to section 3.4.8.	R-W	Range: 0 to 9999 Default: 0
M11P30	DISPLAY WHEN PWR	Enter the number of the parameter that is to be displayed when AC power is applied. By setting parameter M11P30 equal to "99.99", parameters M00P19 and M00P20 will be displayed simultaneously on the top and bottom lines of the keypad display respectively. Depending on the data type of the parameters selected for M00P19 and M00P20,	R-W	Range: M00P00 to M00P20 Default: M00P20 (00.20)

<p>the text string for the displayed parameters may be truncated to fit into the upper and lower 16 character lines.</p>		
<p>M11P31 TEXT FOR M00P19</p> <p>Use this parameter to change parameter M00P19 text. When scrolling through the list [0] to [20], the text choice will be shown on the text field (upper row). When the Enter key is hit, the chosen text will be the text for M00P19 and the M11P31 text field will revert to show TEXT FOR M00P19.</p> <p>Note: When [0] is selected the M00P19 text is the text of the parameter assigned to M00P19.</p> <ul style="list-style-type: none"> [0] * [1] CURRENT (Can be edited using Drive Master) [2] CURRENT [3] FEEDBACK [4] FLOW [5] FREQUENCY [6] INPUT [7] LOAD [8] OUTPUT [9] POWER [10] PRESSURE [11] REFERENCE [12] SETPOINT [13] SPEED [14] TEMPERATURE [15] TENSION [16] TORQUE [17] VOLTAGE [18] VOLUME [19] STATUS [20] MODE <p>*Text is the text of the parameter assigned to M00P19.</p>	R-W	Range: [0] to [20] Default: [0]
<p>M11P32 TEXT FOR M00P20</p> <p>Use this parameter to change parameter M00P20 text. When scrolling through the list [0] to [20], the text choice will be shown on the text field (upper row). When the Enter key is hit, the chosen text will be the text for M00P20 and the M11P32 text field will revert to show TEXT FOR M00P20.</p> <p>Note: When [0] is selected the M00P20 text is the text of the parameter assigned to M00P20.</p> <ul style="list-style-type: none"> [0] * [1] CURRENT (Can be edited using Drive Master) [2] CURRENT [3] FEEDBACK [4] FLOW [5] FREQUENCY [6] INPUT [7] LOAD [8] OUTPUT [9] POWER 	R-W	Range: [0] to [20] Default: [0]

4-52 DRIVE PROGRAMMING

<p>[10] PRESSURE [11] REFERENCE [12] SETPOINT [13] SPEED [14] TEMPERATURE [15] TENSION [16] TORQUE [17] VOLTAGE [18] VOLUME [19] STATUS [20] MODE</p> <p>*Text is the text of the parameter assigned to M00P20.</p>		
<p>M11P33 DRIVE MODEL NO Indicates the drive model number.</p>	R-W	Range: Default:
<p>M11P34 VOLTAGE RATING Indicates the voltage rating of the drive.</p> <p>[0] 200 – 250V = Low voltage range [1] 380 – 500V = Standard voltage range [2] 500 – 600V = High Voltage</p>	R-O	Range: [0] to [2] Default:
<p>M11P35 OVERLOAD RATING Indicates maximum overload current in Amps of the drive.</p> <p><u>Note:</u></p> <ul style="list-style-type: none"> • For dual rated drives, the overload rating is 1.2 times the VT Output Current Rating for the given drive model listed in tables 1-1 thru 1-3. • For VT only rated drives, the overload rating is 1.2 times the Output Current Rating for the given drive model listed in tables 1-1 thru 1-3. • For CT only rated drives, the overload rating is 1.5 times the Output Current Rating for the given drive model listed in tables 1-1 thru 1-3. 	R-O	Range: Default:
<p>M11P36 FACTORY DEFAULTS [0] NO [1] YES To set all parameter to the factory defaults</p>	R-W	Range: [0] to [1] Default: NO
<p>M11P37 ACCESS CODE User to enter access code to unlock parameter editing. For more details refer to section 3.4.8.</p>	R-W	Range: 0 to 10000 Default: 0
<p>M11B41 EN SERIAL LOSS Set this parameter to 1 to enable the "loss of serial communications" warning or fault. When this parameter is set to 1, a "SERIALLOSS" warning or fault will be generated once communication from the master is lost by the slave (drive) for a time period equal to parameter M11P42 (SERIAL TIMEOUT). Note that a serial loss can only occur after communication has been established between the master and the drive (slave). The drive waits for the master to initiate communication. See M11P43 for details.</p>	R-W	Range: 0 or 1 Default: 0
<p>M11P42 SERIAL TIMEOUT Period of time over which communications between the master and the slave (drive) must be lost before a "SERIALLOSS" warning or fault is generated. See M11P43 for details.</p>	R-W	Range: 0.2 to 3276.0 sec Default: 10.0

<p>M11P43 SERIAL LOSS MODE Set to determine the stopping method or Alarm only when a serial loss (SERIALLOSS) is detected. A "SERIALLOSS" warning or fault will be generated once communication from the master is lost by the slave (drive) for a time period equal to parameter M11P42 (SERIAL TIMEOUT).</p> <p>[0] COASTSTOP Coast stop when serial loss detected [1] RAMP STOP Ramp stop when serial loss detected [2] ALARMONLY Alarm only when serial loss detected</p> <p>[0] <u>Coast Stop</u>: A serial loss will cause the motor to coast stop and set a "SERIALLOSS" fault. In this mode M10B01 "Drive Normal" parameter is set to 0 indicating drive tripped.</p> <p>[1] <u>Ramp Stop</u>: A serial loss will cause the motor to ramp stop and set a "SERIALLOSS" fault. In this mode M10B01 "Drive Normal" parameter is set to 0 indicating drive tripped at the end of ramp stop.</p> <p>[2] <u>Alarm Only</u>: A serial loss will cause the drive to continue running and will display an "ALARM MESSAGE SERIALLOSS" message. In this mode M10B01 (Drive Normal) is kept set to 1 indicating Drive Normal (not tripped).</p> <p>In all modes when a serial loss is detected, the M10B43 SERIAL LOSS status bit is set to 1. M10B43 is cleared when a reset is initiated via Stop/Reset Control Keypad Key or digital input Reset via the terminal block.</p>	R-W	Range: [0]-[2] Default: [0] COASTSTOP
<p>M11P44 ENABL SERIAL R/W [0] NO To Disable Serial R/W of Parameters [1] YES To Enable Serial R/W of Parameters</p> <p>Use this parameter to disable editing parameters via serial communications. When disabled only R/O (read only) parameters can be viewed. For more details refer to section 3.4.8</p>	R-W	Range: [0] to [1] Default: [1] YES
<p>M11P45 EN SER BROADCAST [1] YES [0] NO Set this parameter at 0 to ignore a serial communications broadcast command. Note that a broadcast command is only a Write command.</p>	R-W	Range: [0] to [1] Default: YES
<p>M11P46 MODULES REQUIRED Based on the drive model (M11P33), this parameter is set to the number of parallel power modules required. For non-parallel power module models, this parameter is set to "1".</p>	R-O	Range: 1 to 6 Default:
<p>M11B47 SERIAL RUN ENABL Set this parameter to "1" to enable control of the drive by way of the serial port. When this parameter is set to "1", a number of parameters are re-programmed depending on the setting of parameter M11P48 (SERIAL CTRL MODE). See M11P48 for details.</p>	R-W	Range: 0 or 1 Default: 0

4-54 DRIVE PROGRAMMING

M11P48	SERIAL CTRL MODE	R-W	Range: [0] TO [3] Default: [3] DISABLE
This parameter determines which parameters are re-programmed when parameter M11B47 (SERIAL RUN ENABL) is set to "1" and thereafter when it is set to "0"			
[0] MODE 1	Serial control with Auto/Hand control and with serial and keypad timeouts: <u>M11B47 = 1:</u> M01B07(SEL PRESET SPEED) = 1 M08P09(F2 INPUT DESTINA) = 0.0 M08P23(MODE SELECT SRC) = 8.08 M08P24(MODESEL OUT DEST) =6.07 M08P26(MODE SEL LOGIC 0) = 3 M08P27(MODE SEL LOGIC 1) = 0 M09P08(BIT SEL1 SOURCE1) = 8.08 M09B12(BIT SEL1 OUT INV) = 1 M09P14(BIT SEL2 SOURCE1) = 8.08 M09P35(BITSEL1 OUT DEST) =11.41 M09P37(BITSEL2 OUT DEST) = 6.47 <u>M11B47 = 0:</u> M01B07(SEL PRESET SPEED) = 0 M08P09(F2 INPUT DESTINA) = 6.08 M08P23(MODE SELECT SRC) = 0.0 M08P24(MODESEL OUT DEST) = 0.0 M08P26(MODE SEL LOGIC 0) = 0 M08P27(MODE SEL LOGIC 1) = 0 M09P08(BIT SEL1 SOURCE1) = 0.0 M09B12(BIT SEL1 OUT INV) = 0 M09P14(BIT SEL2 SOURCE1) = 0.0 M09P35(BITSEL1 OUT DEST) = 0.0 M09P37(BITSEL2 OUT DEST) = 0.0 M11B41(EN SERIAL LOSS) = 0 M06B47(EN KEYPAD LOSS) = 0 M06P07(SEQUENCING MODE) = 2OR3 WIRE		
[1] MODE 2	Serial control with Auto/Hand control <u>without</u> serial and keypad timeouts: <u>M11B47 = 1:</u> M01B07(SEL PRESET SPEED) = 1 M08P09(F2 INPUT DESTINA) = 0.0 M08P23(MODE SELECT SRC) = 8.08 M08P24(MODESEL OUT DEST) =6.07 M08P26(MODE SEL LOGIC 0) = 3 M08P27(MODE SEL LOGIC 1) = 0 <u>M11B47 = 0:</u> M01B07(SEL PRESET SPEED) = 0 M08P09(F2 INPUT DESTINA) = 6.08		
[2] MODE 3	Simple serial control <u>without</u> serial and keypad timeouts: <u>M11B47 = 1:</u> M01B07(SEL PRESET SPEED) = 1		

	<p>M08P09(F2 INPUT DESTINA) = 0.0 M06P07(SEQUENCING MODE) = 2-WIRE</p> <p><u>M11B47 = 0:</u> M01B07(SEL PRESET SPEED) = 0 M08P09(F2 INPUT DESTINA) = 6.08 M06P07(SEQUENCING MODE) = 2OR3 WIRE</p> <p>[3] DISABLE Disable any parameter changes when parameter M11B47 (SERIAL RUN ENABLE) is set to "1" or when it is set to "0".</p>		
M12B01	<p>THRSLD 1 EXCEEDED M12B01 = 1 indicates input variable is above Threshold 1. M12B01 = 0 indicates input variable is below Threshold 1.</p>	R-O	Range: 0 or 1 Default: 0
M12B02	<p>THRSLD 2 EXCEEDED M12B02 = 1 indicates input variable is above Threshold 2. M12B02 = 0 indicates input variable is below Threshold 2.</p>	R-O	Range: 0 or 1 Default:
M12P03	<p>THRESHOLD 1 SRC Enter the number of the parameter to be used as the source for threshold 1. The absolute value of the source is taken as the input to the Threshold comparator. Factory defaulted to an unused parameter M00P00.</p> <p><u>Note:</u> The source parameter input to the threshold detector is scaled such that when the source parameter is at its maximum value, it represents a 100 % input to threshold detector 1.</p>	R-W	Range: MXXPXX Default: M00P00 (00.00)
M12P04	<p>THRESHOLD1 LEVEL User-defined threshold 1 level entered as a percentage of the source maximum.</p>	R-W	Range: 0.0 to 100.0 % Default: 0
M12P05	<p>THRESHOLD1 HYST Defined band where no change will occur to the comparator output.</p> <p>Upper limit for switching: Level + [hyst ÷ 2] Lower limit: Level – [hyst ÷ 2]</p>	R-W	Range: 0 to 25.5 % Default: 0
M12B06	<p>THRSHLD1 OUT INV Set at 1 to invert threshold comparator 1 output.</p>	R-W	Range: 0 or 1 Default: 0
M12P07	<p>THRESHOLD1 DEST Define the destination of the threshold comparator 1 output. The destination must be a R-W bit parameter.</p> <p>A new value entered in M12P07. Factory defaulted to an unused parameter M00P00.</p>	R-W	Range: MXXPXX Default: M00P00 (00.00)
M12P08	<p>THRESHOLD2 SRC Refer to the notes for M12P03 to M12P07. Factory defaulted to an unused parameter M00P00 which is equivalent to setting the source signal to 0.</p> <p><u>Note:</u> The source parameter input to the threshold detector is scaled such that when the source parameter is at its maximum value, it represents a 100 % input to threshold detector 2.</p>	R-W	Range: MXXPXX Default: M00P00 (00.00)

4-56 DRIVE PROGRAMMING

M12P09	THRESHOLD2 LEVEL Refer to the notes for M12P03 to M12P07.	R-W	Range: 0.0 to 100.0 % Default: 0
M12P10	THRESHOLD2 HYST Refer to the notes for M12P03 to M12P07.	R-W	Range: 0 to 25.5 % Default: 0
M12B11	THRSHLD2 OUT INV Refer to the notes for M12P03 to M12P07.	R-W	Range: 0 or 1 Default: 0
M12P12	THRESHOLD2 DEST Refer to the notes for M12P03 to M12P07. Factory defaulted to an unused parameter M00P00.	R-W	Range: MXXPXX Default: M00P00 (00.00)
M12P13	VAR SEL1 IN1 SRC Enter the source for variable selector 1 input 1. There are two variable selectors available to the user. Each variable selector allows two input parameter values defined by (M12P13, M12P14) & (M12P23, M12P24) to be manipulated as defined by the mode M12P15 & M12P25. The result of the input parameters is limited by (M12P21, M12P22) & (M12P31, M12P32) and routed to a destination parameter defined M12P16 & M12P26. This feature is useful to reroute, smooth & combine any variable parameter. The end result can be used for display or monitoring purposes, or can be as an input to another parameter or function. Please refer to Menu 12 flowchart in the previous section of the instruction manual. <u>Note:</u> The scaling of the source parameter is such that when it is at its maximum value, and M12P18 (VEL1 IN1 SCALE) = 1.000, the IN1 input to VAR SEL 1 is at 100 %.	R-W	Range: MXXPXX Default: M00P00 (00.00)
M12P14	VAR SEL1 IN2 SRC Enter the source for variable selector 1 input 2. See M12P13 description. <u>Note:</u> The scaling of the source parameter is such that when it is at its maximum value, and M12P19 (VEL1 IN2 SCALE) = 1.000, the IN2 input to VAR SEL 1 is at 100 %.	R-W	Range: MXXPXX Default: M00P00 (00.00)
M12P15	VAR SEL 1 MODE Use to select the mode for the variable selector 1 as defined below: [0] SEL IN 1 Output = Input 1 [1] SEL IN 2 Output = Input 2 [2] ADD Output = Input 1 + Input 2 [3] SUBTRACT Output = Input 1 – Input 2 [4] MULTIPLY Output = (Input 1 x Input 2)/100.0 [5] DIVIDE Output = (Input 1 x 100.0)/Input 2 [6] FILTERED Output = Input 1/(M12P20 x S + 1) [7] RAMPED Output = Input 1 via ramp: M12P20 (sec) [8] ABS VALUE Output = (Input 1) in Mode [6] "S" in the equation is the Laplace identifier and M12P20 is the time constant for the 1 st order filter. See M12P13 description.	R-W	Range: [0] to [8] Default: [0] SEL IN 1
M12P16	VARSEL1 OUT DEST Enter the destination for the output of the variable selector 1. Factory defaulted to an unused parameter M00P00.	R-W	Range: MXXPXX Default: M00P00 (00.00)

<p>See M12P13 description.</p> <p><u>Note:</u> The scaling to the destination parameter is such that when M12P17 (VAR SEL 1 OUTPUT) = 100.0 %, the destination parameter will be set to its maximum value.</p>		
<p>M12P17 VAR SEL 1 OUTPUT This parameter monitors the result of the variable selector 1. See M12P13 description.</p>	R-O	Range: ±100.0% Default:
<p>M12P18 VSEL1 IN1 SCALE Enter a value to scale the variable selector 1 input 1 parameter. See M12P13 description.</p>	R-W	Range: ±10.000 Default: 1.000
<p>M12P19 VSEL1 IN2 SCALE Enter a value to scale the variable selector 1 input 2 parameter. See M12P13 description.</p>	R-W	Range: ±10.000 Default: 1.000
<p>M12P20 VAR SEL1 CONTROL Enter a value for the variable selector 1 control parameter. This parameter serves as a filter time constant or a ramp time in sec depending on the mode defined by parameter M12P15 See M12P13 description.</p>	R-W	Range: 0.00 to 100.00 sec Default: 0.00
<p>M12P21 VARSEL1 HI LIMIT The maximum positive selector 1 output can be limited by this parameter. See M12P13 description.</p>	R-W	Range: 0 to 100.0 % Default: 100.0
<p>M12P22 VARSEL1 LO LIMIT The maximum negative or minimum positive selector 1 output can limited by this parameter. See M12P13 description.</p>	R-W	Range: -100.0 to 100.0 % Default: -100.0
<p>M12P23 VAR SEL2 IN1 SRC Enter the source for variable selector 2 input 1. See M12P13 description. <u>Note:</u> The scaling of the source parameter is such that when it is at its maximum value, and M12P28 (VEL2 IN1 SCALE) = 1.000, the IN1 input to VAR SEL 2 is at 100 %.</p>	R-W	Range: MXXPXX Default: M00P00 (00.00)
<p>M12P24 VAR SEL2 IN2 SRC Enter the source for variable selector 2 input 2. See M12P13 description. <u>Note:</u> The scaling of the source parameter is such that when it is at its maximum value, and M12P29 (VEL2 IN2 SCALE) = 1.000, the IN2 input to VAR SEL 2 is at 100 %.</p>	R-W	Range: MXXPXX Default: M00P00 (00.00)
<p>M12P25 VAR SEL 2 MODE Use to select the mode for the variable selector 2 as defined below: [0] SEL IN 1 Output = Input 1 [1] SEL IN 2 Output = Input 2 [2] ADD Output = Input 1 + Input 2</p>	R-W	Range: [0] to [8] Default: [0] SEL IN 1

4-58 DRIVE PROGRAMMING

	<p>[3] SUBTRACT Output = Input 1 – Input 2 [4] MULTIPLY Output = (Input 1 x Input 2)/100.0 [5] DIVIDE Output = (Input 1 x 100.0)/Input 2 [6] FILTERED Output = Input 1/(M12P20 x S + 1) [7] RAMPED Output = Input 1 via ramp: M12P30 (sec) [8] ABS VALUE Output = (Input 1) </p> <p>in Mode [6] "S" in the equation is the Laplace identifier and M12P30 is the time constant for the 1st order filter. See M12P13 description.</p>		
M12P26	<p>VARSEL2 OUT DEST Enter the destination for the output of the variable selector 2 See M12P13 description.</p> <p><u>Note:</u> The scaling to the destination parameter is such that when M12P27 (VAR SEL 2 OUTPUT) = 100.0 %, the destination parameter will be set to its maximum value.</p>	R-W	Range: MXXPXX Default: M00P00 (00.00)
M12P27	<p>VAR SEL 2 OUTPUT This parameter monitors the result of the variable selector 2. See M12P13 description.</p>	R-O	Range: ±100.0% Default:
M12P28	<p>VSEL2 IN1 SCALE Enter a value to scale the variable selector 2 input 1 parameter. See M12P13 description.</p>	R-W	Range: ±10.000 Default: 1.000
M12P29	<p>VSEL2 IN2 SCALE Enter a value to scale the variable selector 2 input 2 parameter. See M12P13 description.</p>	R-W	Range: ±10.000 Default: 1.000
M12P30	<p>VAR SEL2 CONTROL Enter a value for the variable selector 2 control parameter. This parameter serves as a filter time constant or a ramp time in sec depending on the mode defined by parameter M12P25 See M12P13 description.</p>	R-W	Range: 0.00 to 100.00 sec Default: 0.00
M12P31	<p>VARSEL2 HI LIMIT The maximum positive selector 1 output can be limited by this parameter. See M12P13 description.</p>	R-W	Range: 0 to 100.0 % Default: 100.0
M12P32	<p>VARSEL2 LO LIMIT The maximum negative or minimum positive selector 2 output can be limited by this parameter. See M12P13 description.</p>	R-W	Range: -100.0 to 100.0 % Default: -100.0
M12B33	<p>MECH BRAKE SEQ If set to 1, the drive will control bit parameter M12B34 (BRAKE RELEASE) such that if M12B34 is used as a source for one of the digital outputs connected one of the output relays, the solenoid of a mechanical brake can be properly sequenced to release and apply the brake.</p>	R-W	Range: 0 or 1 Default: 0
M12B34	<p>BRAKE RELEASE This parameter should be used as a source for one of the digital outputs connected to an output relay which can</p>	R-O	Range: 0 or 1 Default: 0

	then in turn control the solenoid of a mechanical brake. If parameter M12B33 is set to 1, parameter M12B34 will be properly sequenced by the drive to release and apply the brake as the drive is started and stopped.		
M12P35	UPPER CURR LEVEL See description of parameter M12P36 below.	R-W	Range: 0 to 100.0 % Default: 50.0
M12P36	LOWER CURR LEVEL The value of parameter M04P01 (MOT CURR-TOTAL) is compared to the upper and lower current levels by a comparator with hysteresis to detect the presence of torque and loss of control of the motor respectively. The upper and lower level currents are given as a percentage of motor current as defined by parameter M05P06 (RATED MOTOR CURR). The upper current level should be set to the current level that indicates that there is magnetizing current and sufficient torque producing current in the motor to deliver the required amount of torque when the brake is released. The output of the comparator remains active after this level has been reached unless the current falls below the lower current level which should be set to the level that allows the drive to detect when the motor is no longer being controlled by the drive.	R-W	Range: 0 to 100.0 % Default: 10.0
M12P37	BRAKE REL FREQ A frequency comparator is used to detect when the motor frequency has reached a level where the motor can produce the required amount of torque to ensure that the motor rotates in the demanded direction when the brake is released. The setting of this parameter should be slightly above the motor slip frequency that will occur when the highest expected load is applied to the motor.	R-W	Range: 0 to 20.0 Hz Default: 1.0
M12P38	BRAKE APPLY SPD The brake apply frequency threshold is used to ensure that the brake is applied before the motor frequency reaches zero and to prevent the motor rotating in the reverse direction during the brake apply time. If the frequency falls below this threshold, but motor is not required to stop (i.e. reversing direction without stopping), the brake will not be applied (as long as parameter M01B11 is set to 1).	R-W	Range: 0 to 20.0 Hz Default: 1.0
M12P39	PREBRAKE REL DLY The pre-brake release delay allows time for the motor torque to buildup to the required level before the brake is released. This time allows the motor flux to reach rated value (3 times rotor time constant of the motor). During the pre-brake delay period, the motor frequency is held constant by holding the reference ramp (M02B36 = 1).	R-W	Range: 0 to 25.0 Sec Default: 1.0
M12P41	POSTBRAK REL DLY The post-brake release delay allows for the brake release time. During this period, the motor frequency is held constant by holding the reference ramp (M02B36 = 1), so there is no sudden increase in motor speed when the brake actually releases.	R-W	Range: 0 to 25.0 Sec Default: 1.0
M13P01	RUN-TIME LOG Y-D Indicates years and days of the total running time of the drive.	R-O	Range: 0.000 to 9.364 y.ddd Default:

4-60 DRIVE PROGRAMMING

M13P02	RUN-TIME LOG H-M Indicates the hours and minutes of the total running time of the drive.	R-O	Range: 00.00 to 23.59 hh.mm Default:
M13P03	ENERGY IN MWH Indicates MWh of energy consumed.	R-O	Range: 0 to 10000 MWh Default:
M13P04	ENERGY IN KWH Indicates kWh of energy consumed.	R-O	Range: 000.0 to 1000.0 kWh Default:
M13P05	RUNNING COST Continuously indicates the running cost/hour. Requires the correct value to be entered in M13P08.	R-O	Range: 0 to XXXX M13P08/h Default:
M13P06	COUNTDOWN TIMER1 Indicates the running time remaining until timer1 has counted down to zero.	R-O	Range: 0 to 10000 h Default:
M13P07	COUNTDOWN TIMER2 Indicates the running time remaining until timer2 has counted down to zero.	R-O	Range: 0 to 10000 h Default:
M13P08	COST PER KWH Enter electricity cost for use by M13P05.	R-W	Range: 00.00 to 100.00 Currency Default: 0
M13B09	RESET POWER MTR Set at 1 to reset M13P03 and M13P04.	R-W	Range: 0 or 1 Default: 0
M13P10	STARTTIME TIMER1 Enter the running time the drive must operate before timer1 counts down to zero.	R-W	Range: 0 to 10000 h Default: 0
M13P12	STARTTIME TIMER2 Enter the running time the drive must operate before time2 counts down to zero.	R-W	Range: 0 to 10000 h Default: 0
M13B11	TIMER1 DONE M13B11 is automatically set to 1 when M13P06 = 0. Set M13B11 to 0 to reset countdown timer1. This causes M13P06 to be loaded with the value of M13P10.	R-W	Range: 0 or 1 Default: 0
M13B13	TIMER2 DONE M13B13 is automatically set at 1 when M13P07 = 0. Set M13B13 to 0 to reset countdown timer2. This causes M13P07 to be loaded with the value of M13P12.	R-W	Range: 0 or 1 Default: 0
M14P01	PID OUTPUT The inputs to the PID controller are automatically scaled to the range $\pm 100.0\%$. The PID controller output is also within this range. Although it would appear that the variables have only a 10-bit resolution, internal calculations are made at a higher resolution for greater accuracy. The displayed values are scaled versions of the internal variables. The output after the scale factor M14P15 is automatically scaled to match the range of the destination parameter. Gain parameters are actual units, as follows: $\text{PID output} = Pe + Ie/s + Des$ Where: P, I and D are the programmed gains e is the input error to the PID controller s is the Laplace identifier With an error of 100%, if P = 1.000 the output produced by the proportional term is 100%.	R-O	Range: $\pm 100.0\%$ Default:

<p>With an error of 100%, if I = 1.000 the output produced by the integral term will increase linearly by 100% every second.</p> <p>With an error that is increasing by 100% per second, if D = 1.000 the output produced by the D term will be 100%.</p>		
<p>M14P02 MAIN REF SOURCE See parameter M14P01. Factory defaulted to an unused parameter M00P00 which is equivalent to setting the source signal to 0.</p> <p>If a non-valid parameter is programmed the input value is taken as 0. All variable inputs to the PID are automatically scaled to variables having the range $\pm 100.0\%$, or 0 - 100.0% if they are unipolar.</p> <p><u>Note:</u> The scaling of the source parameter is such that when it is at its maximum value, the MAIN REFERENCE (M14P20) is at 100 %.</p>	R-W	Range: MXXPXX Default: M00P00 (00.00)
<p>M14P03 PID REF SOURCE See parameter M14P01. Factory defaulted to an unused parameter M00P00 which is equivalent to setting the source signal to 0.</p> <p>If a non-valid parameter is programmed the input value is taken as 0. All variable inputs to the PID are automatically scaled to variables having the range $\pm 100.0\%$, or 0 - 100.0% if they are unipolar.</p> <p><u>Note:</u> The scaling of the source parameter is such that when it is at its maximum value, the PID REFERENCE (M14P17) is at 100 %.</p>	R-W	Range: MXXPXX Default: M00P00 (00.00)
<p>M14P04 PID FEEDBACK SRC See parameter M14P01.</p> <p>Factory defaulted to an unused parameter M00P00 which is equivalent to setting the source signal to 0.</p> <p>If a non-valid parameter is programmed the input value is taken as 0. All variable inputs to the PID are automatically scaled to variables having the range $\pm 100.0\%$, or 0 - 100.0% if they are unipolar.</p> <p><u>Note:</u> The scaling of the source parameter is such that when it is at its maximum value, the PID FEEDBACK (M14P18) is at 100 %.</p>	R-W	Range: MXXPXX Default: M00P00 (00.00)
<p>M14B05 INVERT REFERENCE See parameter M14P01.</p> <p>This parameter is used to change the sense of the PID reference signal. Setting this parameter to a 1 causes the signal seen by the input to be inverted.</p>	R-W	Range: 0 or 1 Default: 0
<p>M14B06 INVERT FEEDBACK See parameter M14P01.</p> <p>This parameter is used to change the sense of the PID feedback signal. Setting this parameter to a 1 causes the signal seen by the input to be inverted.</p>	R-W	Range: 0 or 1 Default: 0

4-62 DRIVE PROGRAMMING

<p>M14P07 PID REF SLEWRATE See parameter M14P01.</p> <p>This parameter defines the time taken for the reference input to ramp from 0 to 100.0% following a 0 to 100% step change in input. Changes from -100.0% to +100.0% will take twice this time.</p>	R-W	Range: 0.1 to 3276 Sec Default: 0.1
<p>M14B08 PID ENABLE See parameter M14P01.</p> <p>This parameter must be at 1 for the PID controller to operate, if it is 0 the PID output will be 0.</p>	R-W	Range: 0 or 1 Default: 0
<p>M14P09 PID ENABLE SRC See parameter M14P01.</p> <p>This parameter can be used to control when the PID function is enabled via a bit parameter. This bit parameter is ANDed with the PID enable parameter M14B08 to enable the PID function.</p> <p>If a non-valid parameter is programmed the input to the PID controller is taken as a 1. Any valid optional enable programmed must be a 1 for the PID controller to operate; if it is a 0 then the output will be 0.</p> <p>Factory defaulted to an unused parameter M00P00 which is equivalent to setting the source to 1.</p>	R-W	Range: MXXPXX Default: M00P00 (00.00)
<p>M14P10 PROPORTIONAL GAIN See parameter M14P01.</p> <p>This is the proportional gain applied to the PID error.</p>	R-W	Range: 0 to 10.000 Default: 1.000
<p>M14P11 INTEGRAL GAIN See parameter M14P01.</p> <p>This is the gain applied to the PID error before being integrated.</p>	R-W	Range: 0 to 10.000 Default: 0.500
<p>M14P12 DERIVATIVE GAIN See parameter M14P01.</p> <p>This is the gain applied to the PID error before being differentiated.</p>	R-W	Range: 0 to 10.000 Default: 0
<p>M14P13 PID HIGH LIMIT See parameter M14P01.</p> <p>The maximum positive PID output can be limited by this parameter.</p>	R-W	Range: 0 to 100.0 % Default: 100.0
<p>M14P14 PID LOW LIMIT See parameter M14P01.</p> <p>The maximum negative or minimum positive PID output can be limited by this parameter.</p>	R-W	Range: -100.0 to +100.0 % Default: -100.0
<p>M14P15 PID OUT SCALING See parameter M14P01.</p> <p>This parameter scales the final addition of the PID OUTPUT and the MAIN REFERENCE.</p>	R-W	Range: 0.000 to ±10.000 Default: 1.000

<p>M14P16 PID OUT DESTINAT See parameter M14P01. Factory defaulted to an unused parameter M00P00.</p> <p>This destination parameter defines the parameter to be controlled by the PID function. If a non-valid parameter is programmed the output is not routed anywhere. If the PID is to control speed then it is suggested that one of the preset speed parameters is entered here. If the PID is to trim speed then it is suggested that the offset parameter M01P15 is entered here.</p> <p>The output after the scale factor M14P15 is automatically scaled to match the range of the destination parameter.</p> <p><u>Note:</u> The scaling to the destination parameter is such that when M14P01 (PID OUTPUT) = 100.0 %, and M14P15 (PID OUT SCALING) = 1.000, the destination parameter will be set to its maximum value.</p>	<p>R-W</p>	<p>Range: MXXPXX Default: M00P00 (00.00)</p>
<p>M14P17 PID REFERENCE This parameter monitors the PID controller reference.</p>	<p>R-O</p>	<p>Range: ±100.0% Default:</p>
<p>M14P18 PID FEEDBACK This parameter monitors the PID controller feedback.</p>	<p>R-O</p>	<p>Range: ±100.0% Default:</p>
<p>M14P19 PID ERROR This parameter monitors the PID controller error</p>	<p>R-O</p>	<p>Range: ±100.0% Default:</p>
<p>M14P20 MAIN REFERENCE This parameter monitors the PID controller main reference.</p>	<p>R-O</p>	<p>Range: ±100.0% Default:</p>

4-64 DRIVE PROGRAMMING

List of parameters that cannot be used as destination for other parameters:
All read-only (R-O) parameters are of course included but not shown in the list below.

M00P01	TO M00P20	M09P08	BIT SEL1 SOURCE1	M12P03	THRESHOLD 1 SRC
M01P04	KEYPAD REFERENCE	M09P10	BIT SEL1 SOURCE2	M12P07	THRESHOLD1 DEST
M01P06	MAX FREQUENCY	M09P14	BIT SEL2 SOURCE1	M12P08	THRESHOLD2 SRC
M02P33	ACEL RECOVR RAMP	M09P16	BIT SEL2 SOURCE2	M12P12	THRESHOLD2 DEST
M05P06	RATED MOTOR CURR	M09P20	DIGITAL OUT3 SRC	M12P13	VAR SEL1 IN1 SRC
M05P07	RATED MOTOR RPM	M09P22	DIGITAL OUT4 SRC	M12P14	VAR SEL1 IN2 SRC
M05P08	RATED MOTOR VOLT	M09P24	DIGITAL OUT5 SRC	M12P16	VARSEL1 OUT DEST
M05P09	RATED MOTOR FREQ	M09P26	DIGITAL OUT6 SRC	M12P23	VAR SEL2 IN1 SRC
M05P10	NUMBEROF POLES	M09P28	DIGITAL OUT7 SRC	M12P24	VAR SEL2 IN2 SRC
M05P11	AUTOBOOST VOLT	M09P30	DIGITAL OUT1 SRC	M12P26	VARSEL2 OUT DEST
M05P13	MOTOR PWR FACTOR	M09P32	DIGITAL OUT2 SRC	M13P08	COST PER KWH
M05P14	FIXED BOOST VOLT	M09P35	BITSEL1 OUT DEST	M14P02	MAIN REF SOURCE
M05P20	MAX PWM CARRIER	M09P37	BITSEL2 OUT DEST	M14P03	PID REF SOURCE
M05P21	MIN PWM CARRIER	M10B25	ENABLE AUTORESET	M14P04	PID FEEDBACK SRC
M05P22	SPEED@MAX CARRIER	M10P27	NO OF AR ATTEMPS	M14P09	PID ENABLE SRC
M05P23	SPEED@MIN CARRIER	M10P30	SERIAL TRIP	M14P16	PID OUT DESTINAT
M05P33	RATED LINE VOLTS	M11P01	DEFINE M00P01		
M06P02	AUTO-START MODE	M11P02	DEFINE M00P02		
M06P06	DB CHOPPER MODE	M11P03	DEFINE M00P03		
M06B12	KEYPAD START	M11P04	DEFINE M00P04		
M06B13	KEYPAD STOP	M11P05	DEFINE M00P05		
M06B14	KEYPAD FWD/REV	M11P06	DEFINE M00P06		
M06P31	MOP DESTINATION	M11P07	DEFINE M00P07		
M06P38	MIN SEARCH FREQ	M11P08	DEFINE M00P08		
M07P07	ANALOG OUT 1 SCR	M11P09	DEFINE M00P09		
M07P08	ANALOG OUT 2 SRC	M11P10	DEFINE M00P10		
M07P09	ANALOG OUT 3 SRC	M11P11	DEFINE M00P11		
M07P10	ANALOG IN 1 MODE	M11P12	DEFINE M00P12		
M07P12	ANALOG IN 1 DEST	M11P13	DEFINE M00P13		
M07P13	ANALOG IN 2 MODE	M11P14	DEFINE M00P14		
M07P15	ANALOG IN 2 DEST	M11P15	DEFINE M00P15		
M07P16	ANALOG IN 3 MODE	M11P16	DEFINE M00P16		
M07P18	ANALOG IN 3 DEST	M11P17	DEFINE M00P17		
M08P09	F2 INPUT DESTINA	M11P18	DEFINE M00P18		
M08P11	F3 INPUT DESTINA	M11P19	DEFINE M00P19		
M08P13	F4 INPUT DESTINA	M11P20	DEFINE M00P20		
M08P15	F5 INPUT DESTINA	M11P23	SERIAL ADDRESS		
M08P17	F6 INPUT DESTINA	M11P24	SERIAL PARITY		
M08P19	F7 INPUT DESTINA	M11P25	BAUD RATE		
M08P21	F8 INPUT DESTINA	M11P26	SERIAL PROTOCOL		
M08P23	MODE SELECT SRC	M11P29	SECURITY CODE		
M08P24	MODESEL OUT DEST	M11P30	DISPLAY WHEN PWR		
		M11P33	DRIVE MODEL NO		
		M11P36	FACTORY DEFAULTS		
		M11P37	ACCESS CODE		
		M11P44	ENABL SERIAL R/W		

<u>FAULT DESCRIPTION</u>	
FAULT NUMBER-DISPLAY	DESCRIPTION
[1] CUR LOSS1: <i>Loss of current loop 1</i>	When parameter M07P10 is set at 3 or 4, this trip occurs when analog speed reference 1 current input (4-20mA or 20-4mA) is less than 3.0mA.
[2] EXT FAULT: <i>External Fault</i>	A fault signal has been detected, an input contact opened at TB2 terminal 6. Refer to parameter M08P13 and M10B29.
[3] MTR OVRLD: <i>Motor overload</i>	Actual motor current has exceeded the value defined by the speed sensitive overload "Continuous Operation Zone" for an excessive period of time (see Figure 10-3a.). See parameter M10B07 for full details.
[4] OVERTEMP: <i>Heatsink over temperature</i>	The drive heatsink has reached its upper working temperature. Inadequate cooling.
[5] OVERCURR: <i>Instantaneous AC over-current trip</i>	Excessive current in the output of the drive, possibly indicating an external short-circuit at the output of the drive. This would include short-circuits in the motor cables, connections in the motor conduit box or the motor itself. This fault can also occur due to excessive "AUTO BOOST VOLT" (M05P11) or "FIXED BOOST VOLT" (M05P14) settings.
[6] OVERVOLT: <i>Bus over-voltage</i>	Over-voltage of the AC supply, or motor regeneration, causing the DC bus to exceed the maximum level. If an over-voltage only occurs right after a run command, check for a short to ground at the output of the drive. This would include short-circuits in the motor cables, connections in the motor conduit box or the motor itself.
[7] INPUTLOSS: <i>Input Loss</i>	Excessive AC line voltage unbalance or phase loss detected. Refer to parameter M06B20
[8] CNTRL PWR: <i>Control power fail</i>	Control Power supply dropped below normal. Consult the supplier of the drive.
[9] MOTORLOSS: <i>Motor Loss</i>	Motor current not detected or motor current below what it should be when the drive is in the RUN state. MOTORLOSS could also be caused by excessive "AUTO BOOST VOLT" (M05P11) or "FIXED BOOST VOLT" (M05P14) settings.
[10] Reserved	
[11] GATE FLT: <i>Gate drive fault</i>	IGBT driver power supply loss, power board hardware fault. Consult the supplier of the drive.
[12] PRECH AUX: <i>Precharge aux fail</i>	DC bus precharge contactor opened when it is supposed to be closed. Consult the supplier of the drive .
[13] UNDERVOLT: <i>Under voltage</i>	The DC bus voltage dropped below the minimum level.
[14] DRV OVRLD: <i>Drive Overload</i>	Actual motor current has exceeded the drive capacity. This could be caused by excessive "AUTO BOOST VOLT" (M05P11) or "FIXED BOOST VOLT" (M05P14) settings.
[15] KEYPDLOSS: <i>Keypad Loss</i>	No communication detected between the Control Keypad and the drive for a time period equal to parameter M06P48 (KEYPAD TIMEOUT).
[16] CUR LOSS2: <i>Loss of current loop 2</i>	When parameter M07P13 is set at 3 or 4, this trip occurs when analog speed reference 2 current input (4-20 mA or 20-4 mA) is less than 3.0mA.
[17] CUR LOSS3: <i>Loss of current loop 3</i>	When parameter M07P16 is set at 3 or 4, this trip occurs when analog speed reference 3 current input (4-20 mA or 20-4 mA) is less than 3.0mA.
[18] EEPROM: <i>Eprom fault</i>	Control board hardware fault. Consult the supplier of the drive.

4-66 MENU AND PARAMETER DESCRIPTION

<u>FAULT DESCRIPTION</u>	
FAULT NUMBER-DISPLAY	DESCRIPTION
[19] SERIALLOSS: <i>Serial Loss</i>	Communication from the master is lost by the slave (drive) for a time period equal to parameter M11P42 (SERIAL TIMEOUT). Note that a serial loss can only occur after communication has been established between the master and the drive (slave). The drive waits for the master to initiate communication.
[20] PRECHTIME: <i>Precharge contactor timeout</i>	DC bus precharge contactor failed to close on AC power-up.
[21] BUSRIPPLE: <i>Bus Ripple</i>	Excessive bus voltage ripple detected. This fault can be caused due to severe AC line voltage unbalance or phase loss or defective DC bus capacitors.
[22] OVERSPEED: <i>Overspeed</i>	Indicates the drive is in regenerating current limit and the speed has increased to maximum.
[23] Reserved	
[24] Reserved	
[25] M1 OVRVLT: <i>Over-voltage power module no. 1</i>	Over-voltage power module no. 1 Over-voltage of the AC supply, or motor regeneration, causing the DC bus to exceed the maximum level. If an over-voltage only occurs right after a run command, check for a short to ground at the output of the drive. This would include short-circuits in the motor cables, connections in the motor conduit box or the motor itself.
[26] M2 OVRVLT: <i>Over-voltage power module no. 2</i>	Over-voltage power module no. 2 Over-voltage of the AC supply, or motor regeneration, causing the DC bus to exceed the maximum level. If an over-voltage only occurs right after a run command, check for a short to ground at the output of the drive. This would include short-circuits in the motor cables, connections in the motor conduit box or the motor itself.
[27] M3 OVRVLT: <i>Over-voltage power module no. 3</i>	Over-voltage power module no. 3 Over-voltage of the AC supply, or motor regeneration, causing the DC bus to exceed the maximum level. If an over-voltage only occurs right after a run command, check for a short to ground at the output of the drive. This would include short-circuits in the motor cables, connections in the motor conduit box or the motor itself.
[28] M4 OVRVLT: <i>Excessive current in power module no. 4</i>	Over-voltage power module no. 4 Over-voltage of the AC supply, or motor regeneration, causing the DC bus to exceed the maximum level. If an over-voltage only occurs right after a run command, check for a short to ground at the output of the drive. This would include short-circuits in the motor cables, connections in the motor conduit box or the motor itself.
[29] M5 OVRVLT: <i>Excessive current in power module no. 5</i>	Over-voltage power module no. 5 Over-voltage of the AC supply, or motor regeneration, causing the DC bus to exceed the maximum level. If an over-voltage only occurs right after a run command, check for a short to ground at the output of the drive. This would include short-circuits in the motor cables, connections in the motor conduit box or the motor itself.

<u>FAULT DESCRIPTION</u>	
FAULT NUMBER-DISPLAY	DESCRIPTION
[30] M6 OVRVLT: Excessive current in power module no. 6	Over-voltage power module no. 6 Over-voltage of the AC supply, or motor regeneration, causing the DC bus to exceed the maximum level. If an over-voltage only occurs right after a run command, check for a short to ground at the output of the drive. This would include short-circuits in the motor cables, connections in the motor conduit box or the motor itself.
[31] M1 OVRCUR: Excessive current in power module no. 1	Excessive current in power module no. 1 Excessive current in the output of the drive, possibly indicating an external short-circuit. This would include short-circuits in the motor cables, connections in the motor conduit box or the motor itself.
[32] M2 OVRCUR: Excessive current in power module no. 2	Excessive current in power module no. 2 Excessive current in the output of the drive, possibly indicating an external short-circuit. This would include short-circuits in the motor cables, connections in the motor conduit box or the motor itself.
[33] M3 OVRCUR: Excessive current in power module no. 3	Excessive current in power module no. 3 Excessive current in the output of the drive, possibly indicating an external short-circuit. This would include short-circuits in the motor cables, connections in the motor conduit box or the motor itself.
[34] M4 OVRCUR: Excessive current in power module no. 4	Excessive current in power module no. 4 Excessive current in the output of the drive, possibly indicating an external short-circuit. This would include short-circuits in the motor cables, connections in the motor conduit box or the motor itself.
[35] M5 OVRCUR: Excessive current in power module no. 5	Excessive current in power module no. 5 Excessive current in the output of the drive, possibly indicating an external short-circuit. This would include short-circuits in the motor cables, connections in the motor conduit box or the motor itself.
[36] M6 OVRCUR: Excessive current in power module no. 6	Excessive current in power module no. 6 Excessive current in the output of the drive, possibly indicating an external short-circuit. This would include short-circuits in the motor cables, connections in the motor conduit box or the motor itself.
[37] Reserved	
[38] Reserved	
[39] Reserved	
[40] Reserved	
[41] Reserved	
[42] Reserved	
[43] M1 IGBTFT: IGBT fault power module no. 1	IGBT fault power module no. 1 Fault detected in the power switching device

4-68 MENU AND PARAMETER DESCRIPTION

<u>FAULT DESCRIPTION</u>	
FAULT NUMBER-DISPLAY	DESCRIPTION
[44] M2 IGBTFT: IGBT fault power module no. 2	IGBT fault power module no. 2 Fault detected in the power switching device
[45] M3 IGBTFT: IGBT fault power module no. 3	IGBT fault power module no. 3 Fault detected in the power switching device
[46] M4 IGBTFT: IGBT fault power module no. 4	IGBT fault power module no. 4 Fault detected in the power switching device
[47] M5 IGBTFT: IGBT fault power module no. 5	IGBT fault power module no. 5 Fault detected in the power switching device
[48] M6 IGBTFT: IGBT fault power module no. 6	IGBT fault power module no. 6 Fault detected in the power switching device
[49] M1 GTFLT: Gate fault power module no. 1	Gate fault power module no. 1 Fault detected in the switch mode power supply for the IGBT gate driver
[50] M2 GTFLT: Gate fault power module no. 2	Gate fault power module no. 2 Fault detected in the switch mode power supply for the IGBT gate driver
[51] M3 GTFLT: Gate fault power module no. 3	Gate fault power module no. 3 Fault detected in the switch mode power supply for the IGBT gate driver
[52] M4 GTFLT: Gate fault power module no. 4	Gate fault power module no. 4 Fault detected in the switch mode power supply for the IGBT gate driver
[53] M5 GTFLT: Gate fault power module no. 5	Gate fault power module no. 5 Fault detected in the switch mode power supply for the IGBT gate driver
[54] M6 GTFLT: Gate fault power module no. 6	Gate fault power module no. 6 Fault detected in the switch mode power supply for the IGBT gate driver
[55] M1 OVRTMP: Overtemp fault inverter power mod no. 1	Overtemp fault inverter power module no. 1 The drive heatsink has reached its upper working temperature. Inadequate cooling.
[56] M2 OVRTMP: Overtemp fault inverter power mod no. 2	Overtemp fault inverter power module no. 2 The drive heatsink has reached its upper working temperature. Inadequate cooling.
[57] M3 OVRTMP: Overtemp fault inverter power mod no. 3	Overtemp fault inverter power module no. 3 The drive heatsink has reached its upper working temperature. Inadequate cooling.
[58] M4 OVRTMP: Overtemp fault inverter power mod no. 4	Overtemp fault inverter power module no. 4 The drive heatsink has reached its upper working temperature. Inadequate cooling.
[59] M5 OVRTMP: Overtemp fault inverter power mod no. 5	Overtemp fault inverter power module no. 5 The drive heatsink has reached its upper working temperature. Inadequate cooling.
[60] M6 OVRTMP: Overtemp fault inverter power mod no. 6	Overtemp fault inverter power module no. 6 The drive heatsink has reached its upper working temperature. Inadequate cooling.

<u>FAULT DESCRIPTION</u>	
FAULT NUMBER-DISPLAY	DESCRIPTION
[61] M1 NUIS: Nuisance fault from power module no. 1	Nuisance fault from power module no. 1 Fault detected in module 1 but type not recognized
[62] M2 NUIS: Nuisance fault from power module no. 2	Nuisance fault from power module no. 2 Fault detected in module 2 but type not recognized
[63] M3 NUIS: Nuisance fault from power module no. 3	Nuisance fault from power module no. 3 Fault detected in module 3 but type not recognized
[64] M4 NUIS: Nuisance fault from power module no. 4	Nuisance fault from power module no. 4 Fault detected in module 4 but type not recognized
[65] M5 NUIS: Nuisance fault from power module no. 5	Nuisance fault from power module no. 5 Fault detected in module 5 but type not recognized
[66] M6 NUIS: Nuisance fault from power module no. 6	Nuisance fault from power module no. 6 Fault detected in module 6 but type not recognized
[67] PM NUIS: Nuisance fault from unknown module	Fault detected from unknown module number but type not recognized
[68] SER TRIP1: Serial Trip 1	Drive fault caused by writing fault code 68 into M10P30 (SERIAL TRIP)
[69] SER TRIP2: Serial Trip 2	Drive fault caused by writing fault code 69 into M10P30 (SERIAL TRIP)
[70] through [72] Reserved	
[73] # OF MODS: Number of Modules fault	<p>Drive fault for a drive model with parallel power modules. The number of power modules detected (M10P52) does not agree with the number of power modules required (M11P46). See parameters M10P52 (MODULES DETECTED) and M11P46 (MODULES REQUIRED) for more details. There are a number of causes for the "# OF MODS" fault to be generated:</p> <ul style="list-style-type: none"> • If more than one module has multiple addresses selected. • If more than one module has the same address • If one or more modules do not have an address selected. • If ribbon cables between the modules are not connected or are defective. • If logic power is lost to one or more of the modules (e.g. power board (P/N: 3000-4060-X) failure) • Failure of a parallel module board (P/N: 3000-4075-X) Failure of the parallel driver board (P/N: 3000-4065-X) on the master module. • Failure of the master control board (P/N: 3000-4100-X)

4-70 MENU AND PARAMETER DESCRIPTION

THIS PAGE INTENTIONALLY LEFT BLANK

COMMON OPTIONS AND INTERCONNECTS

WARNING: To avoid a hazard of electric shock, after the input and control power is removed from the drive and the ROM display is no longer lit, wait five (5) minutes for DC bus capacitors to fully discharge before opening the drive. Verify that the voltage on the DC bus capacitors has discharged by measuring the DC bus voltage at the +DC & -DC terminals of the drive. The voltage must be zero.

CAUTION: This drive contains ESD (Electrostatic Discharge) sensitive parts and assemblies. Static control precautions are required when installing, testing, servicing or repairing this assembly. Component damage may result if ESD control procedures are not followed.

Standard Drive with Manual Bypass Setup & Diagram 1 of 2

All standard drives with Manual Bypass are wired per this setup (same HOA described in 3.7.8) and no programming is needed.

Hand Mode:

Start command: Keypad RUN key.

Stop command: Keypad STOP key.

*FWD/REV command: Keypad USER key.

Jog command: JOG contact at TB2-3-TB2-1.

Reset command: keypad STOP/RESET key or pushbutton at TB2-7-TB2-1.

Speed reference source: Keypad reference M01P04.

Auto Mode:

Start/Stop command: Customer supplied AUTO Run contact.

*FWD/REV command: Contact at TB2-4-TB2-1.

Jog command: JOG contact at TB2-3-TB2-1.

Reset command: keypad STOP/RESET key or pushbutton at TB2-7-TB2-1.

Speed reference source:

- When TB2-8 is wired to TB2-1, analog reference 2 is selected for AUTO reference, 4-20MA operation with min speed when loss of 4-20MA signal (refer to M07P13 description for other choices).

- When TB2-8 is not wired to TB2-1, analog reference 1 is selected for AUTO reference, 0-10Vdc operation.

*Note: Reverse function is disabled. IF FWD/REV is needed set M06P23 (DISABLE REV ROT) to 0 and M06P18 (KEYPAD CONT MODE) to "ALL KEYS".

WARNING:

In the following steps, rotation of the motor in an undesired direction can occur. To guard against possible equipment damage, it is recommended that the motor be disconnected from the load before proceeding.


VFD Motor Rotation Check:

Sections 3.6.5 and 3.6.6 should first be performed with the "VFD-OFF-BYP" switch is in the "VFD" position and the "HAND-OFF-AUTO" switch in the "HAND" position. Follow all instructions using the Keypad frequency reference. If motor rotation is incorrect, as stated in section 3.6.5 interchange any two of the three customer "OUTPUT TO MOTOR" leads, U, V, or W. Under no circumstances should the internal drive wiring be interchanged. This completes the check for motor rotation in VFD mode.

Bypass Motor Rotation Check:

After stopping the VFD by pressing the ROM stop key, place the "HAND-OFF-AUTO" switch in the "OFF" position. Start the motor in BYPASS mode by placing the "VFD-OFF-BYP" switch in the "BYP" position. If the motor direction is incorrect, remove and lock-out input and control power to the drive. When the ROM is no longer illuminated, wait for five (5) minutes for the bus capacitors to fully discharge. Open the drive door and interchange any two of the three customer AC LINE INPUT leads, L1, L2, or L3. Under no circumstances should the internal drive wiring be interchanged. This completes the check for motor rotation in BYPASS mode.

Standard Drive with Manual Bypass Setup & Diagram 2 of 2

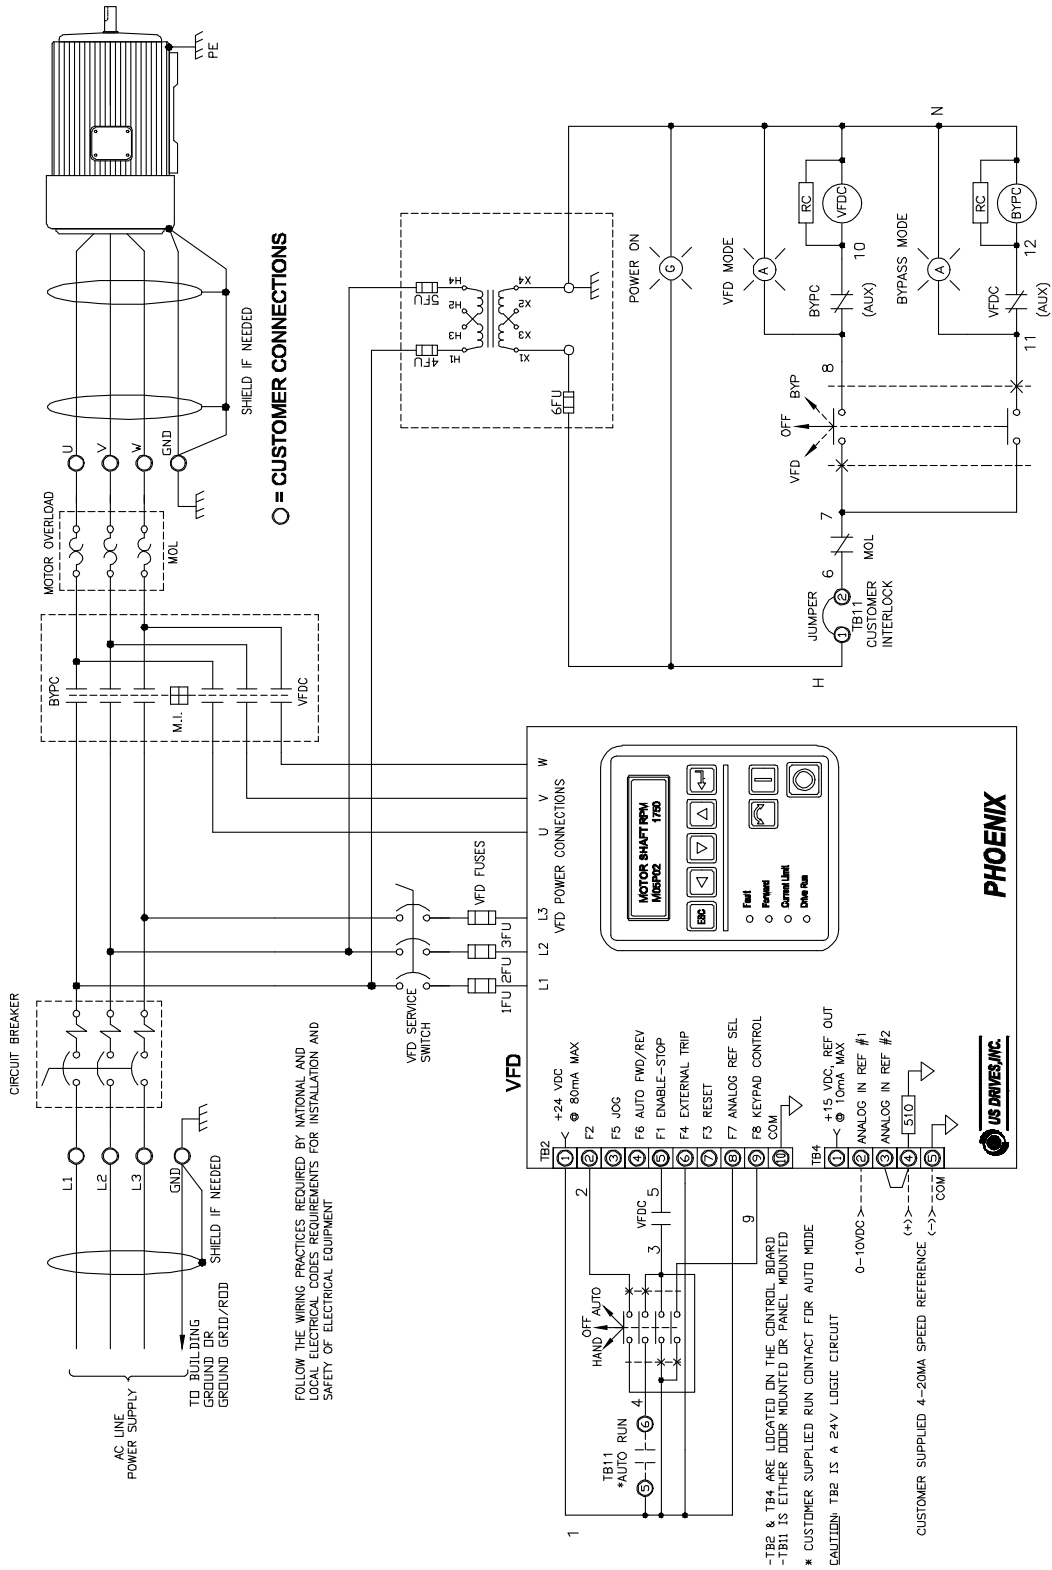

APPENDIX A-4

PROCESS SIGNAL FOLLOWER BOARD P/N:3000-4040 & 3000-4040-120

INPUTS:

FOR INPUT VOLTAGE (DC) USE: TB1: TERMINAL # 1 (+), TERMINAL # 3 (-) Max input voltage: per table below
FOR INPUT CURRENT USE: TB1: TERMINAL # 2 (+), TERMINAL # 3 (-) Max input current: 75mA

OUTPUT:

OUTPUT VOLTAGE REFERENCE: TB2: TERMINAL # 3 0-10Vdc at 4 mA max
OUTPUT CURRENT REFERENCE: TB2: TERMINAL # 4 4-20mA at 500W max
COMMON, RETURN: TB2: TERMINAL # 2

SUPPLY VOLTAGE:

FOR BOARD P/N 3000-4040-120: TB3 TERMINAL#1 (HOT), TERMINAL#2 (NEUTRAL): 120VAC 50/60HZ
100MA MAX

FOR BOARD P/N 3000-4040: TB2 TERMINAL#1 (+), TERMINAL#2 (-): 24VDC 100MA MAX

JUMPER PROGRAMMING:

POSITION	MAX INPUT VOLTAGE	
12V	12V	
24V	24V	CONTACT FACTORY
48V	48V	CONTACT FACTORY
96V	96V	CONTACT FACTORY
192V	192V	CONTACT FACTORY

JP2 PROGRAMMING	
POSITION	INPUT
V-IN	VOLTAGE
I-IN	4-20 Ma @ 250 Ω

POTENTIOMETERS:


Bias pot, used to set output to zero volts or 4mA at either zero volts input or 4mA current input.

- Voltage input: with input voltage set to zero volts, adjust POT1 BIAS for zero voltage at VOLT OUT.
- Voltage input: with input voltage set to zero volts, adjust POT1 BIAS for 4 mA at CURR OUT.
- Current input: current set to 4mA, adjust POT1 BIAS for zero voltage at VOLT OUT.
- Current input: current set to 4mA, adjust POT1 BIAS for 4 mA at CURR OUT.

Gain Pot, used to set output to 10Vdc or 20mA at maximum input voltage or 20mA input current.


- Voltage input: with input voltage set to maximum volts, adjust POT2 GAIN for 10Vdc at VOLT OUT.
- Voltage input: with input voltage set to maximum volts, adjust POT2 POT2 GAIN for 20mA at CURR OUT.
- Current input: current set to 20mA, adjust POT2 GAIN for 10Vdc at VOLT OUT.
- Current input: current set to 20mA, adjust POT2 GAIN for 20mA at CURR OUT.

Interconnect for Option Boards: 3000-4040-120 & 3000-4050-120

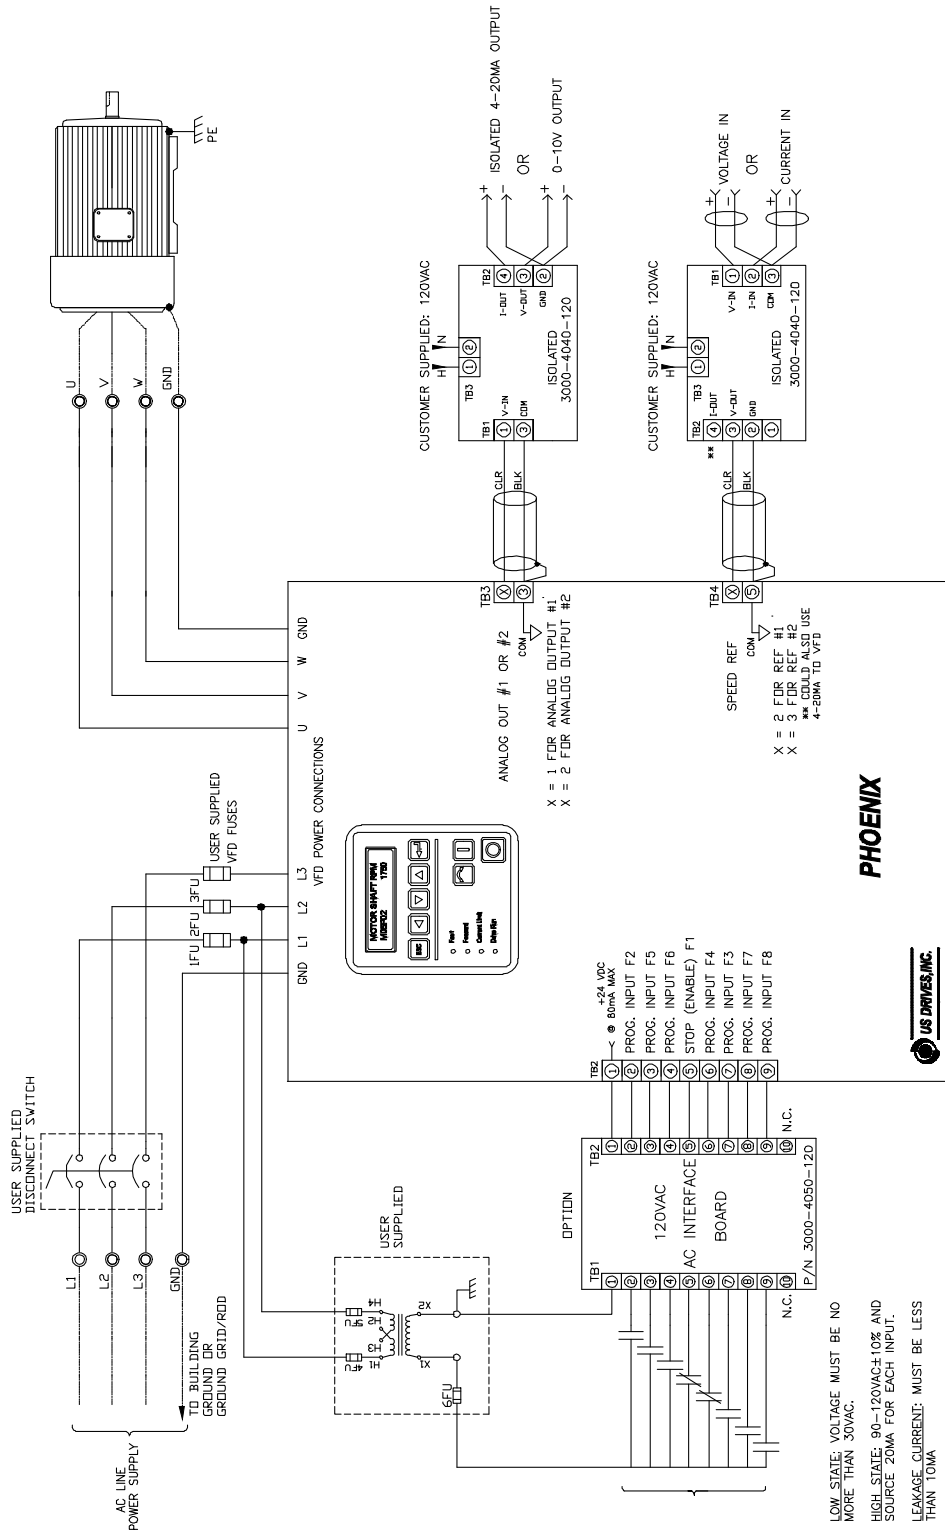


Isolated Communication Card P/N: 3000-4135 with Jumper on Position 1 (1 of 3)


PHOENIX DX TO LAPTOP PC RS232 CONNECTION

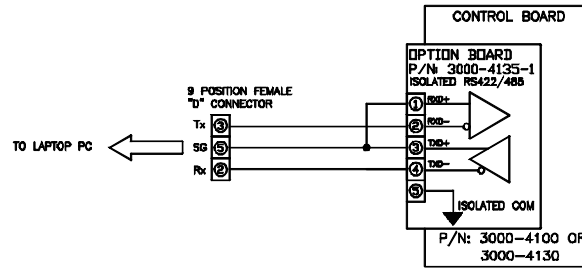

PHOENIX DX TO COMPUTER: RS422 CONNECTION

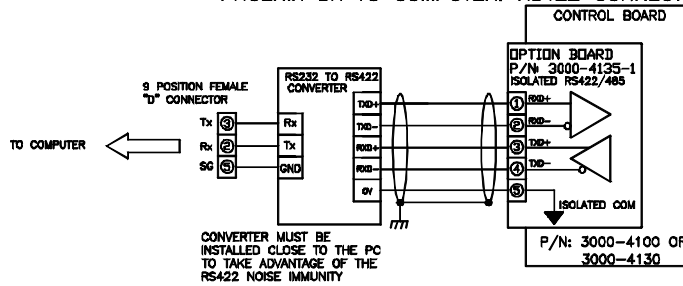


PHOENIX DX TO COMPUTER: RS485 4-WIRE PARTY-LINE CONNECTION

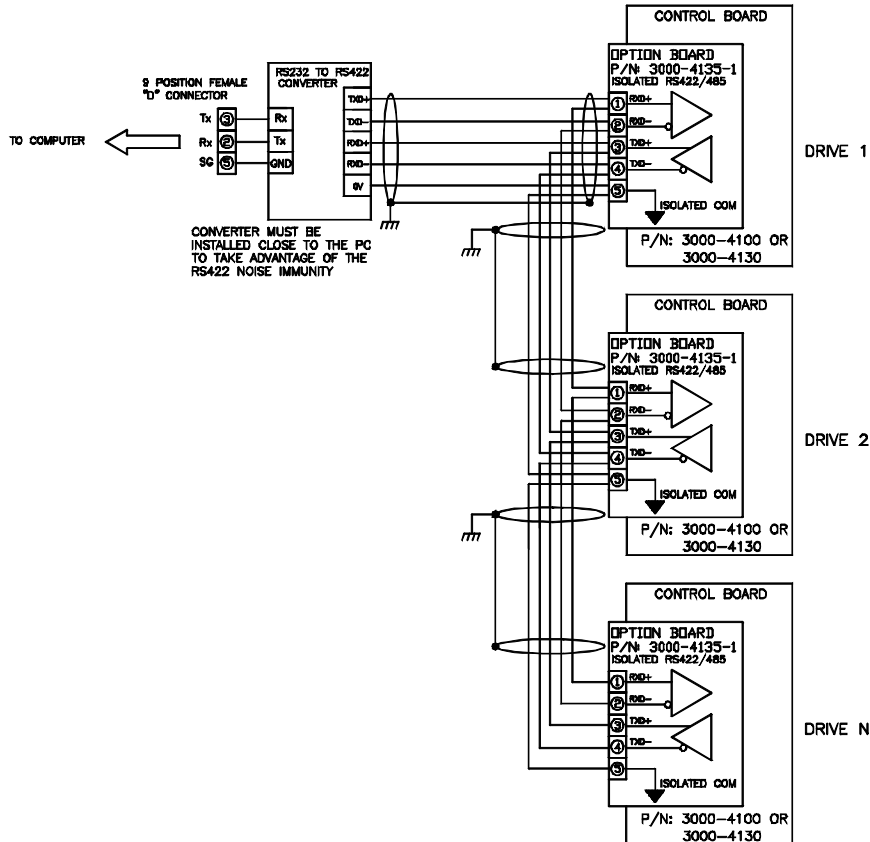


Isolated Communication Card P/N: 3000-4135 with Jumper on Position 2 (2 of 3)


PHOENIX DX TO COMPUTER: RS485 CONNECTION

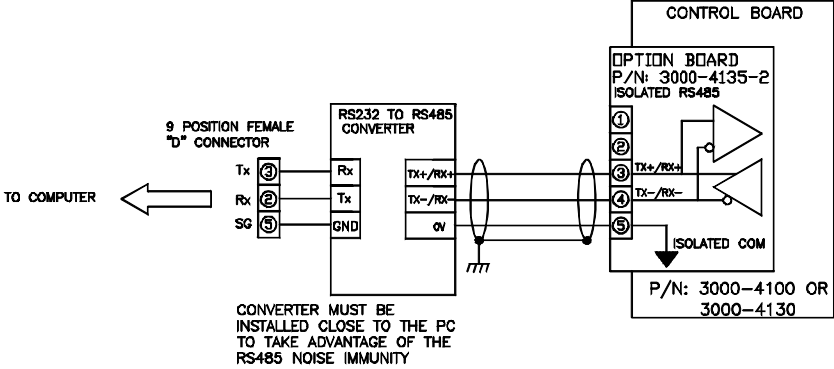

PHOENIX DX TO COMPUTER: RS485 2-WIRE PARTY-LINE CONNECTION

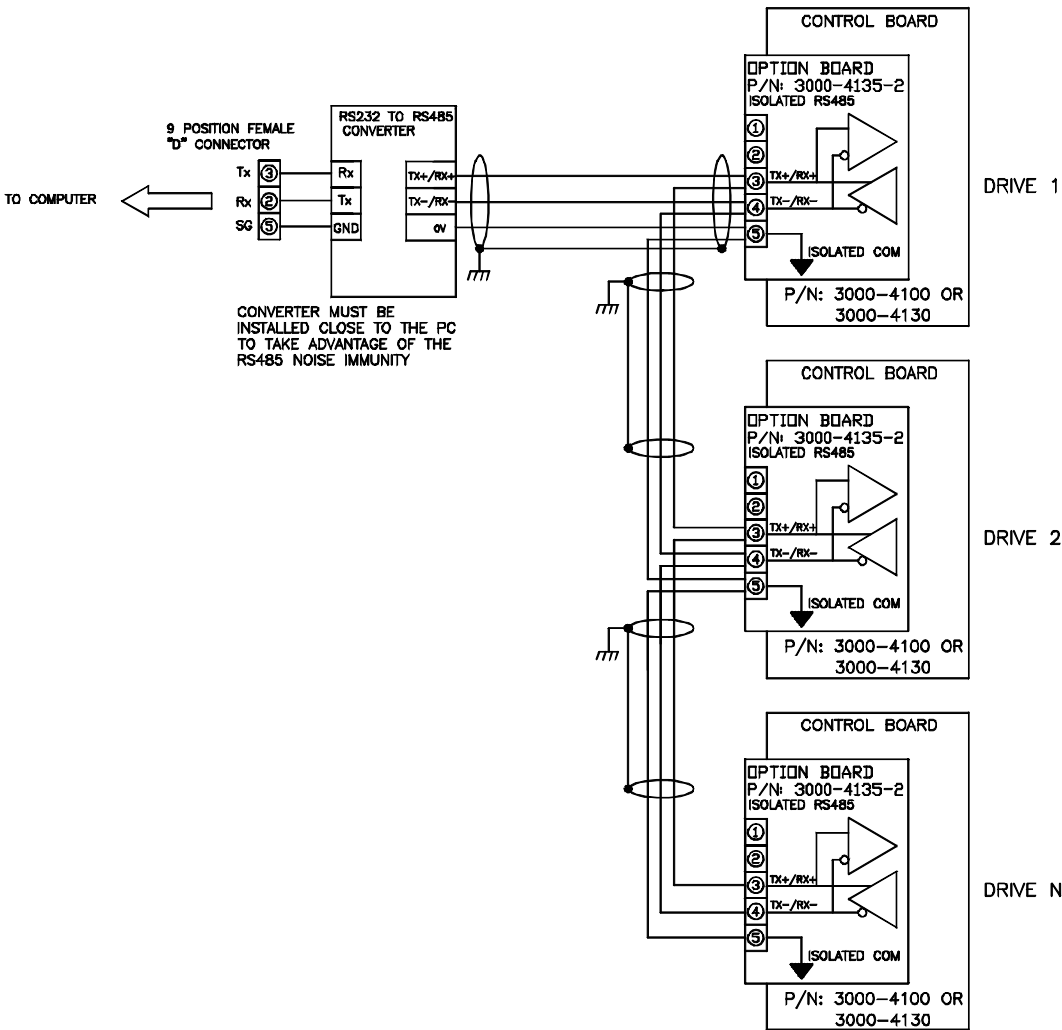


Isolated Communication Card P/N: 3000-4135 (3 of 3)

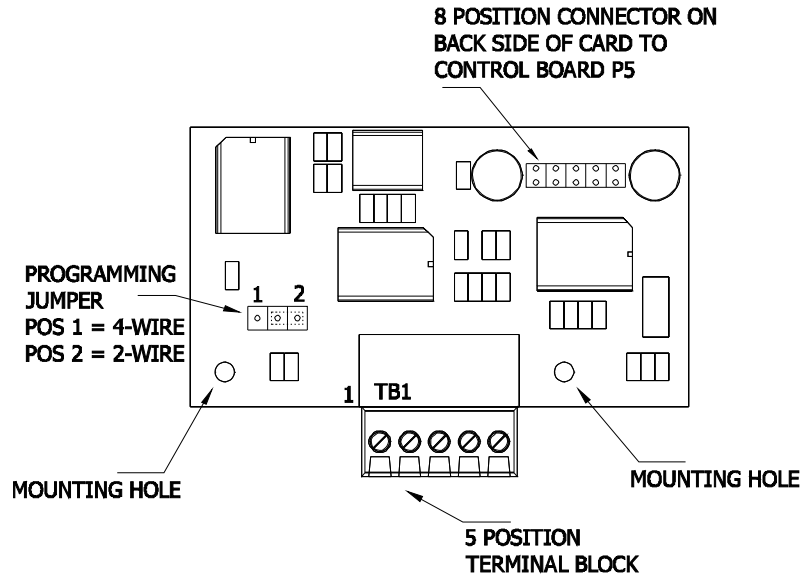


TB1 CONNECTION DATA:

MAXIMUM TORQUE: 2.2 Lb-in [0.25 N-m]
 WIRE SIZE: 26-16 AWG [0.14 - 1 mm]

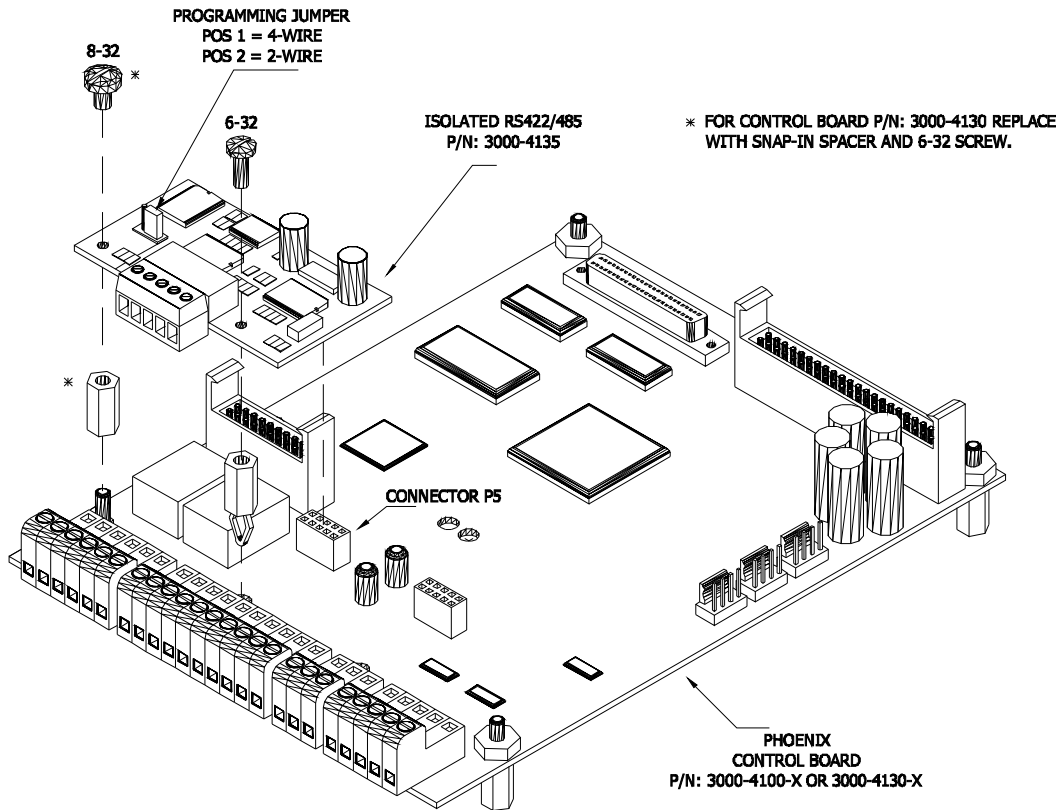

Mounting Diagram

Removable USB/RS-485 Isolated Communications Interface with Cable
P/N: 3000-4226-USB

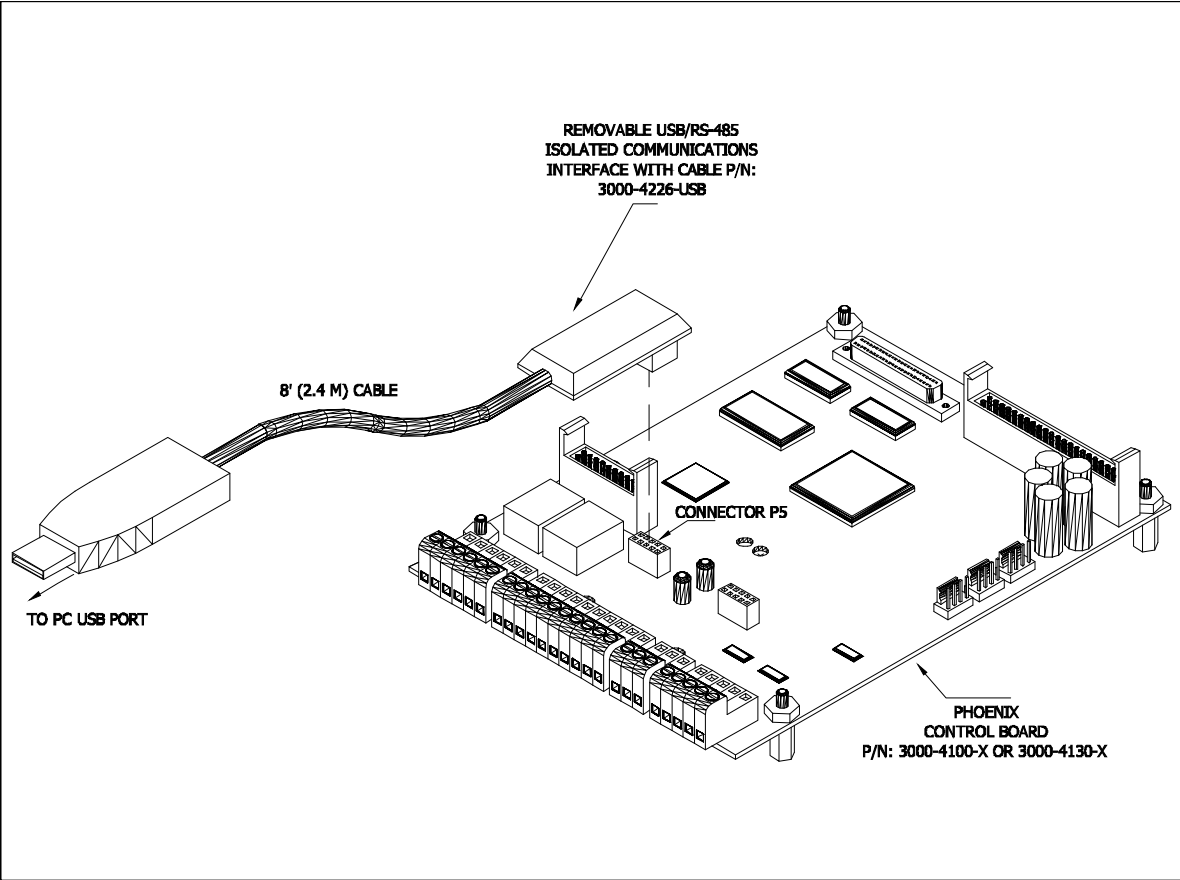

Mounting Diagram

I/O Expansion Board 3000-4150 (1 of 2)

Phoenix DX and Phoenix EX AC Drives include 8 Digital Inputs, 2 Digital Outputs, 2 Analog Inputs, and 2 Analog Outputs as standard. If additional Inputs and Outputs are required, the Phoenix DX/EX I/O Expansion Board may be added. With the addition of the Phoenix DX/EX I/O Expansion Board, the drive can support up to 8 Digital Inputs, 7 Digital Outputs, 3 Analog Inputs, and 3 Analog Outputs.

The Phoenix DX/EX I/O Expansion Board is fully configurable. You may add up to 5 Digital Outputs, 1 Analog Input, and 1 Analog Output. Catalog Numbering is as follows:

Part Numbering:

3000-4150 - AI - AO - D5

Analog Input


AI = Installed
= Not Installed

Analog Output

AO = Installed
= Not Installed


Digital Outputs

D1 = 1 Installed
D2 = 2 Installed
D3 = 3 Installed
D4 = 4 Installed
D5 = 5 Installed
= None Installed

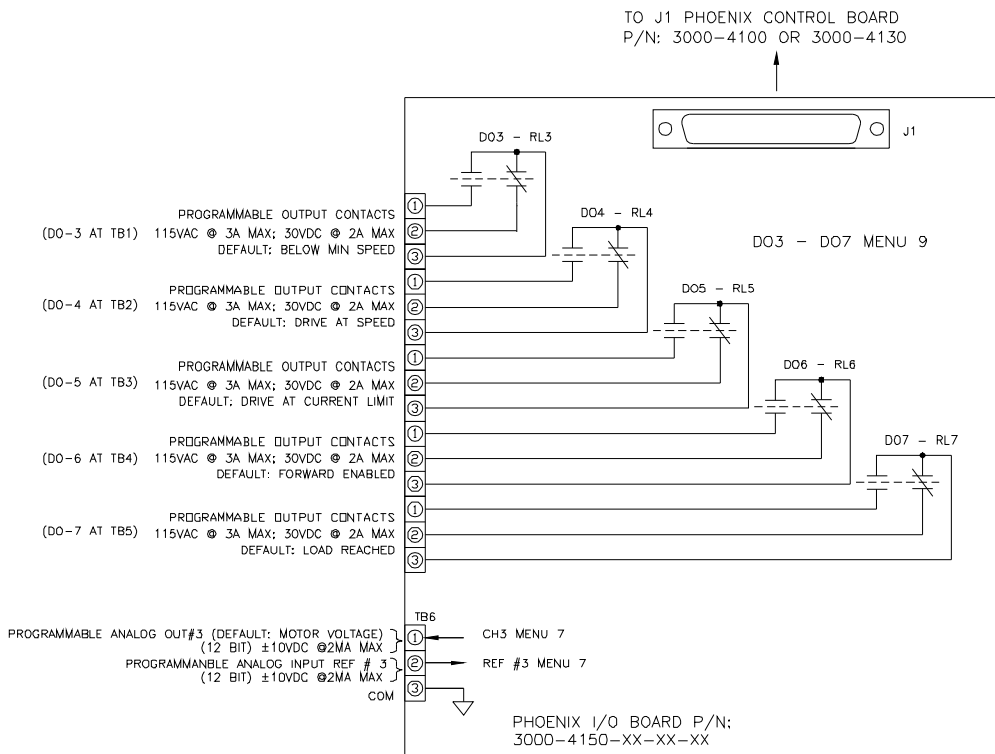


I/O Expansion Board 3000-4150 (2 of 2)

CONNECTOR ON BACK SIDE OF CARD
TO CONTROL BOARD J1.

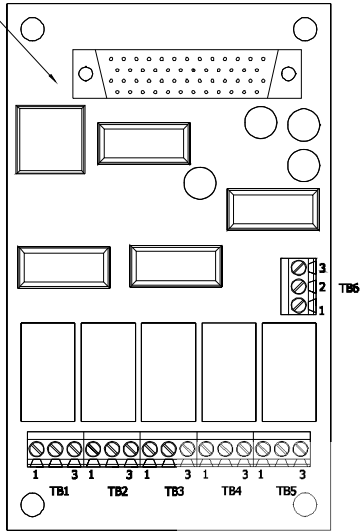

TB1-TB6 CONNECTION DATA:

MAXIMUM TORQUE: 2.2 Lb-in [0.25 N-m]
WIRE SIZE: 26-16 AWG [0.14 - 1 mm]

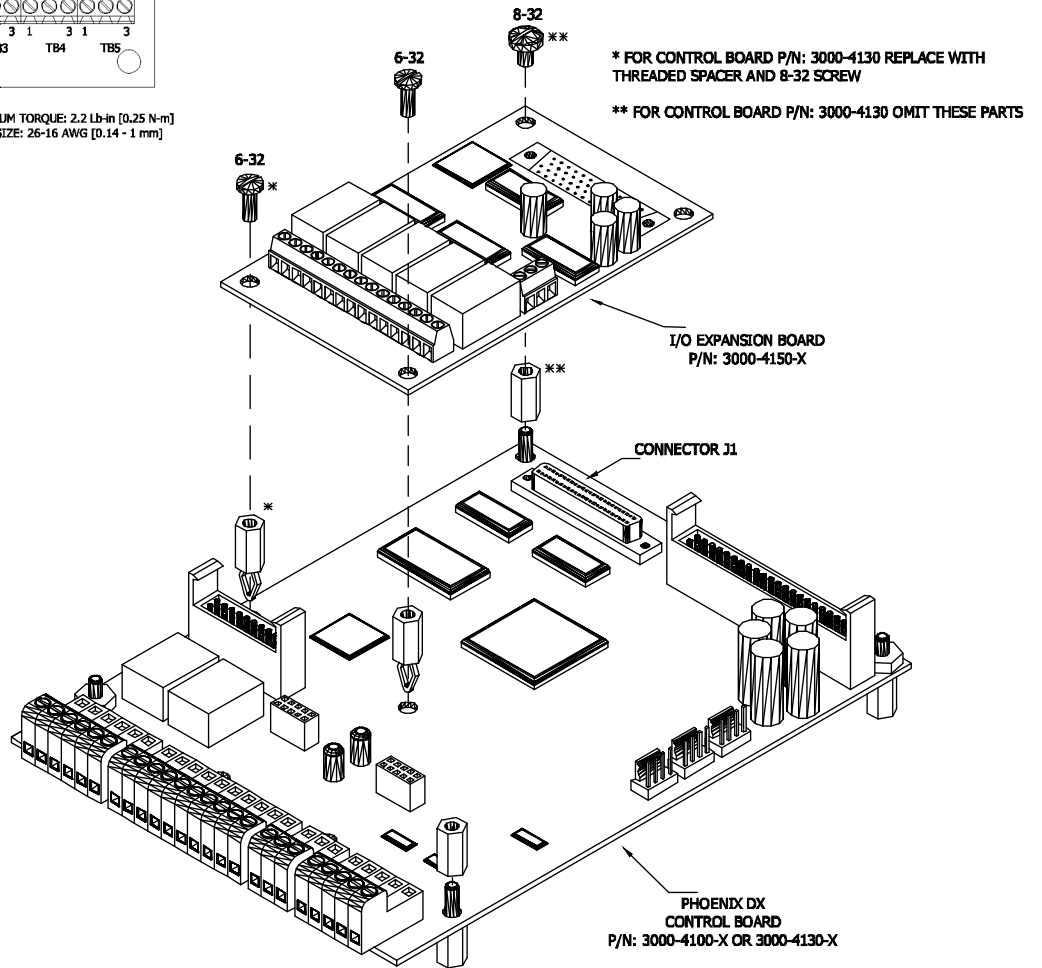

Mounting Diagram

THIS PAGE INTENTIONALLY LEFT BLANK

POWER CIRCUIT TEST

WARNING: To avoid a hazard of electric shock, after the input and control power is removed from the drive and the ROM display is no longer lit, wait five (5) minutes for DC bus capacitors to fully discharge before opening the drive. Verify that the voltage on the DC bus capacitors has discharged by measure the DC bus voltage at the +DC & -DC terminal of the drive. The voltage must be zero.

CAUTION: This drive contains ESD (Electrostatic Discharge) sensitive parts and assemblies. Static control precautions are required when installing, testing, servicing or repairing this assembly. Component damage may result if ESD control procedures are not followed.

PHOENIX POWER CIRCUIT TEST TABLE

WARNING

To avoid a hazard of electric shock, after the input and control power is removed from the drive and the ROM display is no longer lit, wait five (5) minutes for DC bus capacitors to fully discharge before opening the drive to make this test. Verify that the voltage on the DC bus capacitors has discharged by measuring the DC bus voltage at the +DC & -DC terminals of the drive. The voltage must be zero.

Fuse Check :

Check all fuses. Do not replace any fuse before performing the following checks. Please note if an on-board fuse (soldered to the control or power board) is open do not attempt to replace it. An open on-board fuse indicates a damaged board.

Visual Check:

Check all fuses, boards, wire harnesses, connectors, bus bars and enclosure walls for discoloration & damage of components.

Ohmic Check

Size 0:

Check D7 through D18 for shorts using meter set for diode check. These diodes are located on inverter board (lower board). To access these diodes remove only bottom endplate (2.5"x8.75") held by two screws only. In the same area also check for burnt or discolored resistors R19 to R30.

Size 1, 2 & 3:

Check IGBT personality boards P/N: 3000-2020, 3000-2025, 3000-2030, 2085 for the following:

- Burnt or discolored resistors R1, R2, & R3 (6 sets per drive)
- Shorted D1 & D2 using meter set for diode check (6 sets per drive).

These personality boards are either soldered or screwed on the IGBT's (power transistors).

Size 0 Through 3

+ Lead	- Lead	Meter setting	Reading	
L1	L2	20k ohms	OL	
L2	L3	20k ohms	OL	
L1	L3	20k ohms	OL	
U	V	200K ohms	10-30K Ω	
V	W	200K ohms	10-30K Ω	
W	U	200K ohms	10-30K Ω	
DC +	DC -	DIODE	Charge to OL	
DC -	DC +	DIODE	0.5V-0.8V	
L1, L2, L3	DC +	DIODE	OL, OL, 0.5V-0.8V (with SCR precharge)	
L1, L2, L3	DC +	DIODE	0.5V-0.8V (with Contactor precharge)	
DC +	L1, L2, L3	DIODE	Charge to OL	
DC -	L1, L2, L3	DIODE	0.5V	
L1, L2, L3	DC -	DIODE	Charge to OL	
L1, L2, L3, DC+	GND	200k ohms	OL	
DC -, U, V, W	GND	200k ohms	OL	
DC-	U, V, W	DIODE	0.3V-0.5V	
U, V, W	DC+	DIODE	0.3V-0.5V	

Size 0 DC+ and DC- are on connector P11 (Vc+ & Vc-) top board (4000-4130).

For Size 2 Drive:

U, V, W	- Right side of bus fuse	DIODE	0.3V-0.5V	
Left side of bus fuse	- Right side of bus fuse	20K	0.002-0.005K Ω	

Bus fuse located at bottom of enclosure.

For Size 3 Drive:

Top of bus fuse	U, V, W	DIODE	0.3V-0.5V	
Top of bus fuse	- Bottom of bus fuse	20K	0.002-0.005K Ω	

WARRANTY

US Drives, Inc. warrants the equipment described in this manual for thirty-six (36) months from the day of purchase, not to exceed forty (40) months from date of manufacture. US Drives further warrants that such goods are free of defects in materials and workmanship.

If the goods fail to perform to US Drives published specifications, then the Buyer must contact US Drives to obtain a Return Material Authorization (RMA), prepare the goods for shipment, and return the goods to US Drives for repair or replacement at US Drives Option. The buyer will bear all costs of transportation to and from US Drives factory, risk of loss for goods not at US Drives factory, and any cost required to remove or prepare the goods for shipment to US Drives factory and to reinstall equipment subsequent to repair.

In no event and under no circumstances shall the manufacturer be liable for: (a) damages and failures due to improper use or installation; (b) damage in shipment; (c) damage to abnormal conditions of temperature, dust, or corrosives, or failures due to operation above rated capacities, whether intentional or unintentional; (d) non-authorized service, repair, modification, transportation or installation. Nor shall the manufacturer ever be liable for consequential or incidental damages including any lost profits or lost savings.

There are no other warranties, expressed or implied, which extend beyond that described herein. The warranty set forth is exclusive and no other warranty, whether written or oral, is expressed or implied. US Drives specifically disclaims the implied warranties of merchantability and fitness for a particular purpose.

The warranty is effective only if a written notification of any claim under this warranty is received by US Drives at the address indicated below within thirty (30) days of recognition of defect by buyer.

US Drives reserves the right to make changes and improvements in its goods without incurring any obligation to similarly alter goods previously purchased. US Drives neither assumes nor authorizes any representative or any other person to assume for US Drives any other liability in connection with the sale or any shipment of its goods.

US DRIVES INC.
2221 Niagara Falls Boulevard
P.O. Box 281
Niagara Falls, NY 14304-0281
Tel: (716) 731-1606 Fax: (716) 731-1524

Visit us at www.usdrivesinc.com

"THE HIGH HORSEPOWER DESIGN EXPERTS"

**US Drives Inc.
2221 Niagara Falls Boulevard
P.O. Box 281
Niagara Falls, NY 14304-0281
Tel: (716) 731-1606 Fax: (716) 731-1524
Visit us at www.usdrivesinc.com**

Products Designed And Manufactured
In The United States Of America



DXIM/0118 Printed in U.S.A.